


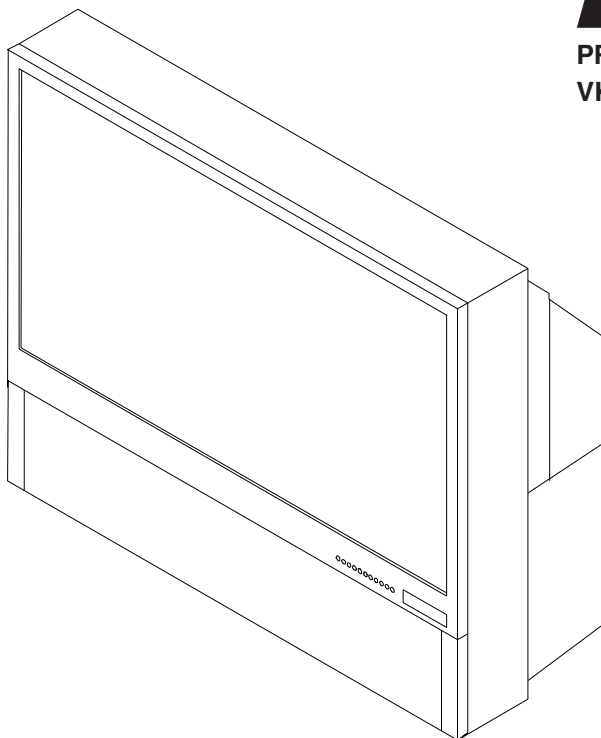

Service Manual

PROJECTION TELEVISION

VK20 CHASSIS

**WT-42311****WT-A42****CAUTION:**

Before servicing this chassis, it is important that the service person read the "SAFETY PRECAUTIONS" and "PRODUCT SAFETY NOTICE" contained in this manual.

SPECIFICATIONS

- | | | | |
|-----------------------------|---------------------------------------|-----------------------|--|
| • Power | : AC 120V, 60Hz
240W | • Speaker | : Two 5" round, full range (8Ω 5W) |
| • Frequency Range | : VHF 54 ~ 470MHz
UHF 470 ~ 806MHz | • Input Level | : VIDEO IN JACK (RCA Type)
1.0Vp-p 75Ω unbalanced
: AUDIO IN JACK (RCA Type)
-4.7dBm 43kΩ unbalanced
: S-VIDEO IN JACK (Y/C separate)
Y=1.0 Vp-p C=0.286Vp-p(BURST)
75Ω unbalanced
: COMP / Y, Cr, Cb (RCA Type)
Y=1.0 Vp-p. Cr, Cb=700mVp-p
: ATV / Y(G), Pr(R), Pb(B), H, V
Y 1.0Vp-p with sync 75Ω (RCA Type)
Pr, Pb: 700mV 75Ω
H, V: 3.0Vp-p 75Ω |
| • Antenna Input | : VHF/UHF 75Ω unbalanced | • Output Level | : VIDEO OUT JACK (RCA Type)
1.0Vp-p 75Ω unbalanced
: AUDIO OUT JACK (RCA Type)
-4.7dBm 4.7kΩ unbalanced |
| • CRT Size | : [7 inches] | | |
| • High Voltage | : 32.0kV (at 0A) | | |
| • Cabinet Dimensions | : 39"(W)x34"(H)x25"(D) | | |
| • Weight | : 105 lbs | | |

- Weight and dimensions shown are approximate.
- Design specifications are subject to change without notice.

mitsubishi Digital Electronics America, Inc.

9351 Jeronimo Road, Irvine, CA 92618-1904

Copyright © 2002 Mitsubishi Digital Electronics America, Inc.


All Rights Reserved



Service Manual

PROJECTION TELEVISION

VK20 CHASSIS

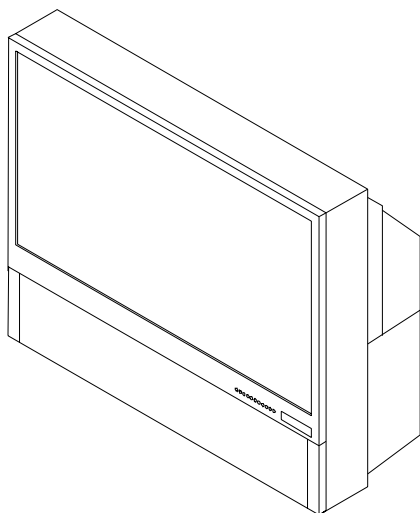

WT-42311

WT-A42

CAUTION:

Before servicing this chassis, it is important that the service person read the "SAFETY PRECAUTIONS" and "PRODUCT SAFETY NOTICE" in Part 1 of this manual.

PART 2 SCHEMATIC DIAGRAMS

CONTENTS**Page****Schematic Diagrams**


Overall PCB Block Diagram	1
PCB-MAIN	2
PCB-POWER	3
PCB-TERMINAL (Input Switch)	4
PCB-TERMINAL (3DYC / Decoders)	5
PCB-SIGNAL-1 (AV I/O)	6
PCB-SIGNAL-2 (MICRO)	7
PCB-SIGNAL-3 (VCJ)	8
PCB-SIGNAL-4 (Convergence Generator)	9
PCBs - CONTROL / CRTs / DBF / PREAMP / SVM / UNI	10
PCB-DOUBLER-1 (Input)	11
PCB-DOUBLER-2 (Main)	12
PCB-DOUBLER-3 (Output)	13

MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC.

9351 Jeronimo Road, Irvine, CA 92618-1904

Copyright © 2002 Mitsubishi Digital Electronics America, Inc.

All Rights Reserved

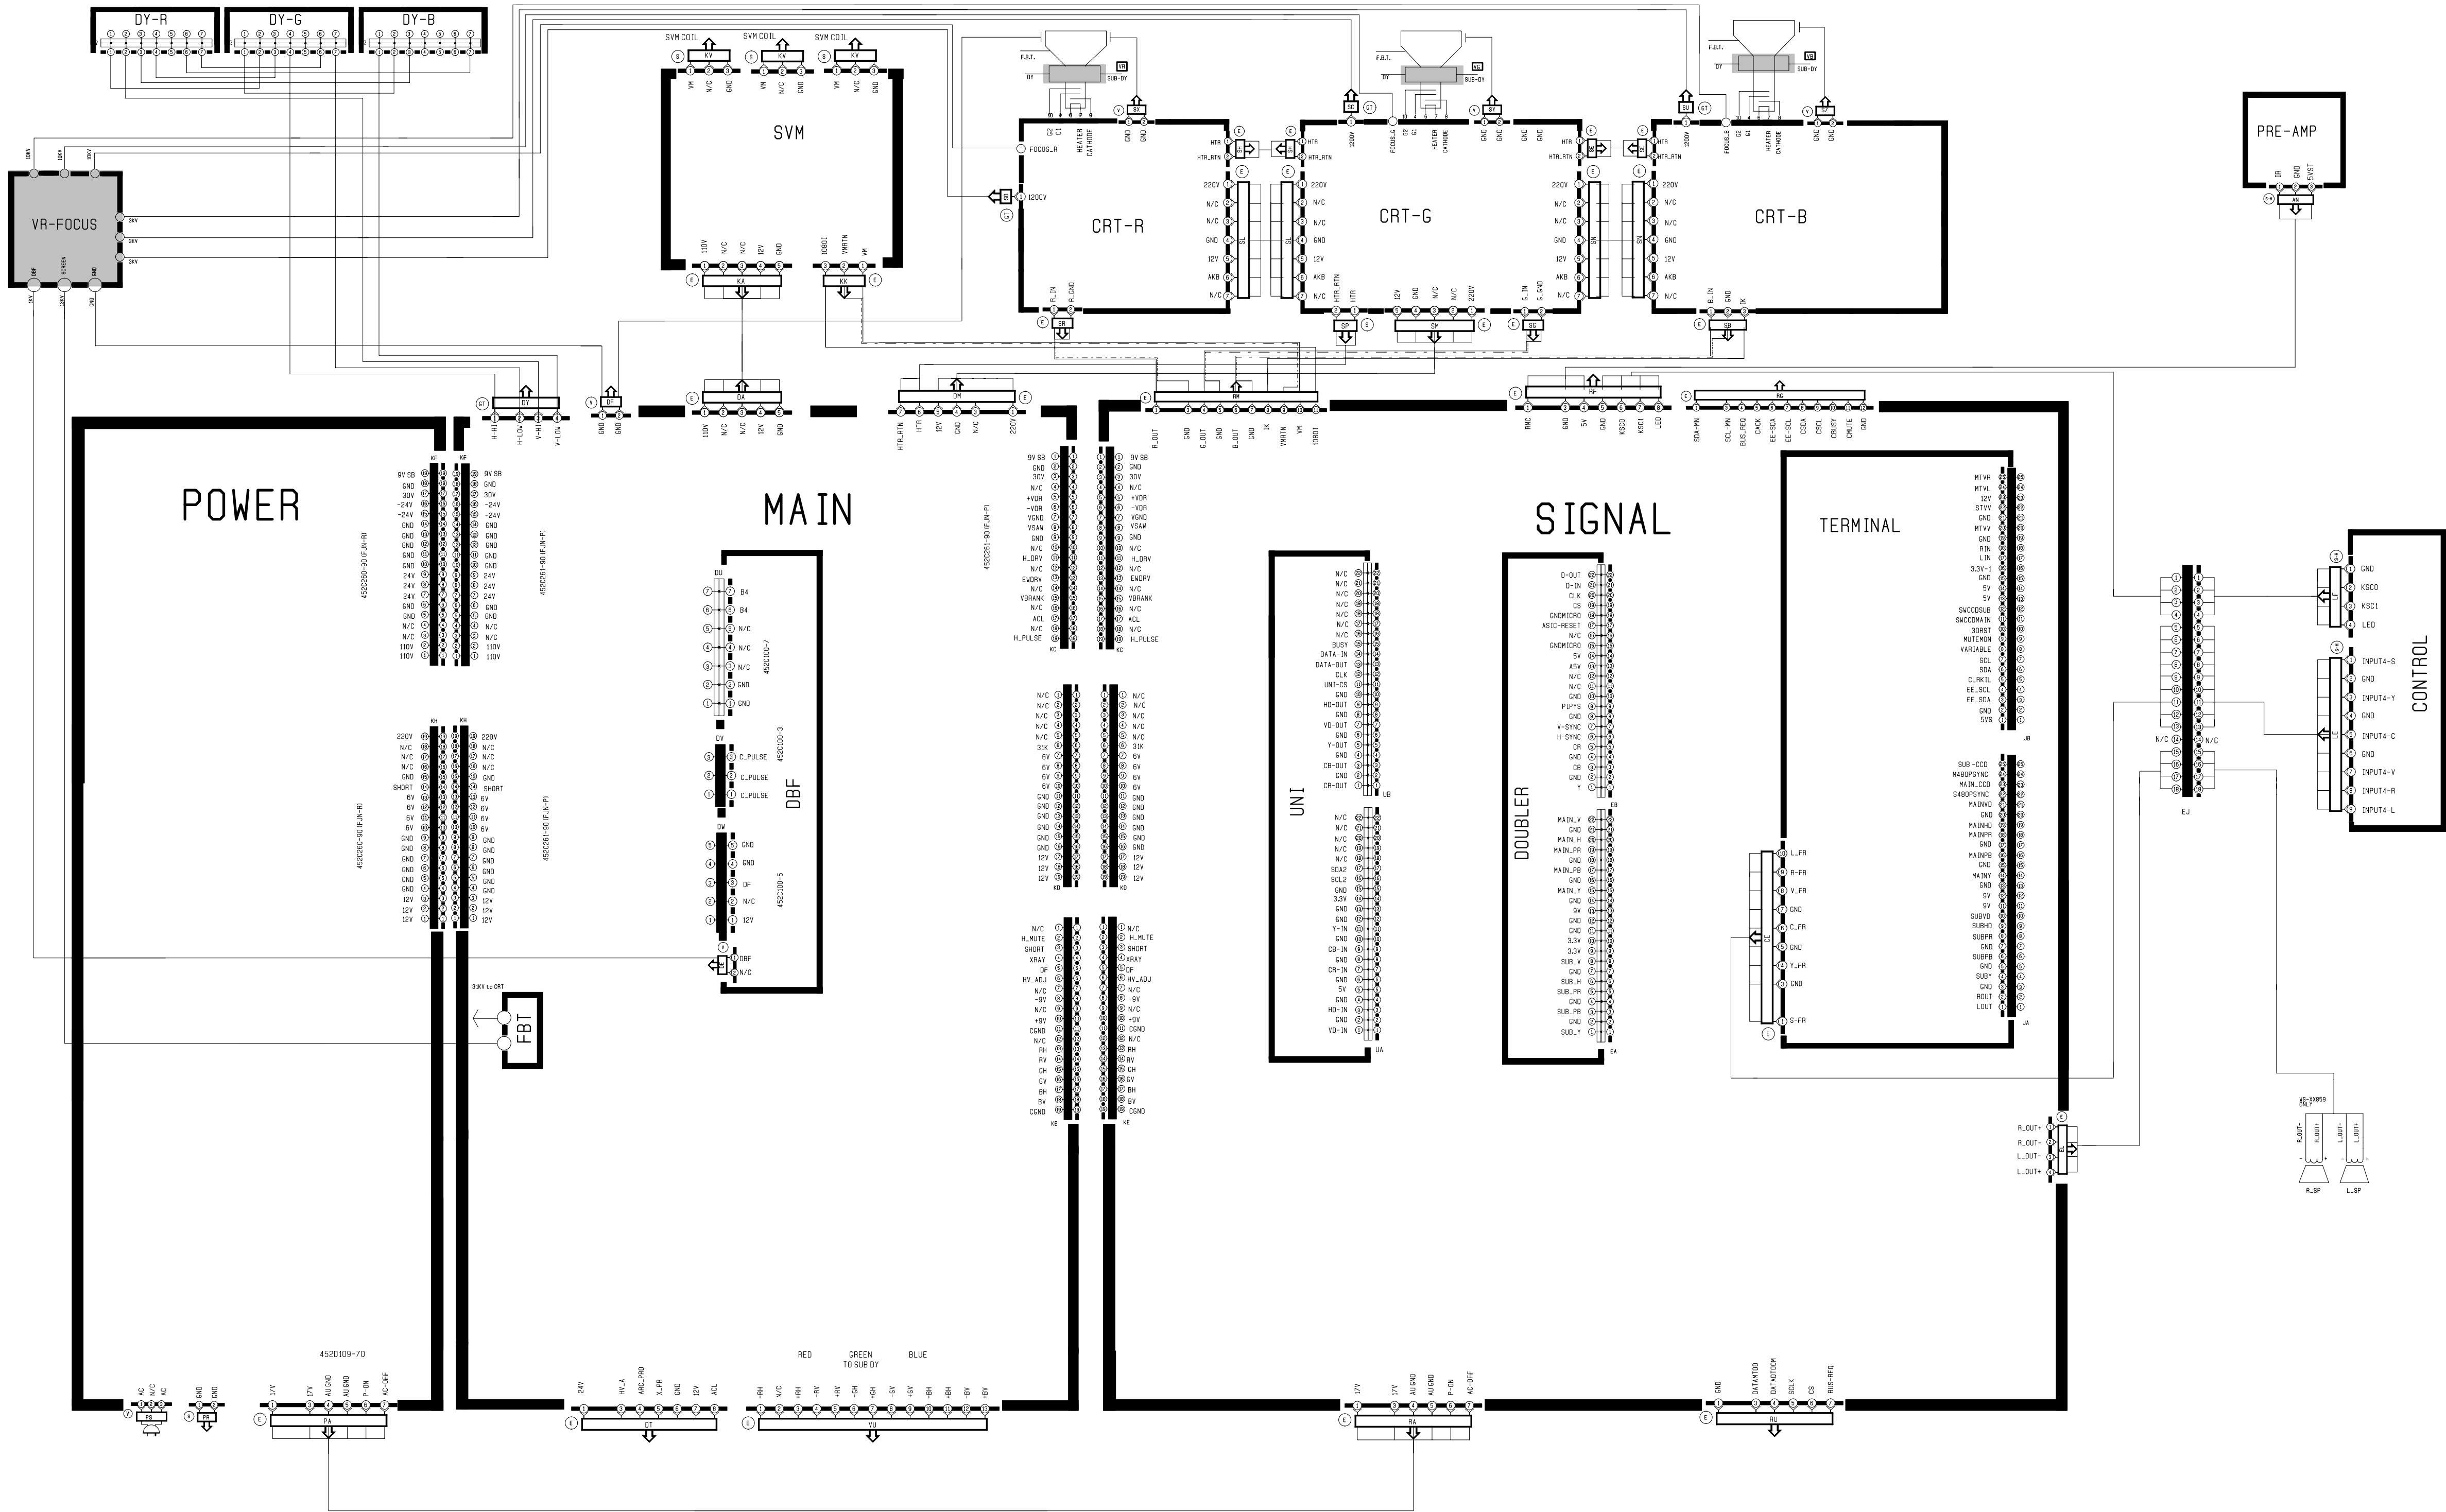

NOTES

- DC voltages were measured from points indicated to the circuit ground with a high-Z voltmeter.
- Waveforms were taken with standard color bar signal
- TP13, etc. show Test Points
- CAPACITORS

Value	Not indicated	PF, for numbers more than 1 μF, for numbers less than 1			
Dielectric Strength	Not indicated ±50V				
Tolerance	Not indicated ±10% No tolerance is indicated for electrolytic capacitors and ±20% G = ±2% J = ±5% K = ±10% M = ±20% P = +100% -0% Z = +80% Q = +30% -10% T = +200% -0% C = ±0.25PF D = ±0.5PF F = ±1PF O = ±2PF				
Type	I except for chips	Not indicated Ⓢ Ceramic capacitor Ⓟ Polyester capacitor Ⓜ Aluminum electrolytic capacitor Ⓣ Twin film capacitor Ⓢ Semiconductor Ceramic capacitor Ⓢ Metalized paper Ⓢ Metalized plastic film capacitor Ⓢ Metalized polyester capacitor Ⓢ Polyester polypropylene film capacitor Ⓢ Styrol capacitor Ⓢ Tantalum capacitor Ⓢ Electrolytic capacitor Ⓢ Non polarized electrolytic capacitor			
	II Chips	Not indicated Ⓢ Ceramic capacitor chip Ⓢ Electrolytic capacitor Ⓢ Non polarized electrolytic capacitor chip			
Characteristic (only ceramic capacitor)	Not indicated CH, SL, etc. Ⓢ F or B (high dielectric percentage) Ⓢ Temperature compensating types				

5. RESISTORS

Value	Not indicated ± 0hm K = 1,000 Ohm M = 1,000,000 Ohm	
Wattage	Parts except for chips	Not indicated = 1/4W or 1/8W
	Chips	Not indicated = 1/8W
Tolerance	Not indicated D = ±0.5% F = ±1% J = ±5% K = ±10%	
Type	I except for chips	Not indicated Ⓢ Carbon resistor Ⓢ Fixed composition resistor Ⓢ Metal oxide film resistor (type B) Ⓢ Cemented resistor Ⓢ Wire wound resistor Ⓢ Metal film resistor Ⓢ Metal plate cement resistor Ⓢ Metal liner resistor
	II Chip	Not indicated Ⓢ Chip resistor

6. This is a basic schematic diagram. Some sets may be subject to modification according to engineering improvement.

SHADED COMPONENTS HAVE SPECIAL CHARACTERISTICS IMPORTANT TO SAFETY. BEFORE REPLACING ANY OF THESE COMPONENTS READ CAREFULLY THE PRODUCT SAFETY NOTICE IN THE SERVICE MANUAL. DON'T DEGRADE THE SAFETY OF THE RECEIVERS THROUGH IMPROPER SERVICING.

SERVICE TECHNICIAN WARNING:
X-RADIATION PRECAUTION
THIS PRODUCT INCLUDES CRITICAL ELECTRICAL AND MECHANICAL PARTS ESSENTIAL FOR X-RADIATION PROTECTION.
TO AVOID POSSIBLE EXPOSURE TO X-RADIATION TAKE X-RADIATION PROTECTIVE MEASURES FOR PERSONNEL DURING SERVICING.
SEE SERVICE INSTRUCTIONS FOR SPECIFIED REPLACEMENT PARTS AND SERVICE ADJUSTMENTS.

CONTENTS	MODEL
PG.1... BLOCK DIAGRAM	WT-42311
PG.2... MAIN	WT-A42
PG.3... POWER	
PG.4... TERMINAL-1 (INPUT SW)	
PG.5... TERMINAL-2 (VIDEO)	
PG.6... SIGNAL-1 (AV I/O)	
PG.7... SIGNAL-2 (MICRO)	
PG.8... SIGNAL-3 (VIDEO/CHROMA)	
PG.9... SIGNAL-4 (COMB GEN)	
PG.10... CRT/CONTROL/FRONT/PREAMP	
PG.11... DOUBLER-1 (SW)	
PG.12... DOUBLER-2 (MAIN)	
PG.13... DOUBLER-3 (OUT)	

A

B

C

D

E

F



G

H

I

J

K

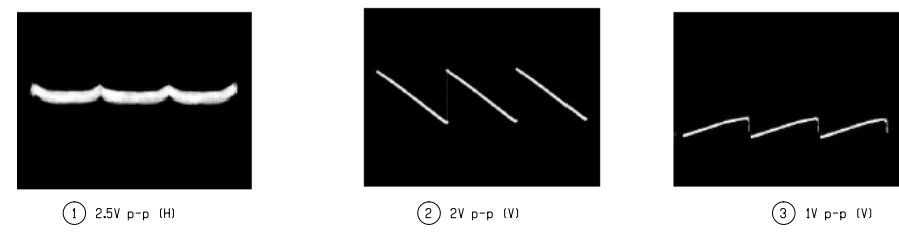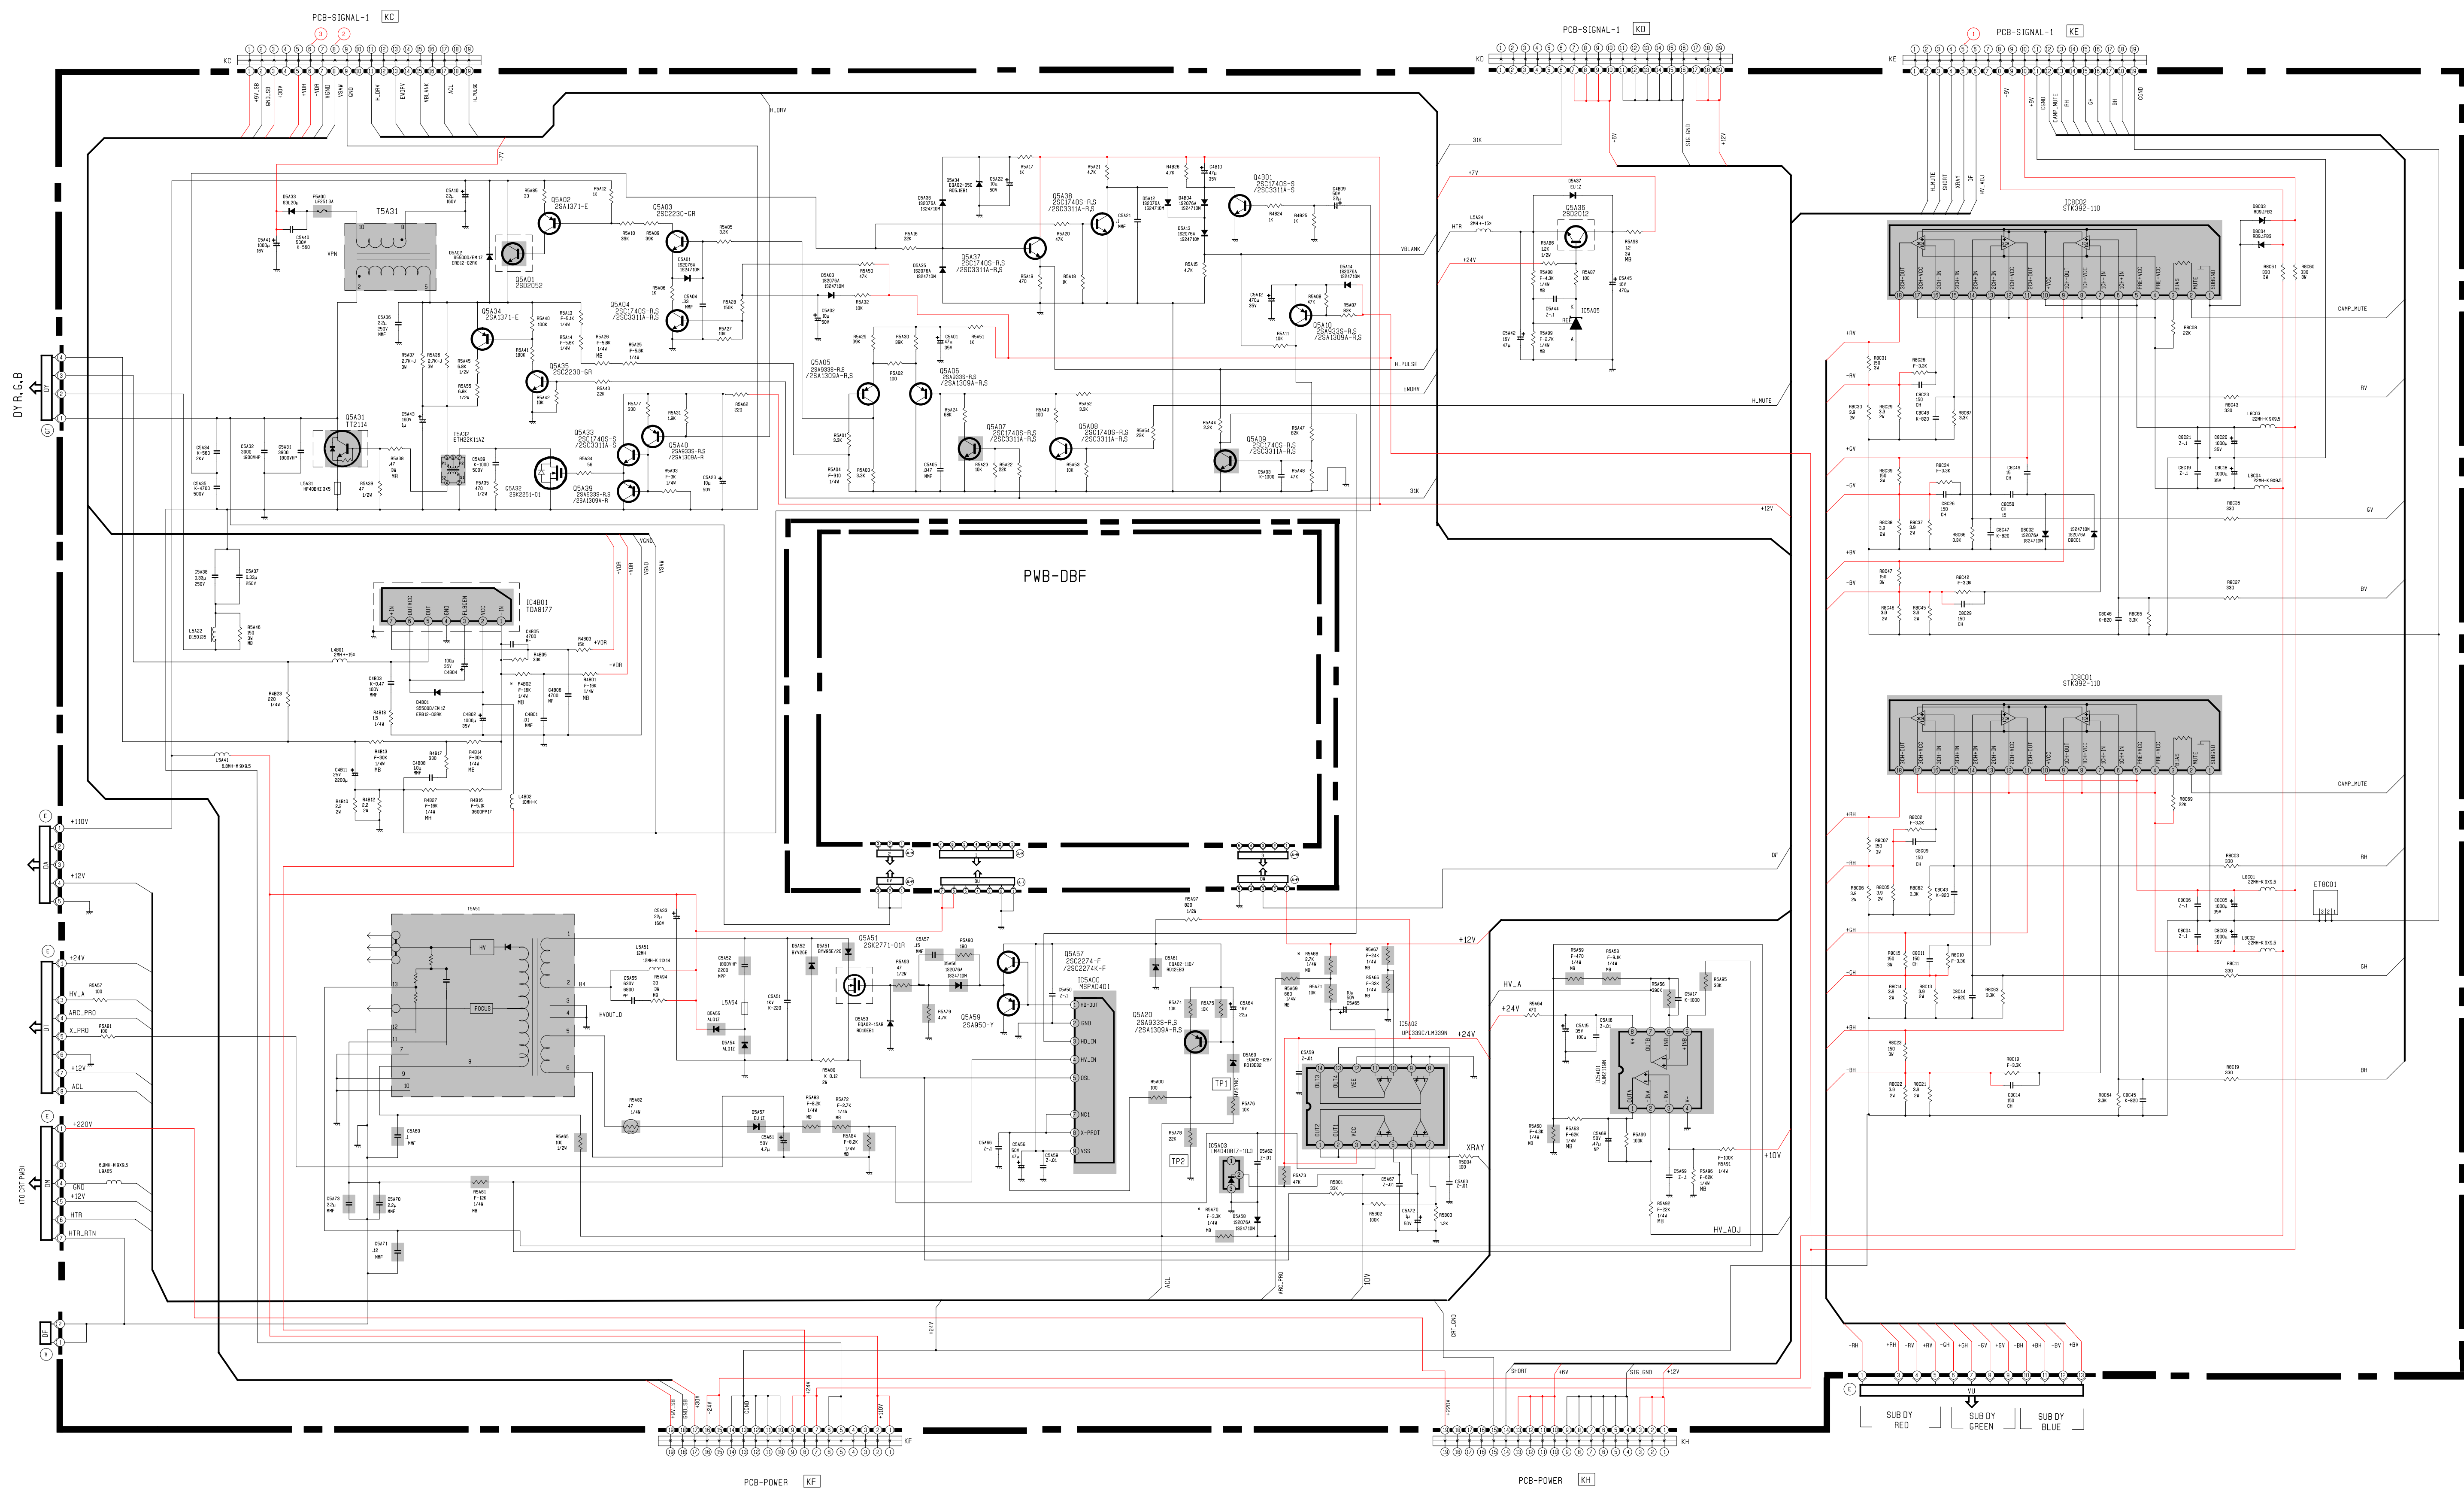

1 22V p-p (H)

2 2V p-p (H)

3 1V p-p (H)

CONTENTS	
PG.1...	BLOCK DIAGRAM
PG.2...	MAIN POWER
PG.3...	TERMINAL-1 (INPUT SW)
PG.4...	TERMINAL-2 (30V)
PG.5...	SIGNAL-1 (AV 1/0)
PG.6...	SIGNAL-2 (MICRO)
PG.7...	SIGNAL-3 (VIDEO/CHROMA)
PG.8...	SIGNAL-4 (CONV GEN)
PG.9...	CRT/CONTROL/FRONT/PREAMP
PG.10...	DOUBLER-1 (IN)
PG.11...	DOUBLER-2 (MAIN)
PG.12...	DOUBLER-3 (OUT)

MODEL
WT-42311
WT-A42

*****Masked***** (PAGE 2) ** This is printed in BLACK ink *****Masked*****

A

B

C

D

E

F



6

H

1

J

K

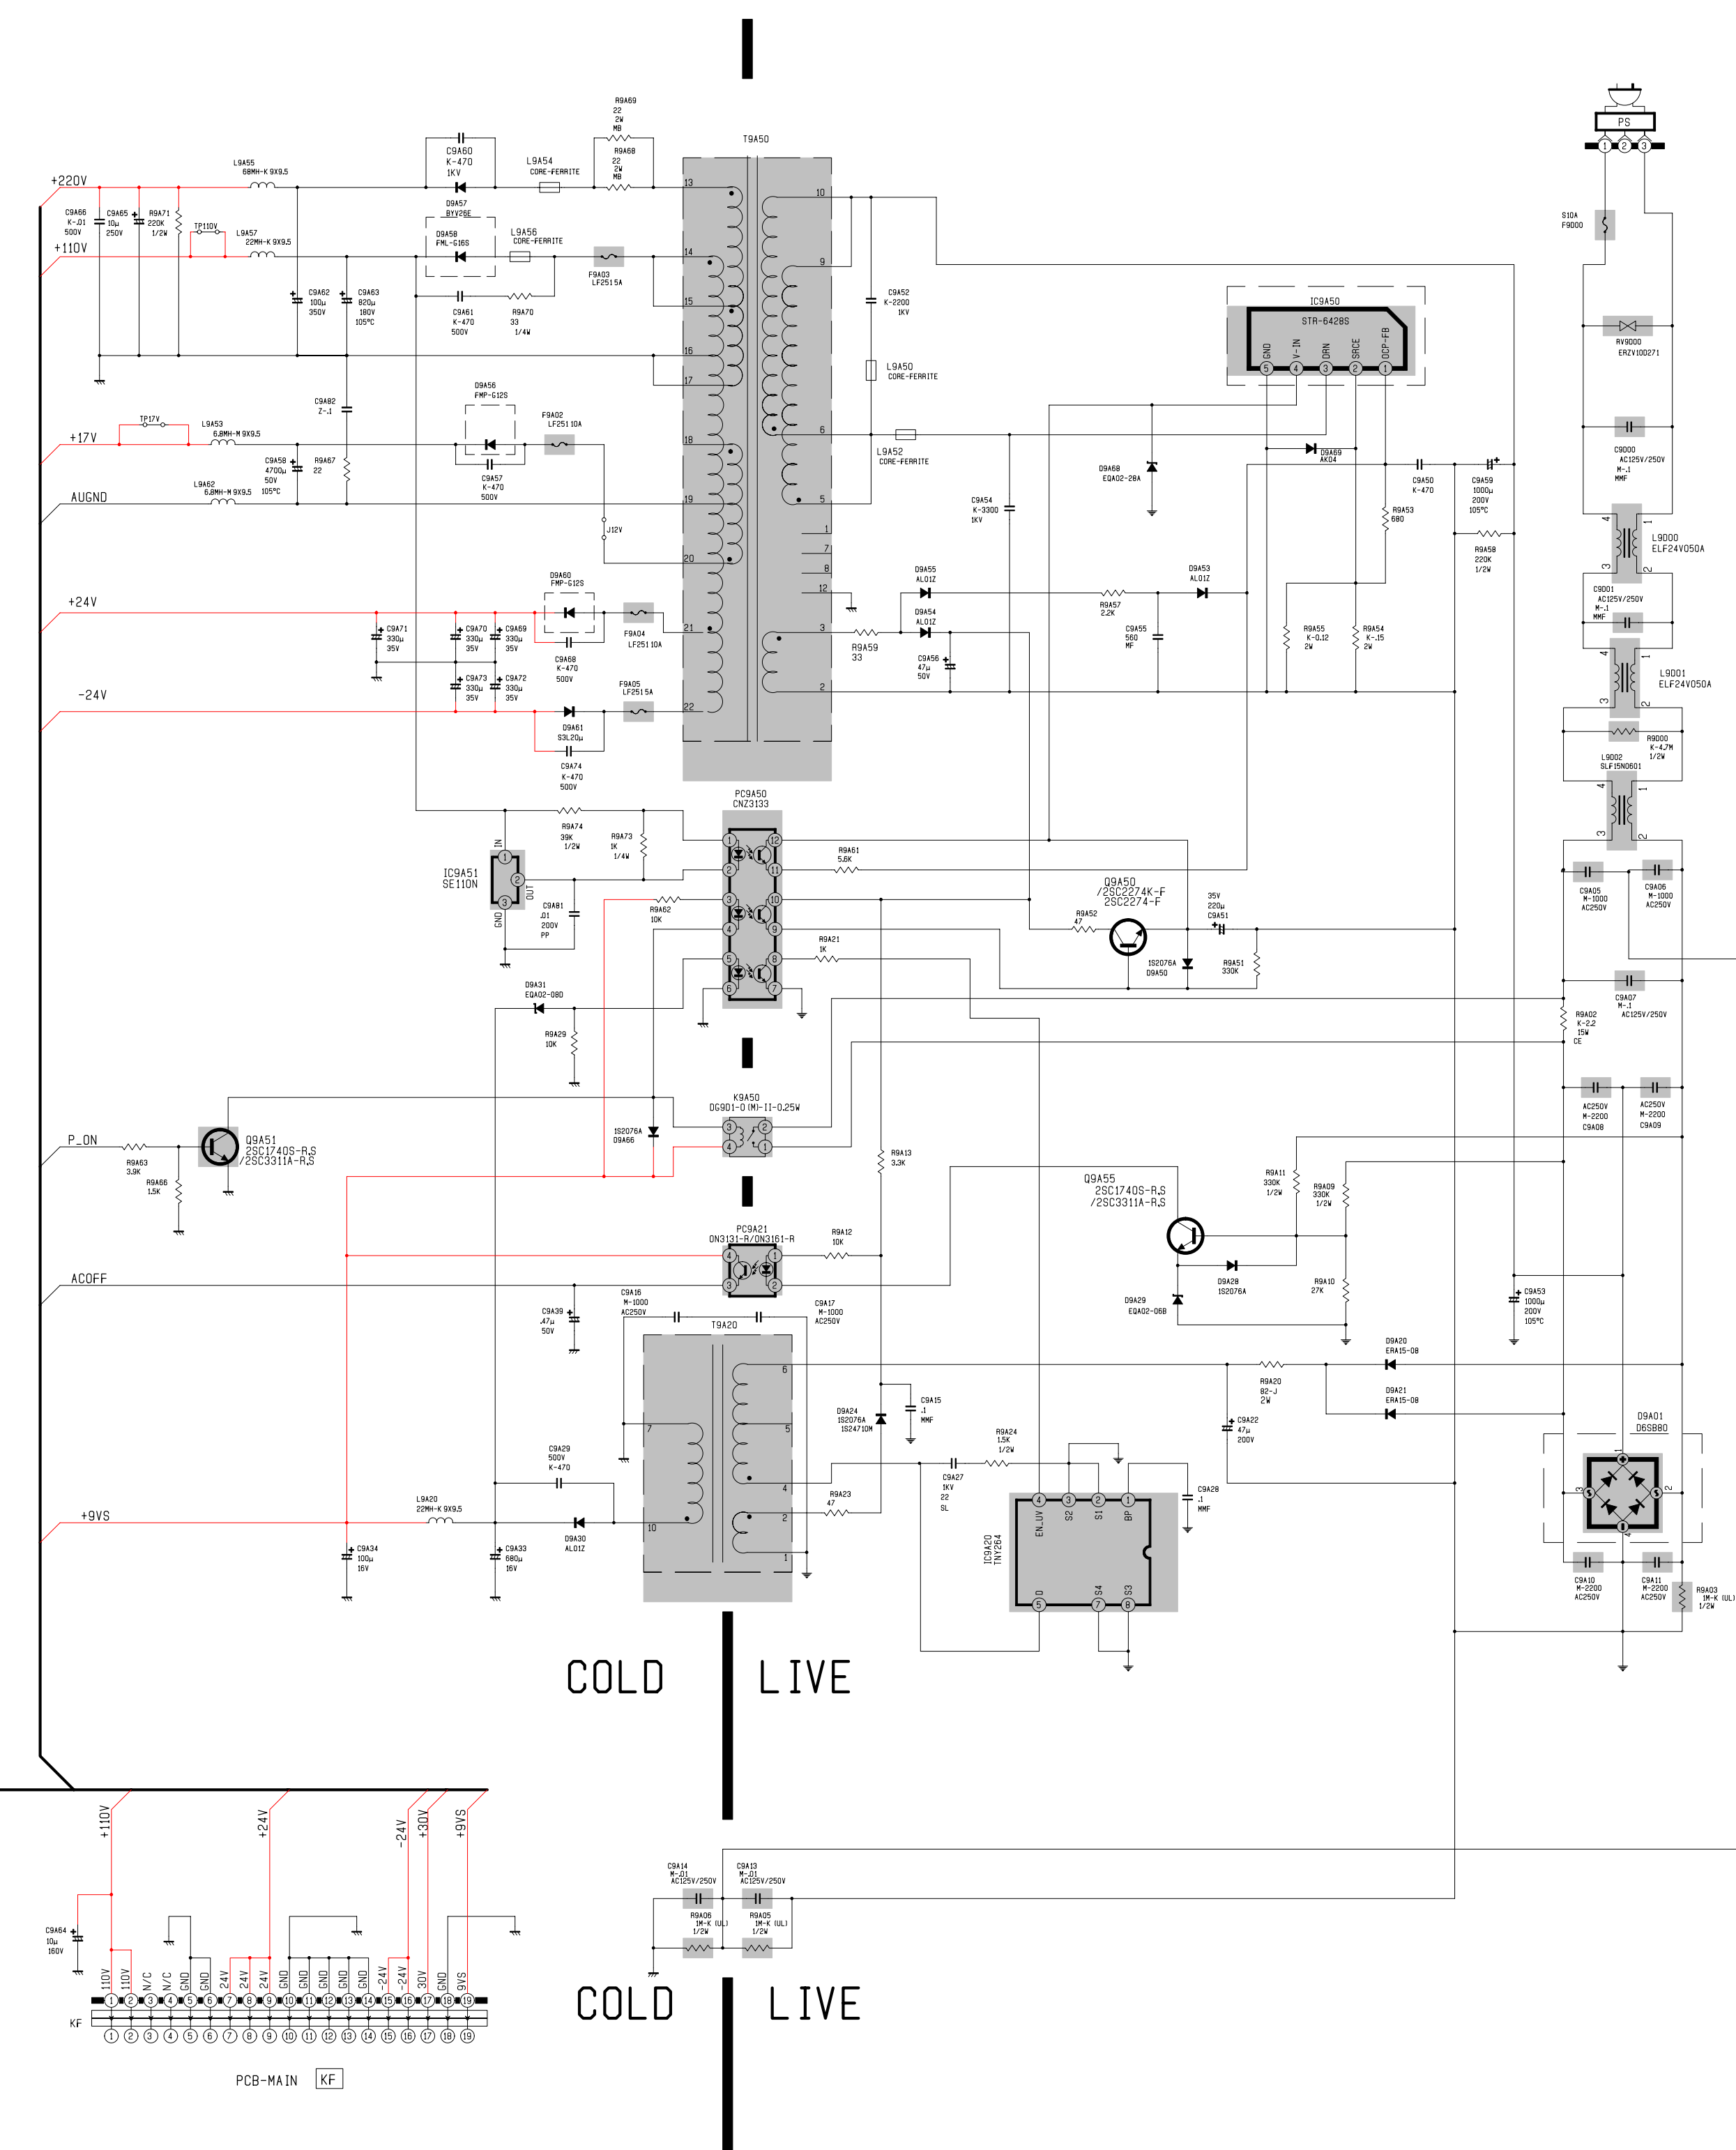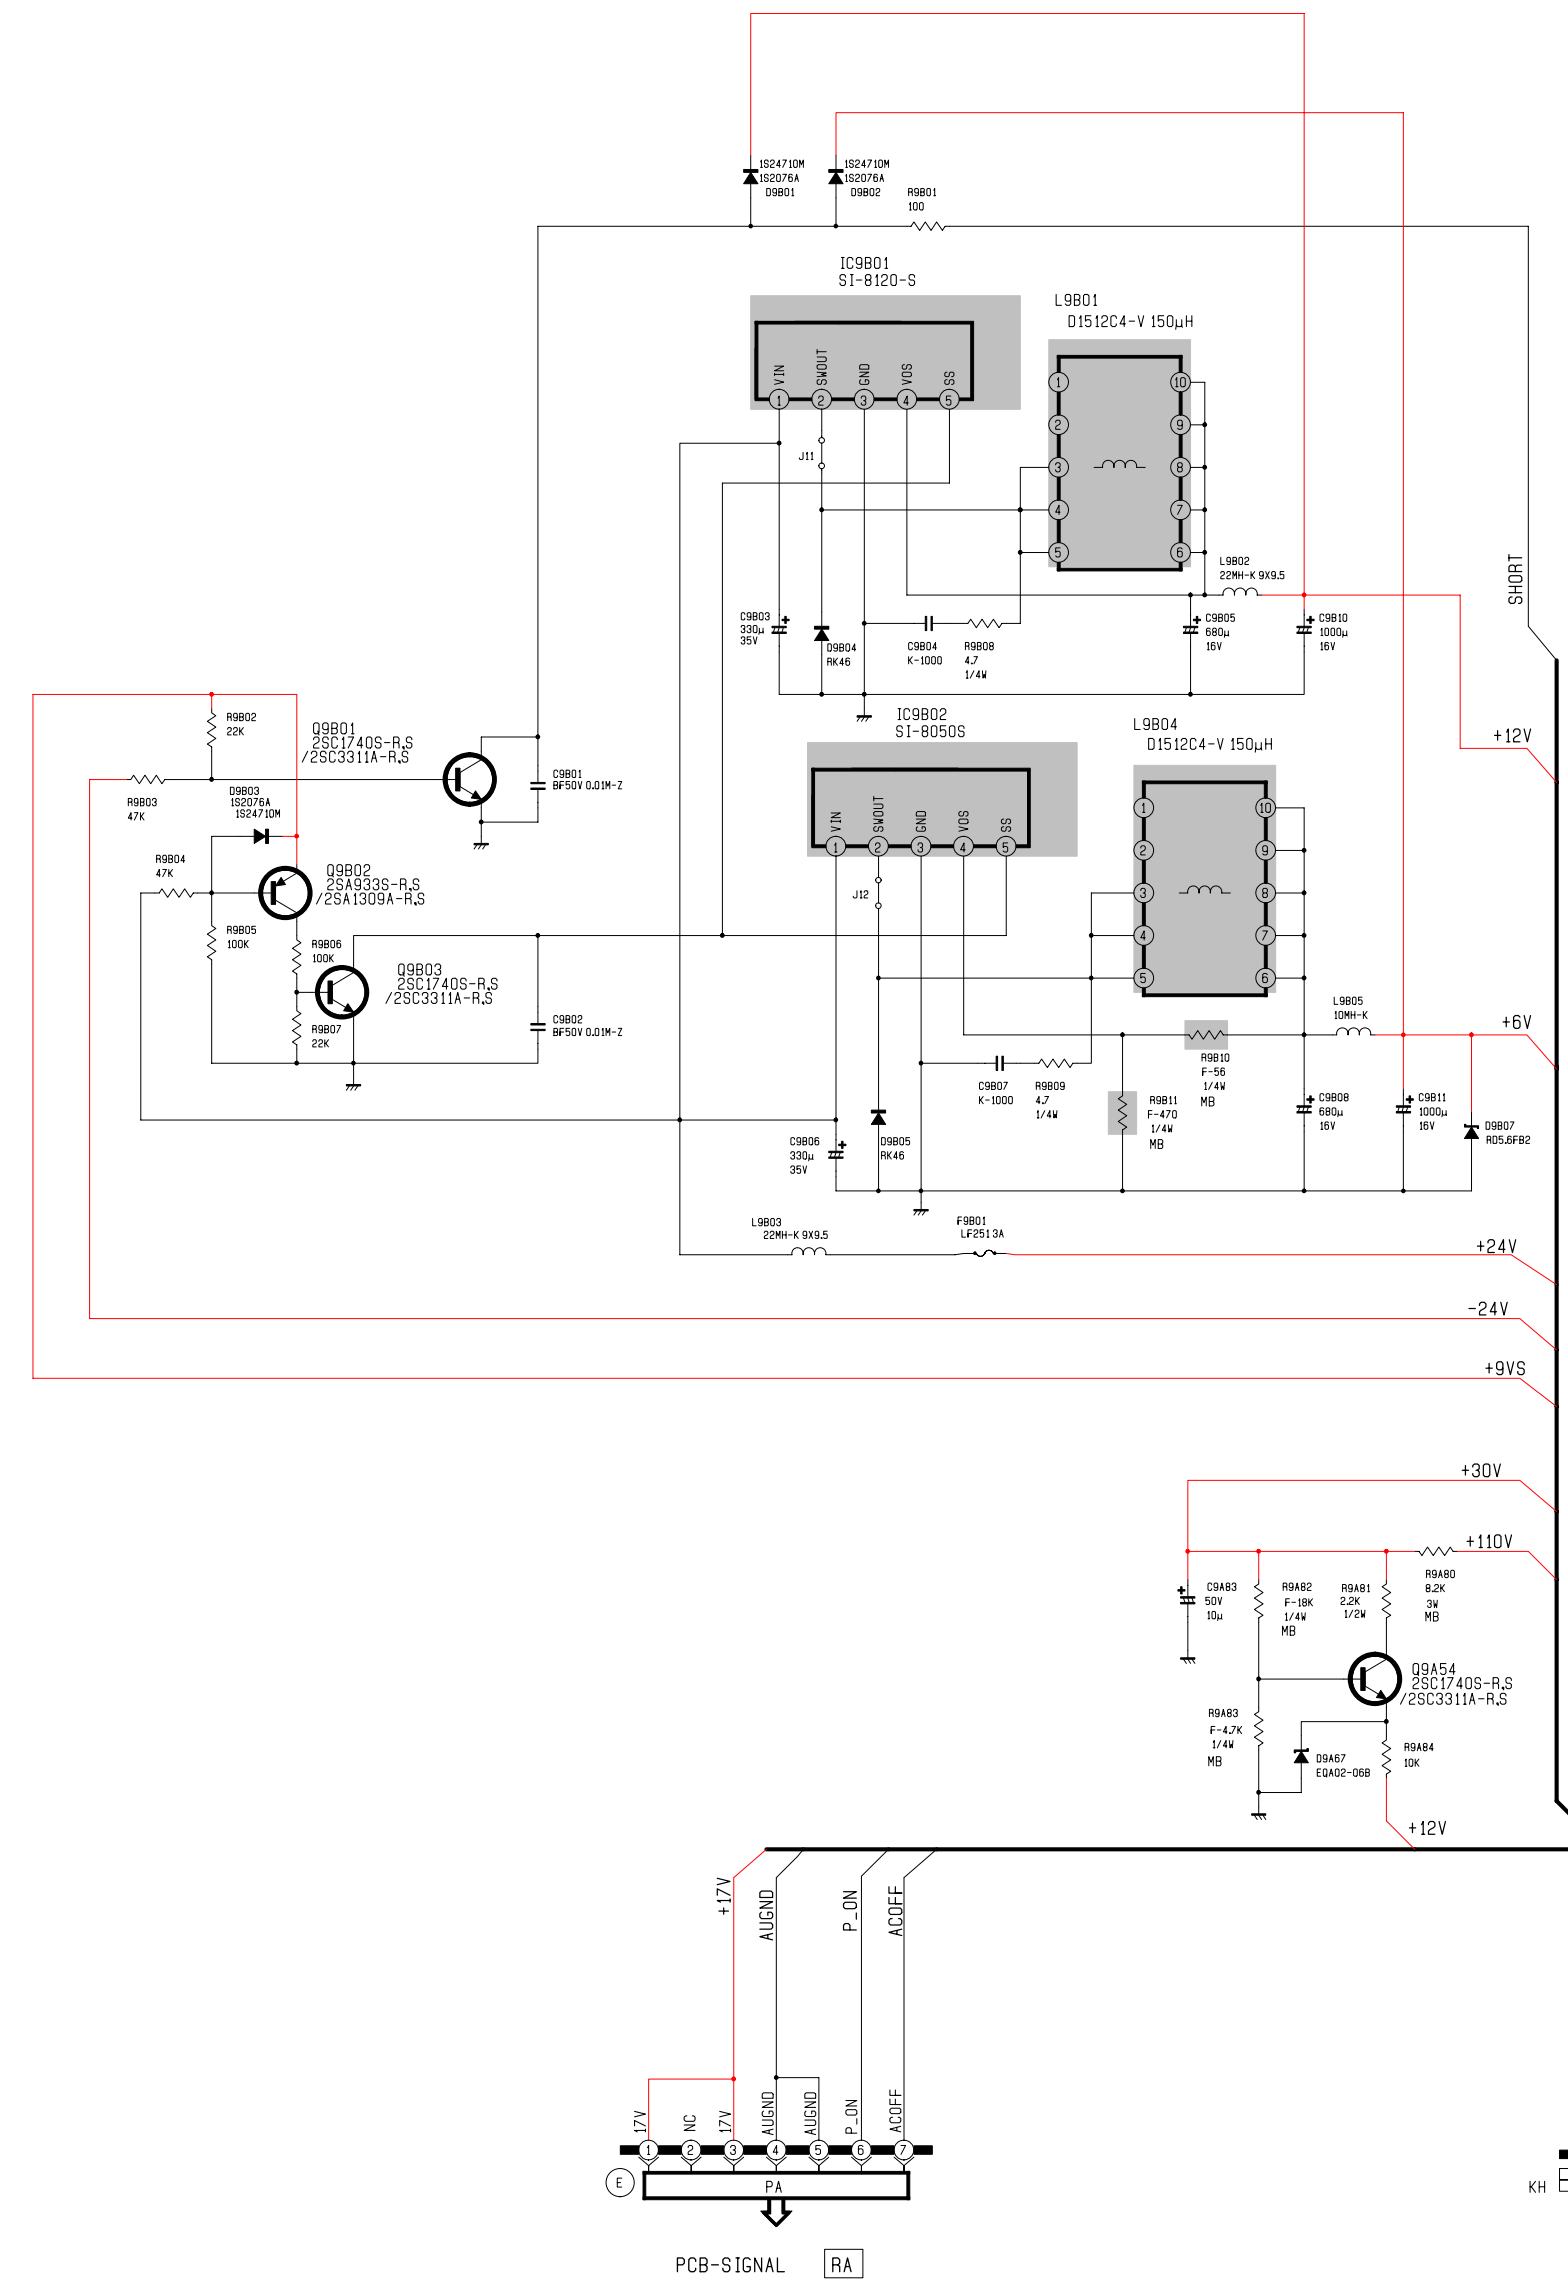

COLD | LIVE

COLD | LIVE

*****Model# WT-42311 (PAGE 3) ** This is printed in BLACK ink *****

CONTENTS	
PG.1...	BLOCK DIAGRAM
PG.2...	MAIN
PG.3...	POWER
PG.4...	TERMINAL-1 (INPUT SW)
PG.5...	TERMINAL-2 (30YQ)
PG.6...	SIGNAL-1 (AV I/O)
PG.7...	SIGNAL-2 (MICRO)
PG.8...	SIGNAL-3 (VIDEO/CHROMA)
PG.9...	SIGNAL-4 (CONV GEN)
PG.10...	CR1/CONTROL/FRONT/PREAMP
PG.11...	DOUBLER-1 (IN)
PG.12...	DOUBLER-2 (MAIN)
PG.13...	DOUBLER-3 (OUT)

MODEL
 NT-42311
 NT-442

PAGE 5-7

A

B

C

D

E

F

G












H

I









J

K


PCB-FRONT

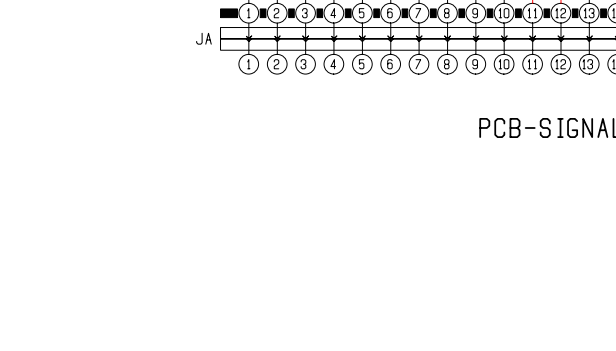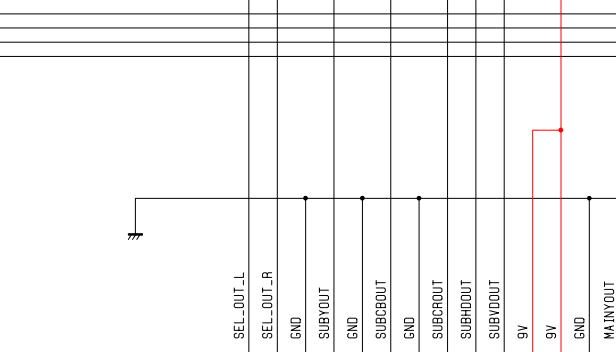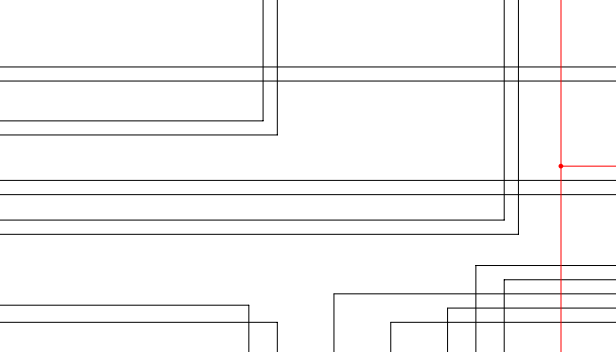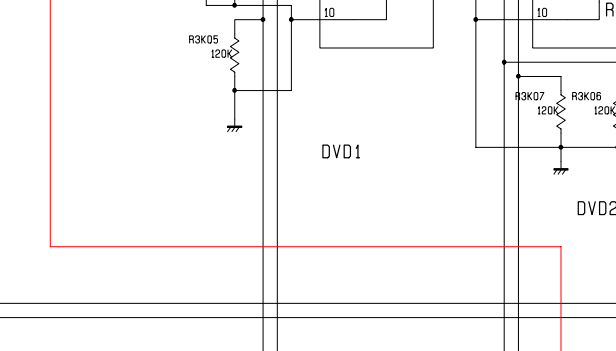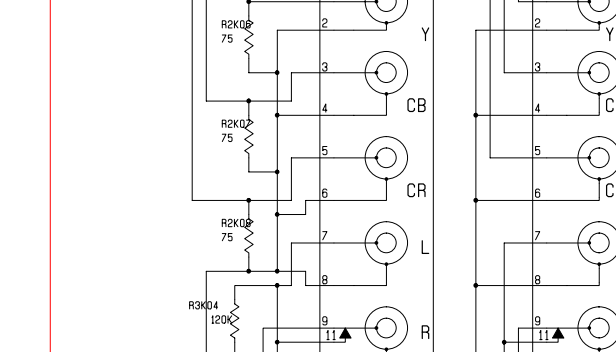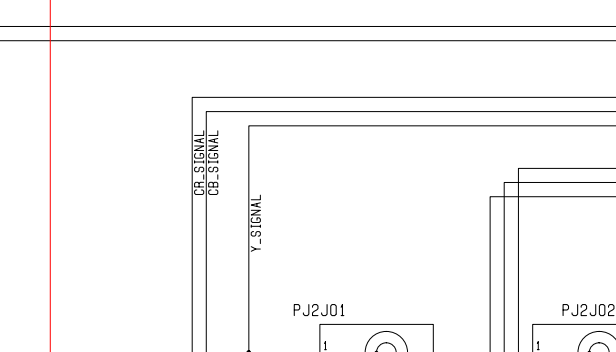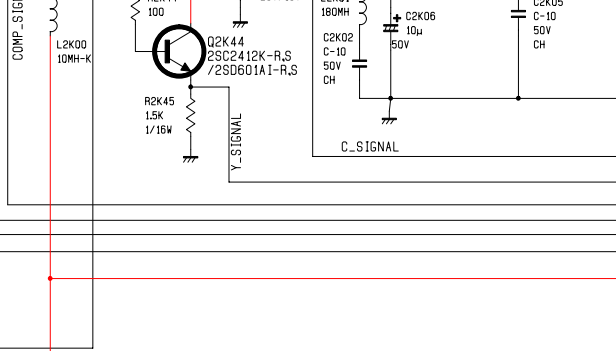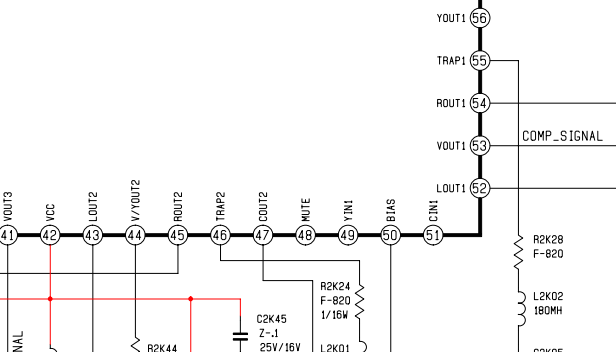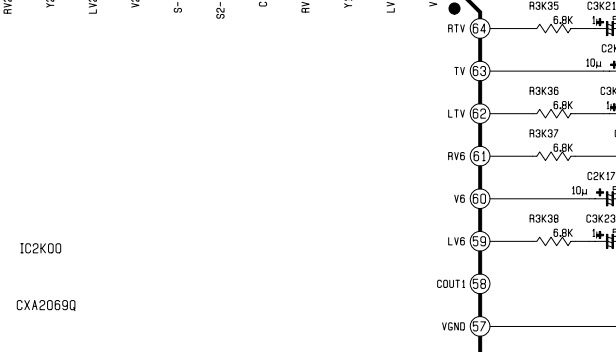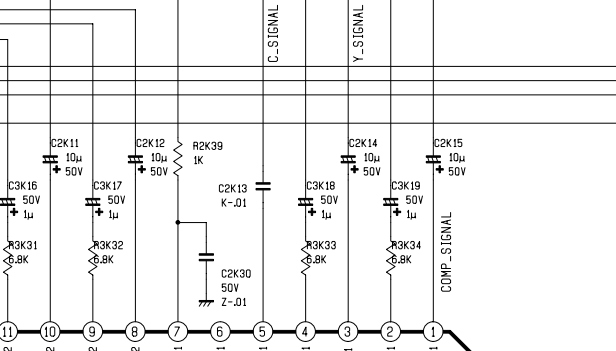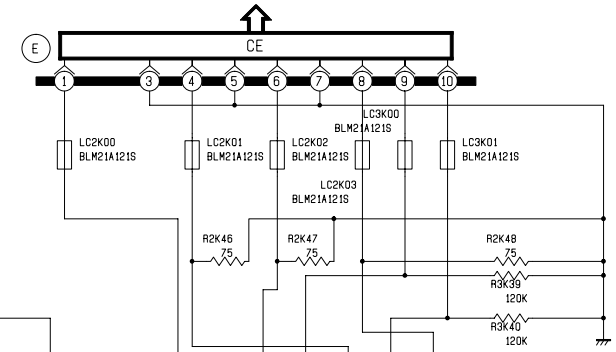





PCB-SIGNAL-1

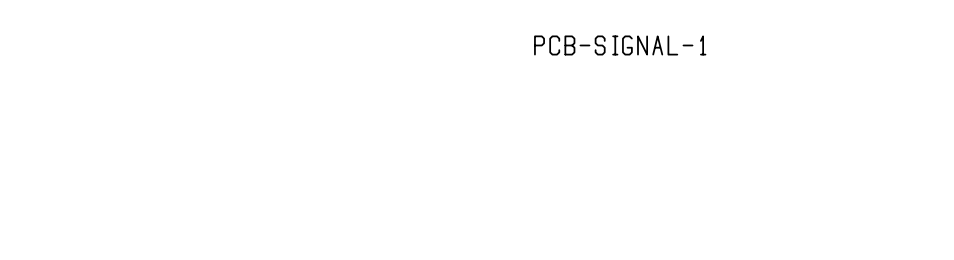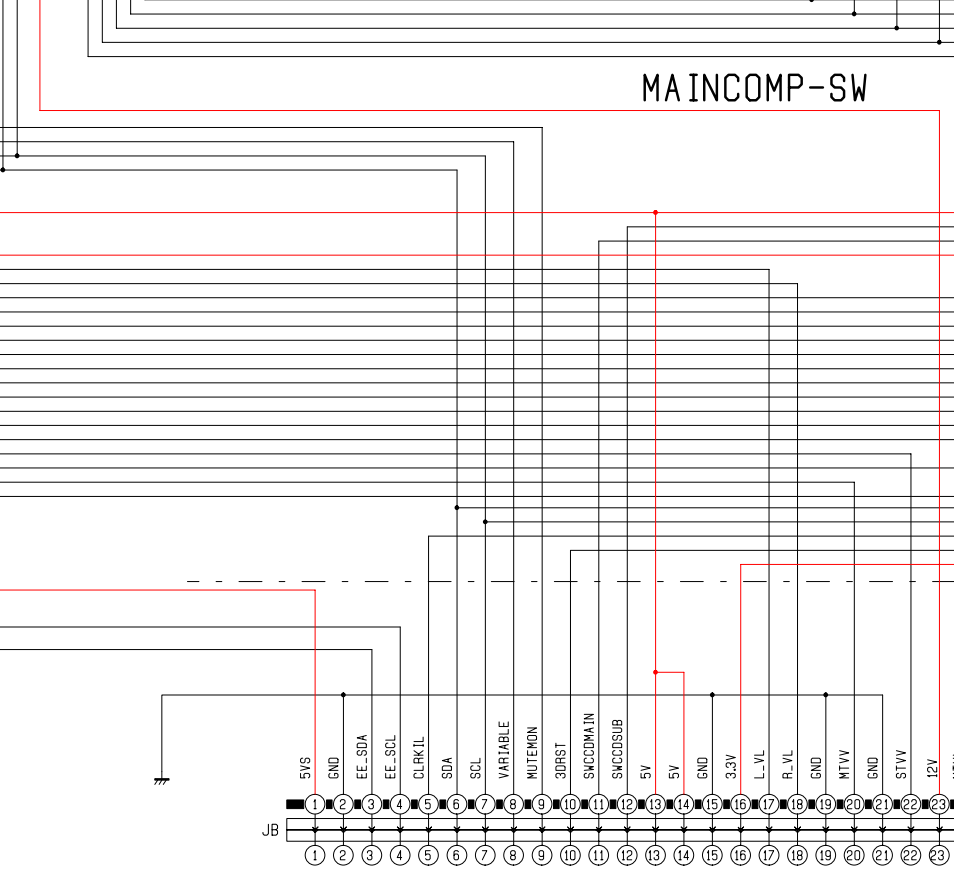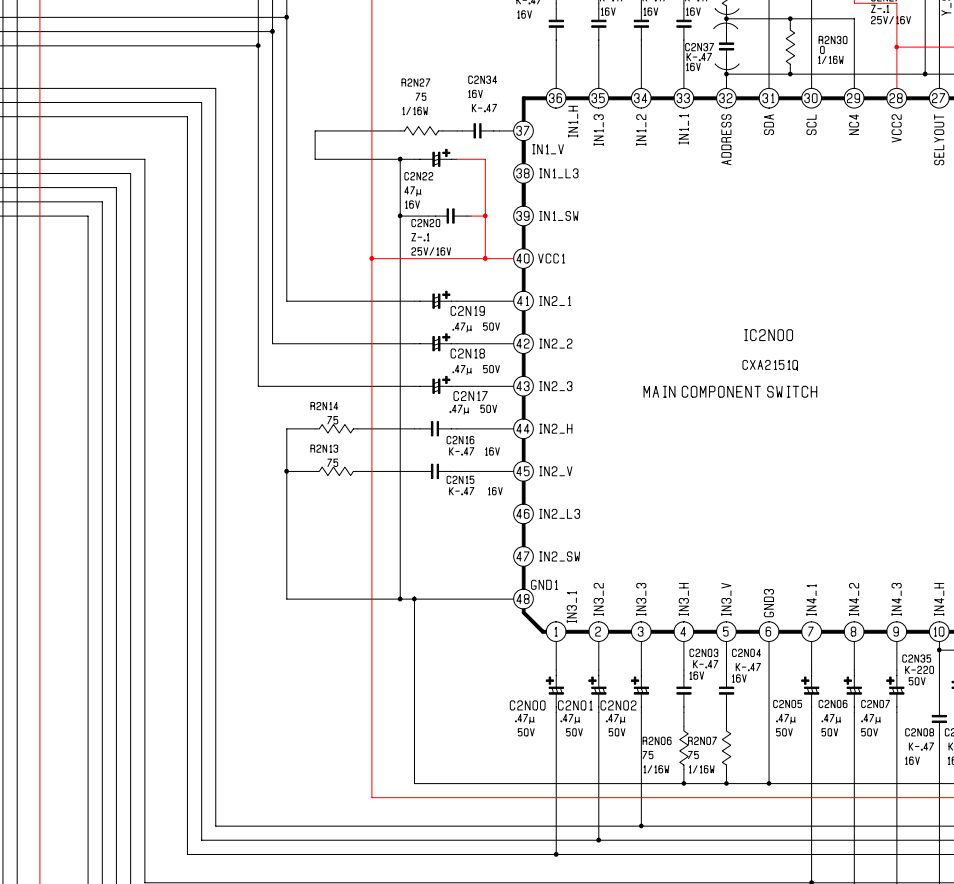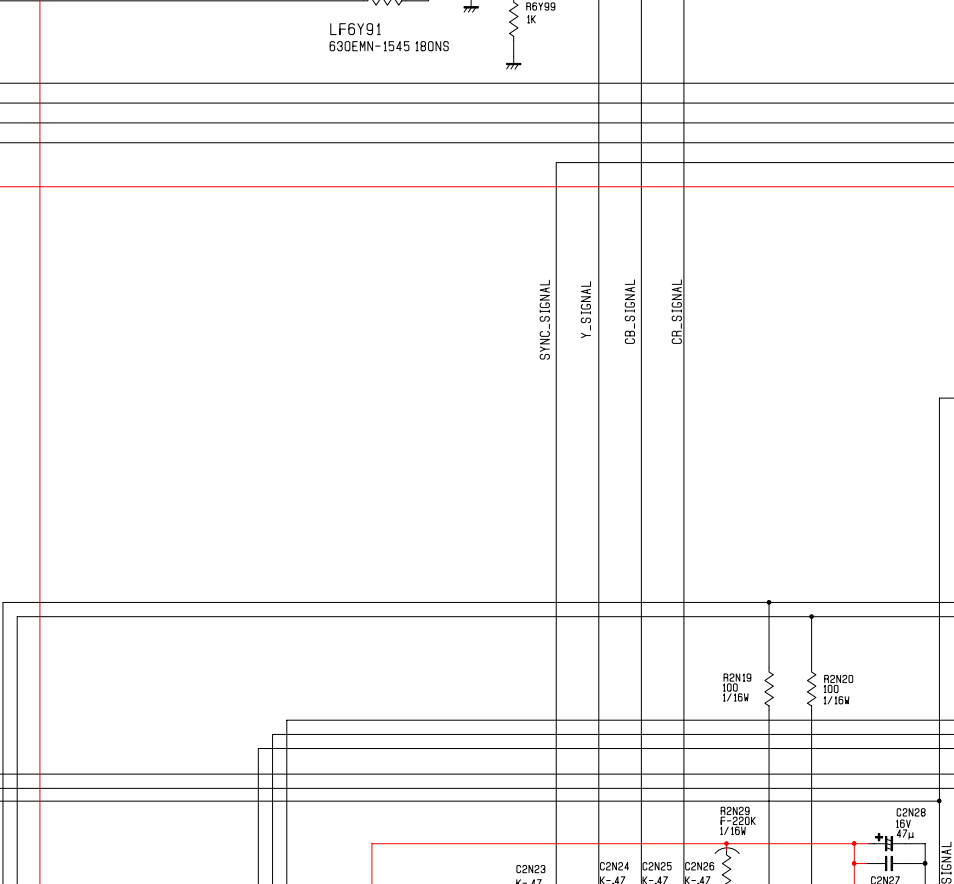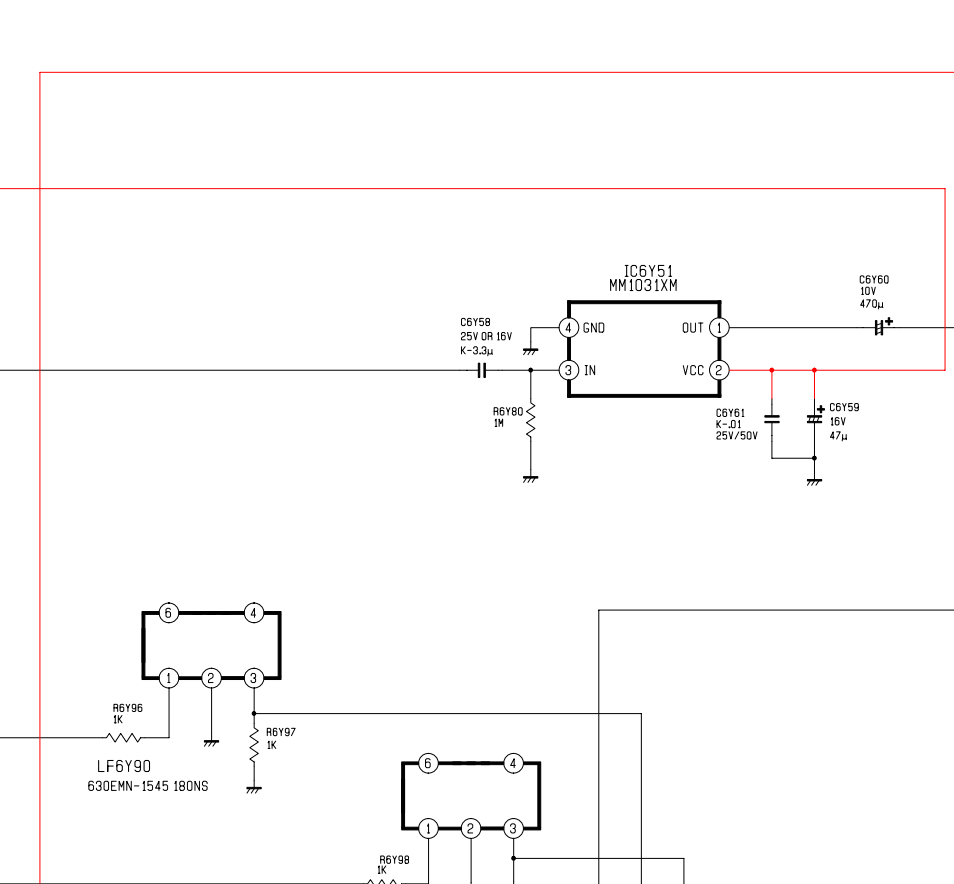


MAINCOMP-SW

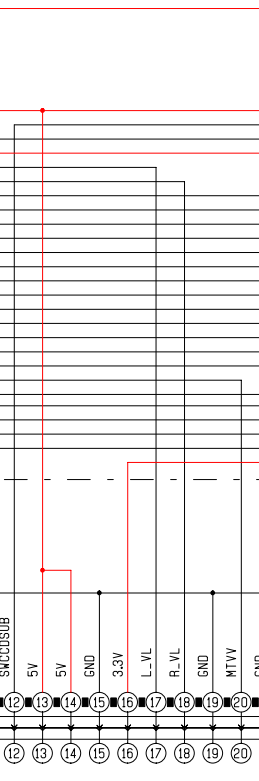


PCB-SIGNAL-1

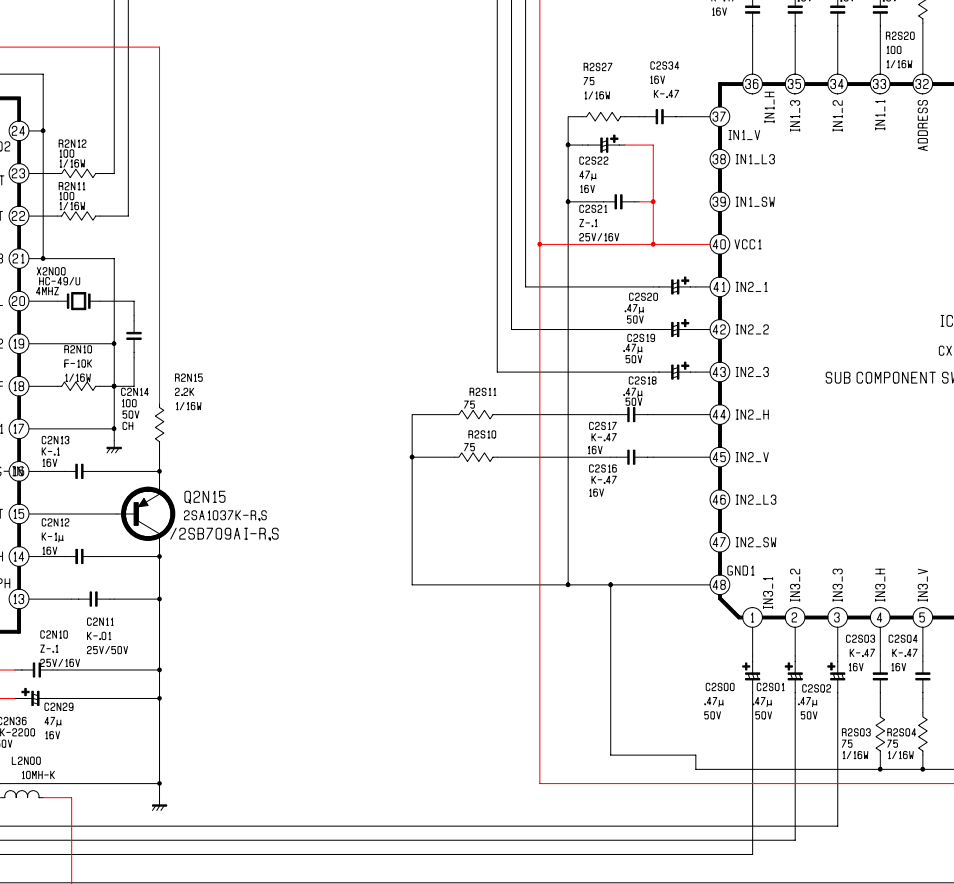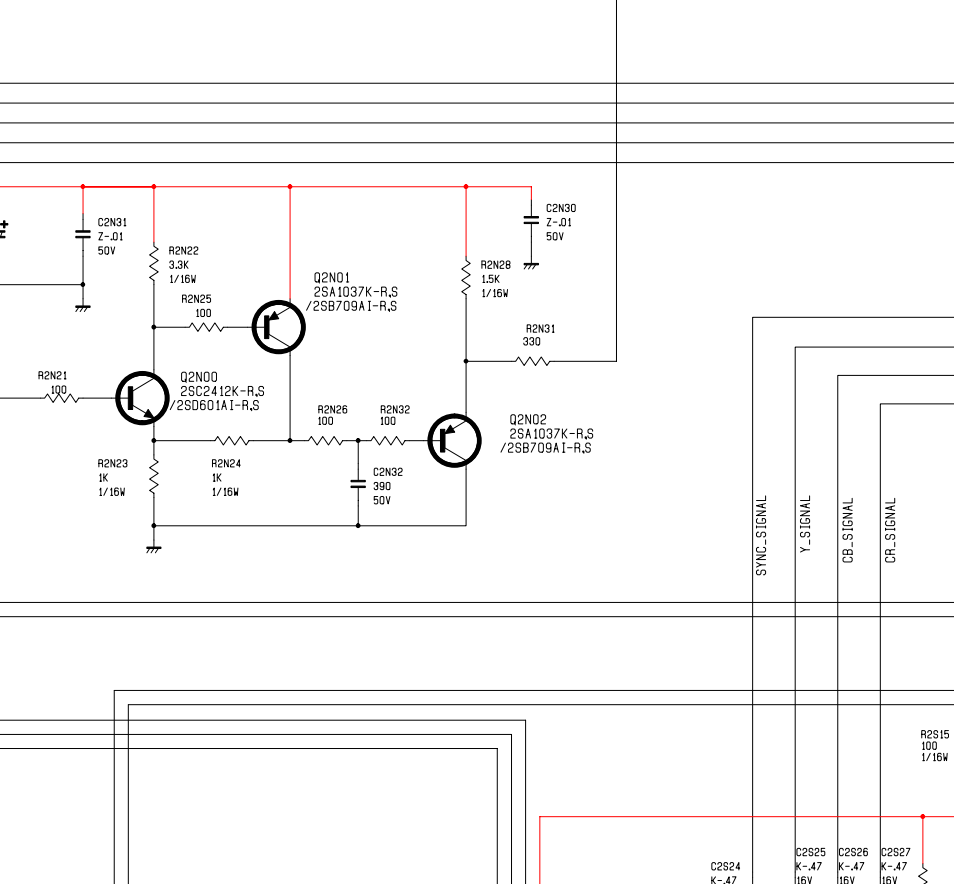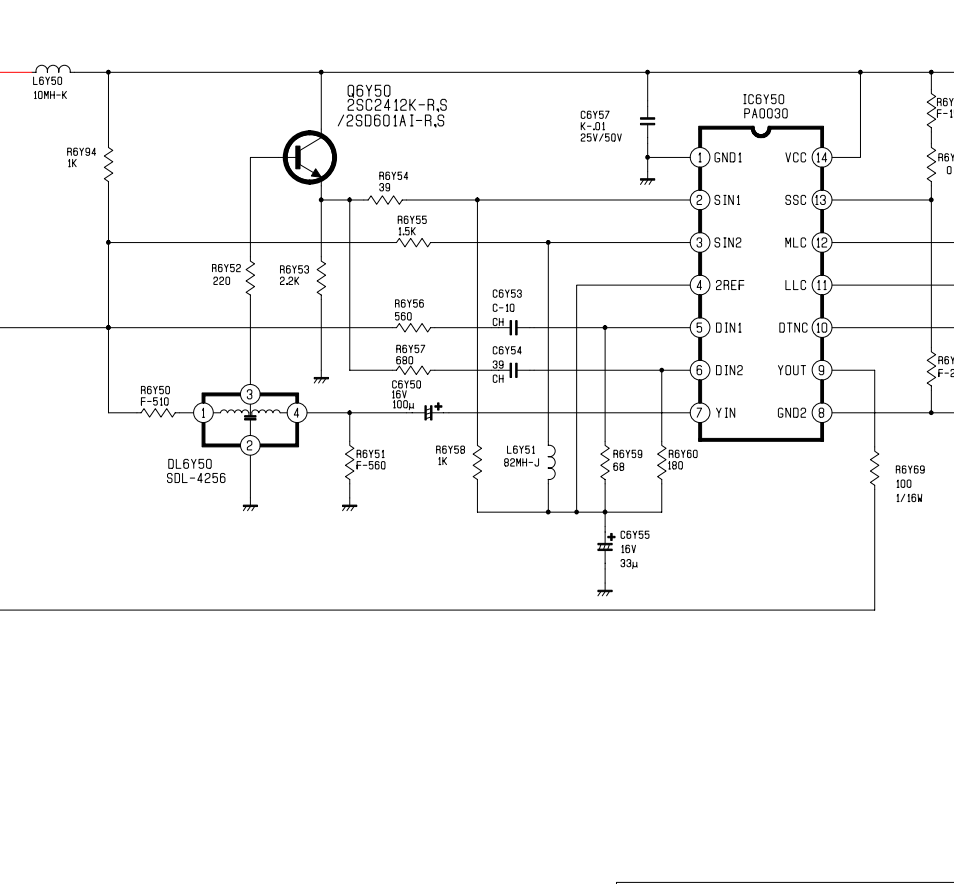

SUBCOMP-SW

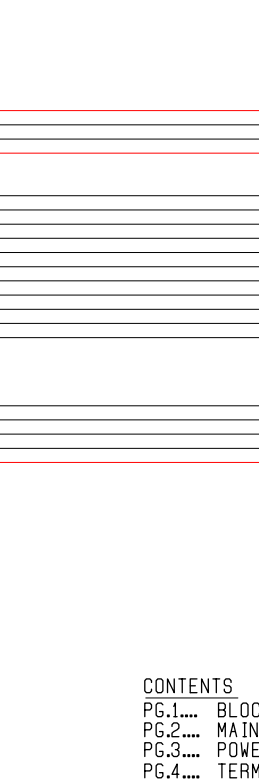

PCB-SIGNAL-1

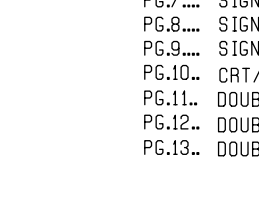


CONTENTS	
PG.1...	BLOCK DIAGRAM
PG.2...	MAIN
PG.3...	POWER
PG.4...	TERMINAL-1 (INPUT SW)
PG.5...	TERMINAL-2 (30V)
PG.6...	SIGNAL-1 (AV 1/1/0)
PG.7...	SIGNAL-2 (MICRO)
PG.8...	SIGNAL-3 (VIDEO/CHROMA)
PG.9...	SIGNAL-4 (CONV GEN)
PG.10...	CRT/CONTROL/FRONT/REAMP
PG.11...	DOUBLER-1 (IN)
PG.12...	DOUBLER-2 (MAIN)
PG.13...	DOUBLER-3 (OUT)

MODEL
WT-42311
WT-A42

* EXCEPT WHERE NOTED, ALL OPEN-ENDED CIRCUIT PATHS CONNECT TO THE TERMINAL-2 SCHEMATIC

*****Model# WT-42311 (PAGE 4) ** This is printed in BLACK ink *****Masked*****



CONTENTS

PG.1..... BLOCK DIAGRAM

PG.2..... MAIN

PG.3..... POWER

PG.4..... TERMINAL-1 (INPUT SW)

PG.5..... TERMINAL-2 (3DYC)

PG.6..... SIGNAL-1 (AV I/O)

PG.7..... SIGNAL-2 (MICRO)

PG.8..... SIGNAL-3 (VIDEO/CHROMA)

PG.9..... SIGNAL-4 (CONV GEN)

PG.10..... CRT/CONTROL/FRONT/PREAMP

PG.11..... DOUBLER-1 (IN)

PG.12..... DOUBLER-2 (MAIN)

PG.13..... DOUBLER-3 (OUT)

PAGE S-5

K



A

B

C

D

E

F


G

H

I

J


K

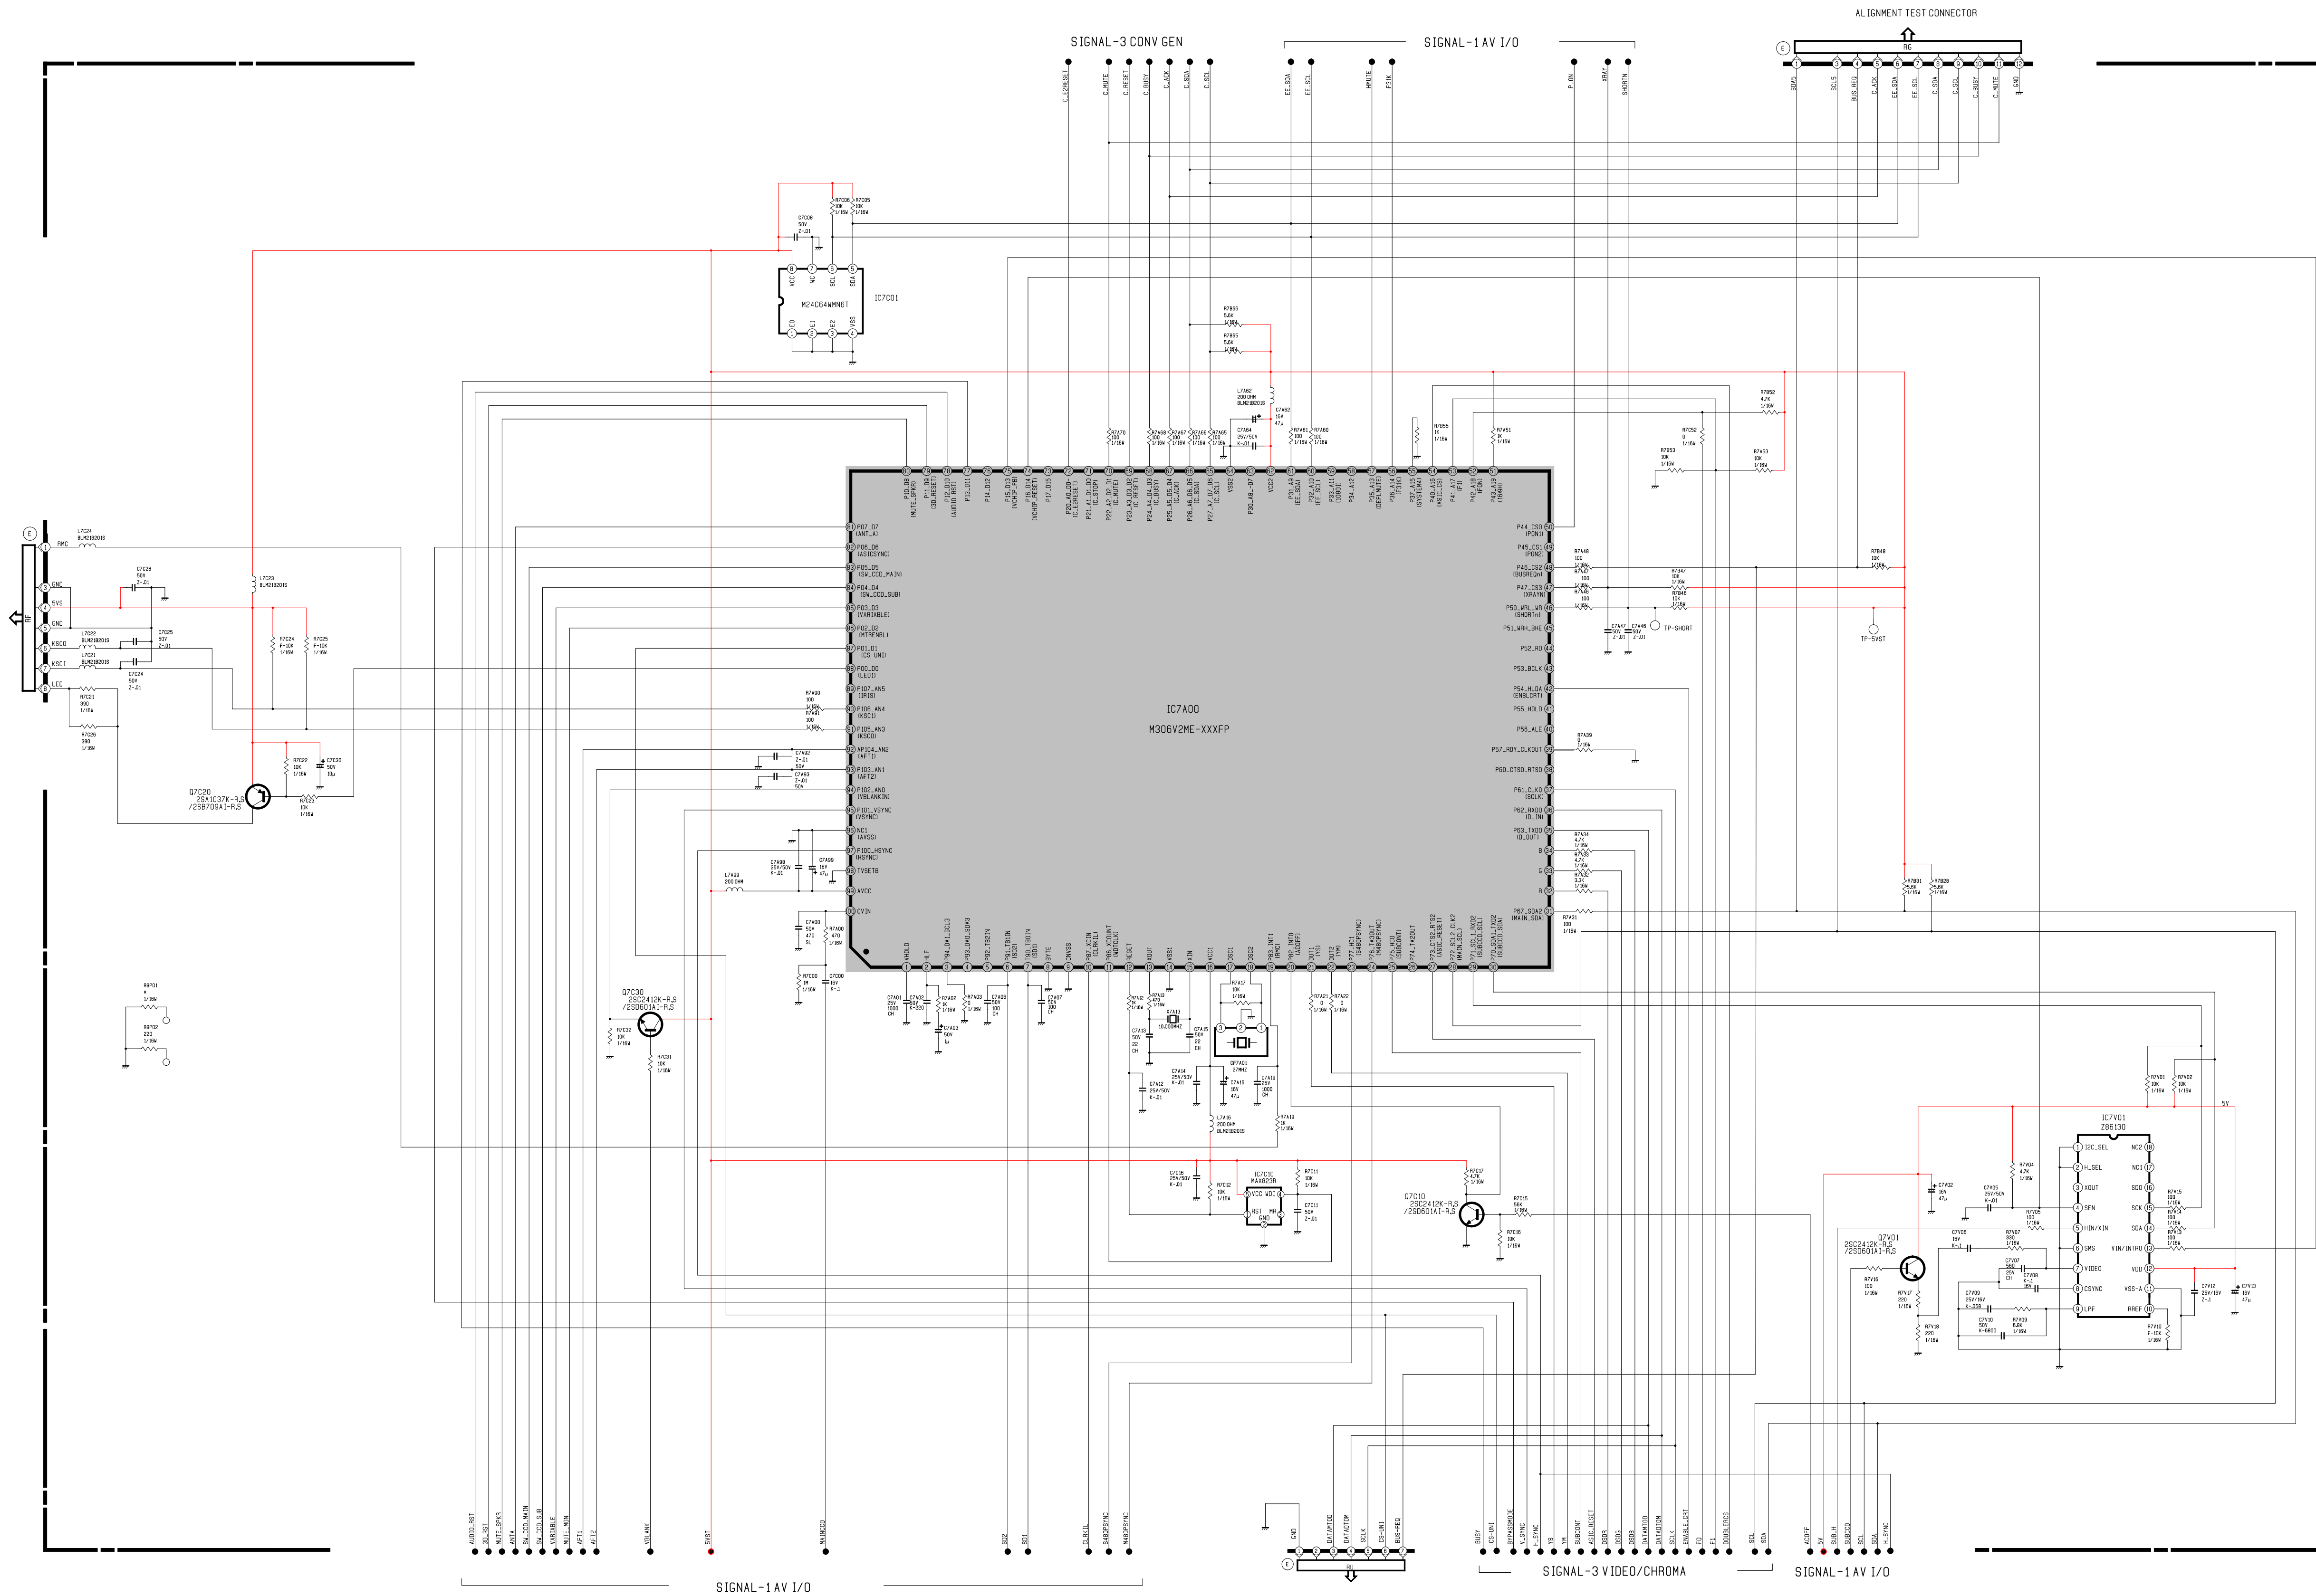


	WT-42311	WT-A42
R7A39	Not Used	0Q

CONTENTS
PG.1... BLOCK DIAGRAM
PG.2... MAIN
PG.3... POWER
PG.4... TERMINAL-1 (INPUT SW)
PG.5... TERMINAL-2 (30V)
PG.6... SIGNAL-1 (AV I/O)
PG.7... SIGNAL-2 (MICRO)
PG.8... SIGNAL-3 (VIDEO/CHROMA)
PG.9... SIGNAL-4 (CONV GEN)
PG.10... CRT/CONTROL/FRONT/PREAMP
PG.11... DOUBLER-1 (IN)
PG.12... DOUBLER-2 (MAIN)
PG.13... DOUBLER-3 (OUT)

MODEL
WT-42311
WT-A42

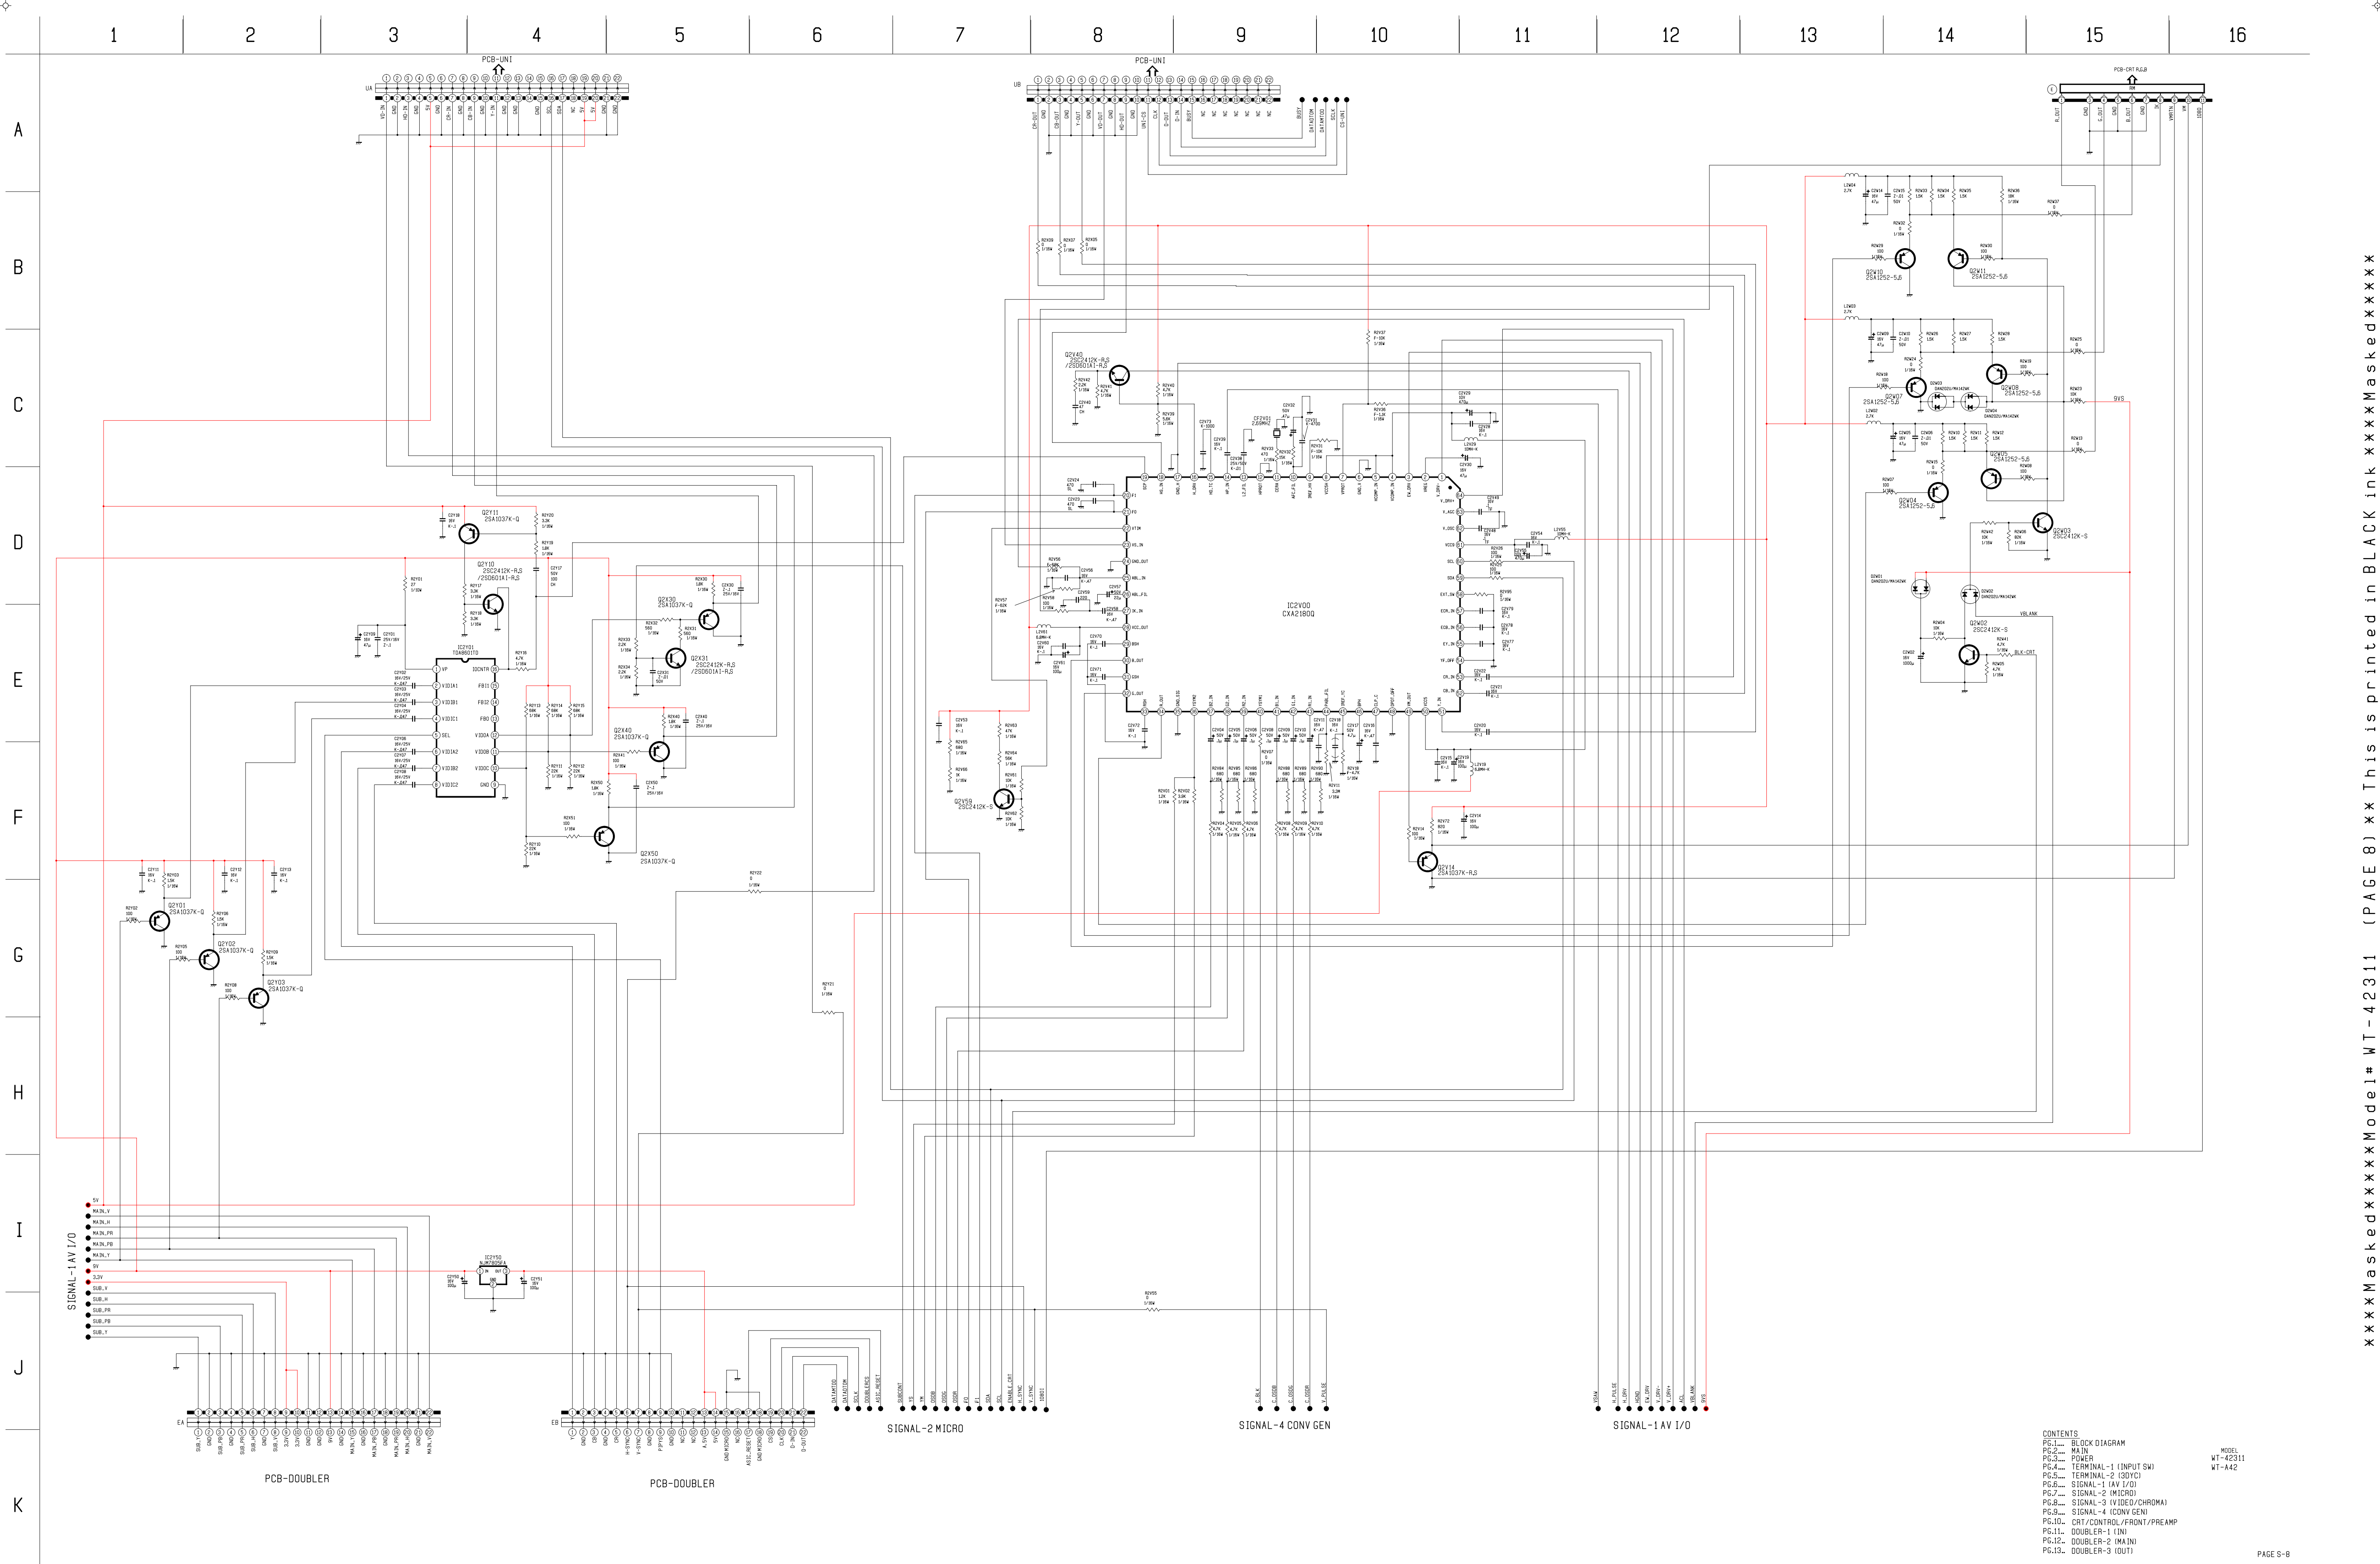

*****Masked***** (PAGE 8) ** This is printed in BLACK ink *****Masked*****

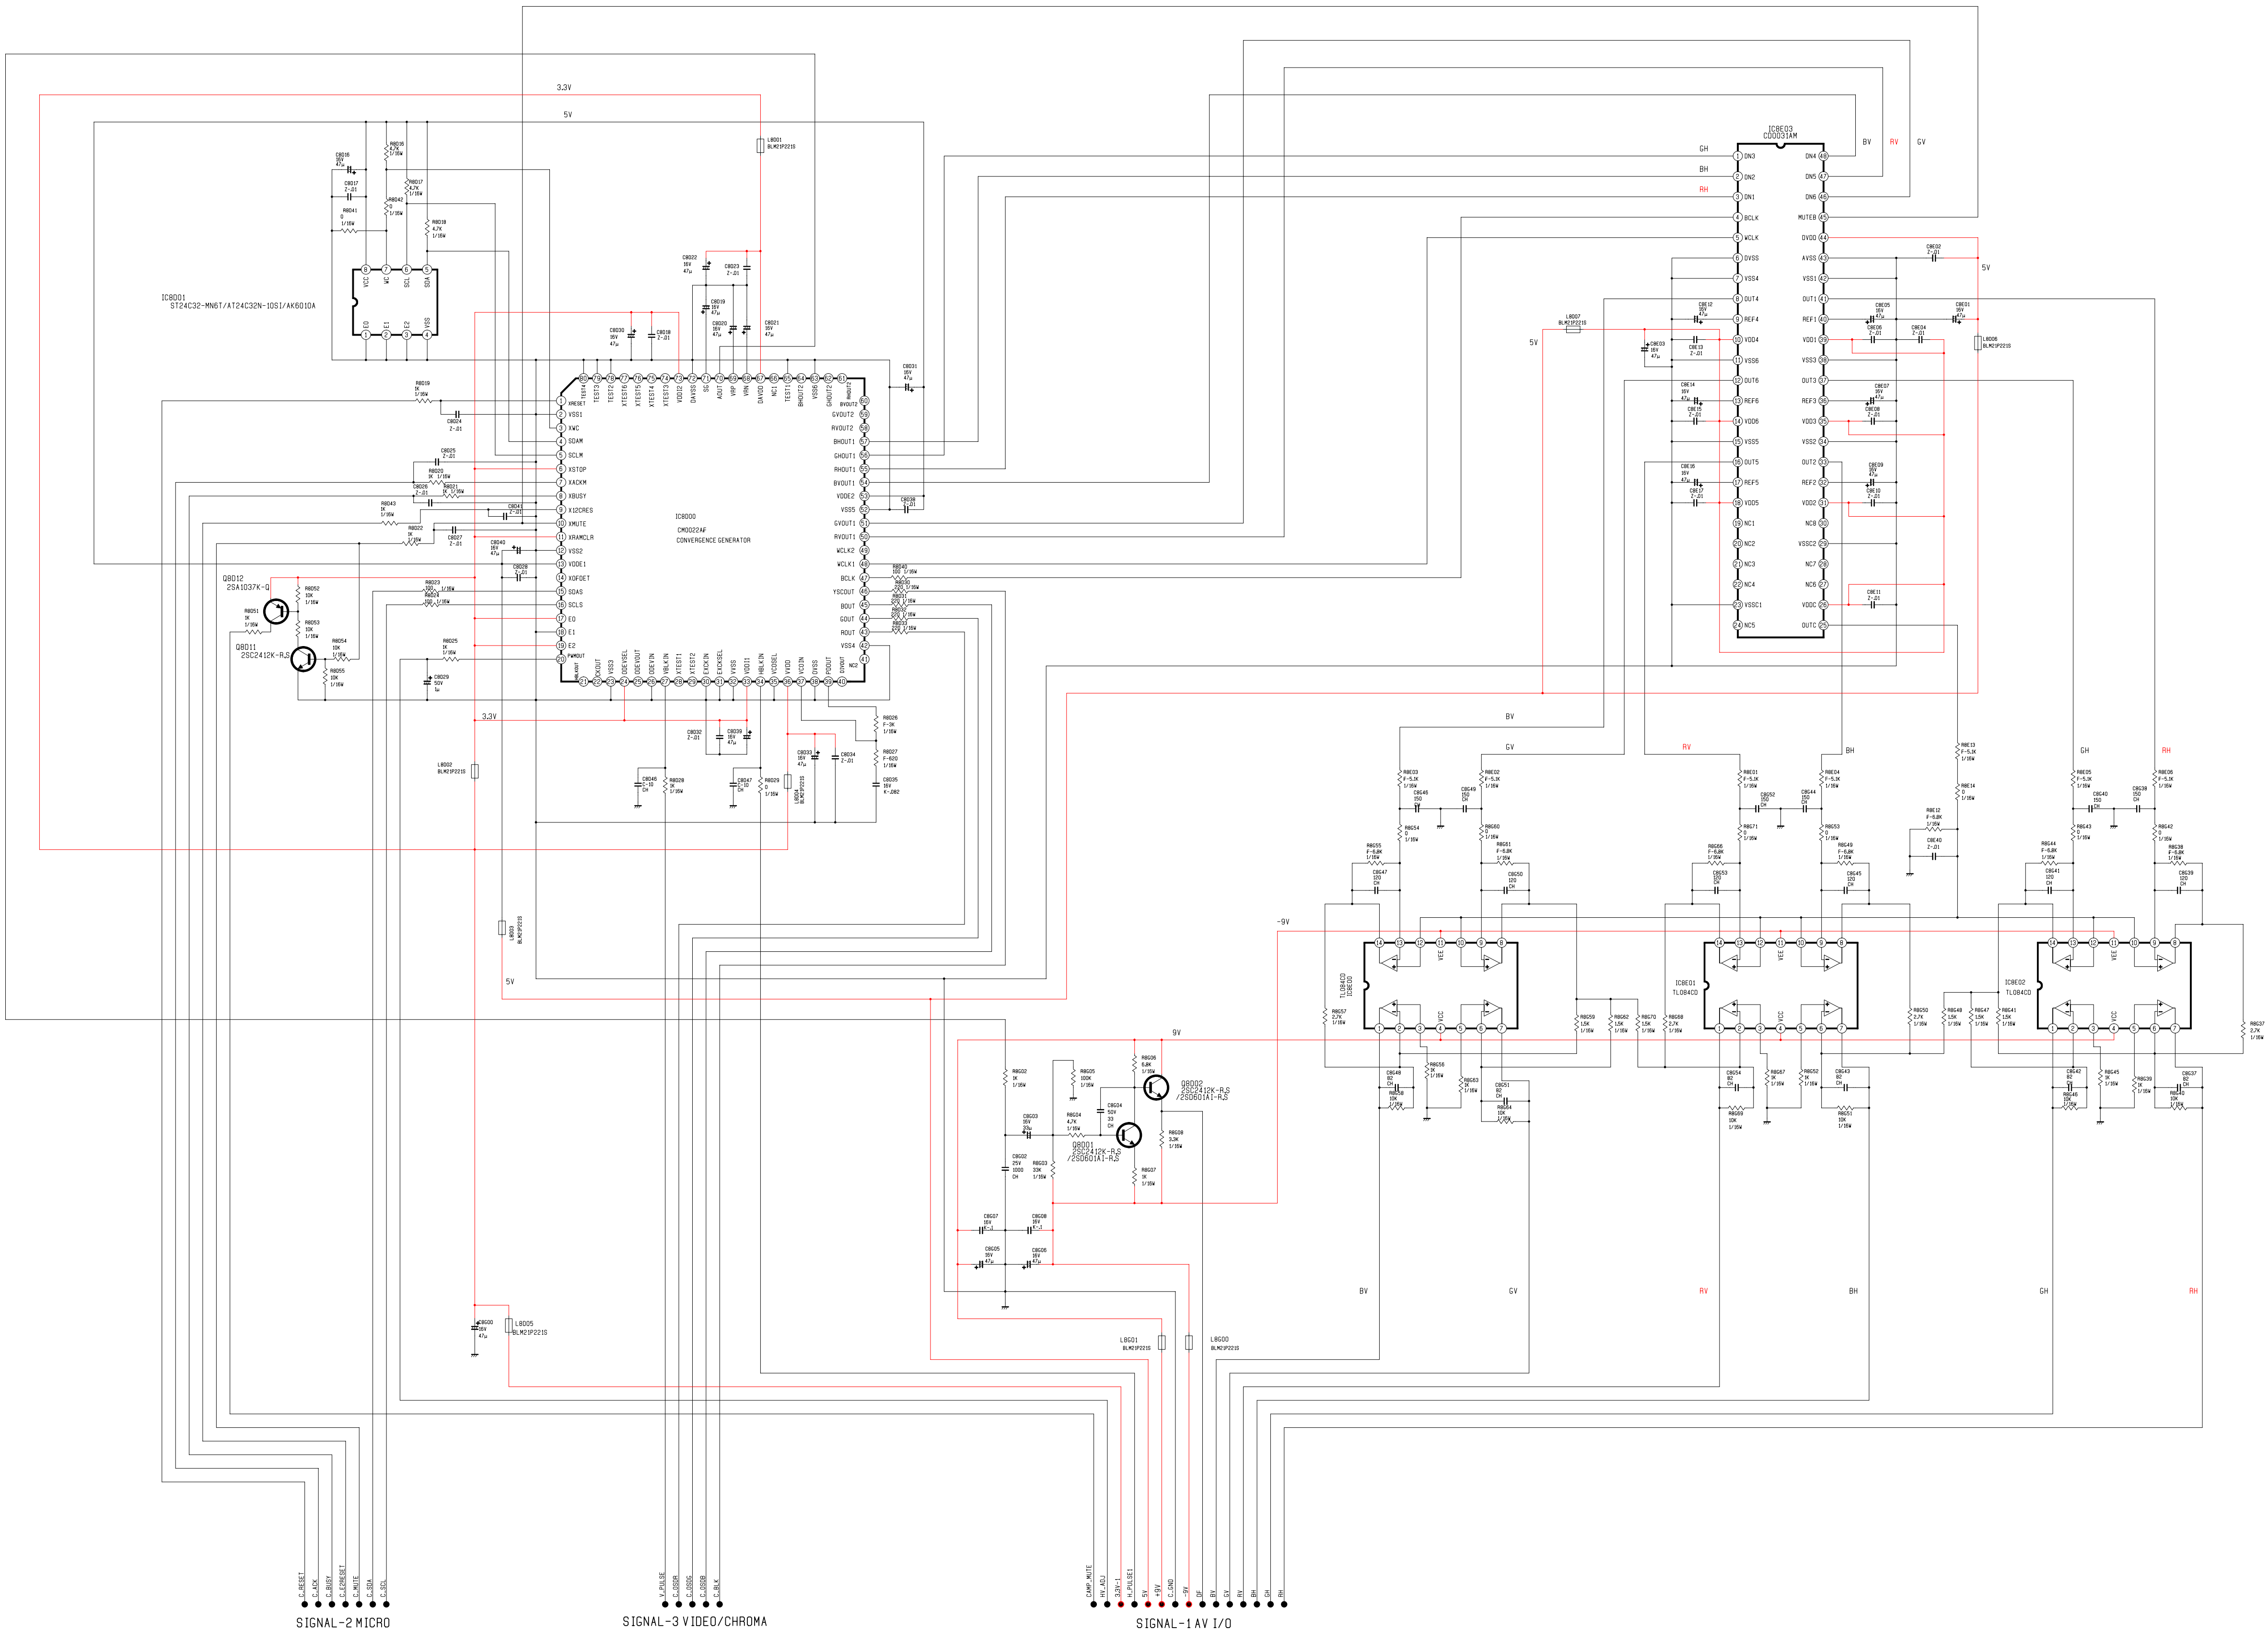

CONTENTS
PG.1... BLOCK DIAGRAM
PG.2... MAIN
PG.3... POWER
PG.4... TERMINAL-1 (INPUT SW)
PG.5... TERMINAL-2 (301C)
PG.6... SIGNAL-1 (AV I/O)
PG.7... SIGNAL-2 (MICRO)
PG.8... SIGNAL-3 (VIDEO/CHROMA)
PG.9... SIGNAL-4 (CONV GEN)
PG.10... CRT/CONTROL/FRONT/PREAMP
PG.11... DOUBLER-1 (IN)
PG.12... DOUBLER-2 (MAIN)
PG.13... DOUBLER-3 (OUT)

MODEL
WT-42311
WT-A42

A

B

C

D

E

F

G


H

I


J

K


PWB-CRT (R)

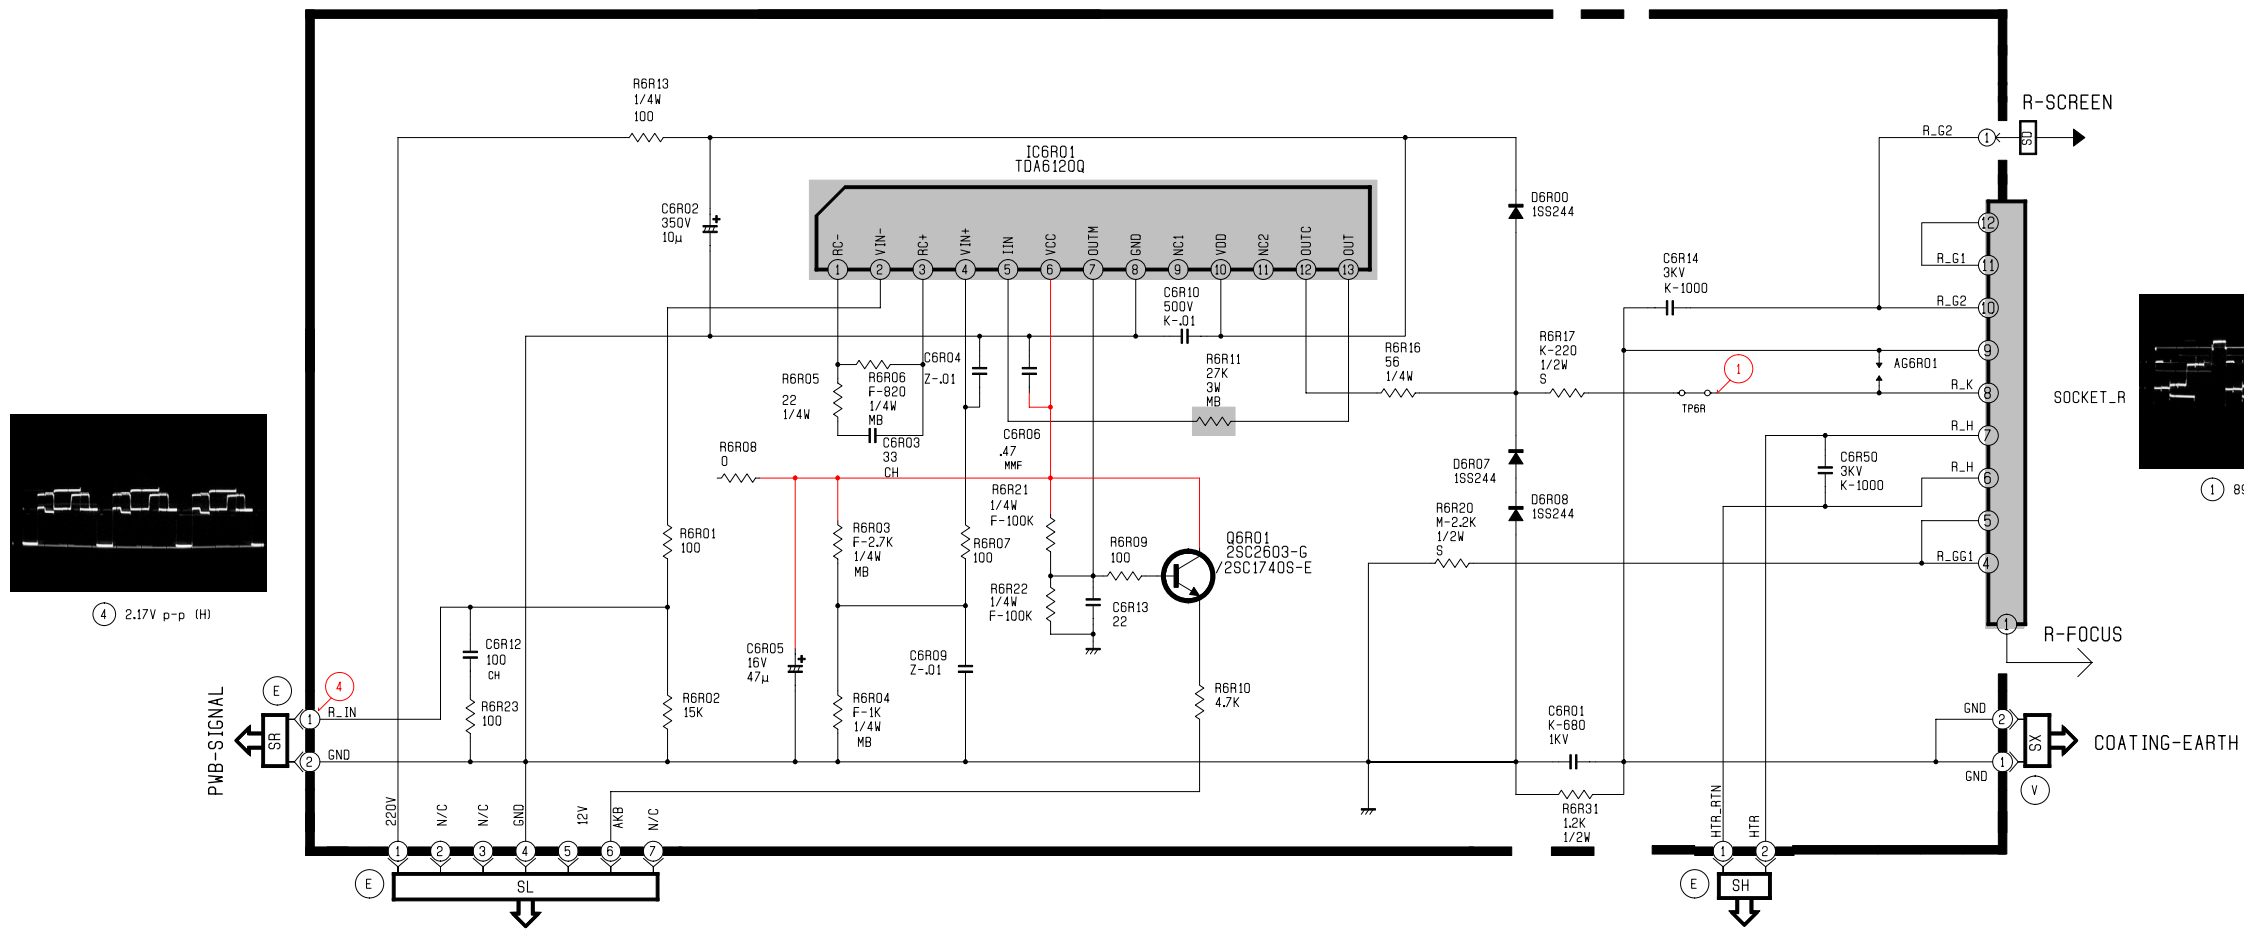


PWB-CONTROL

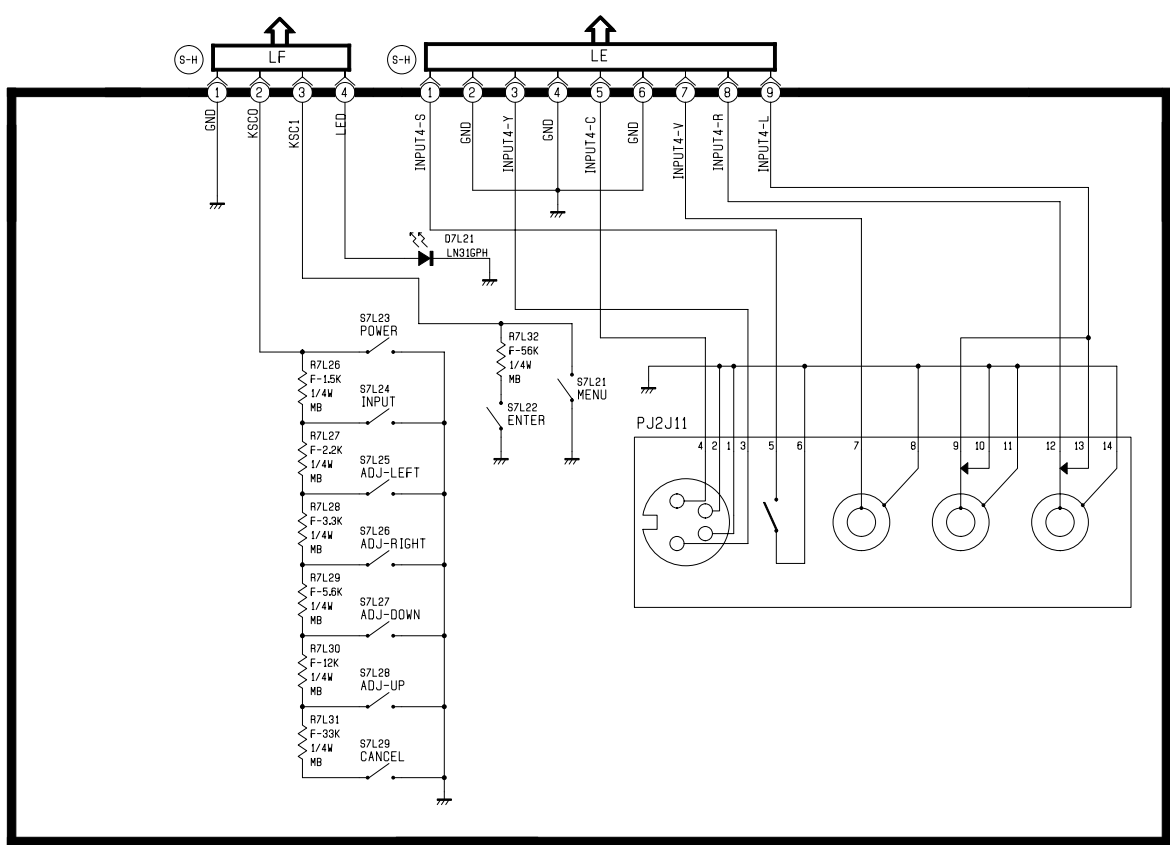


PWB-CRT (G)

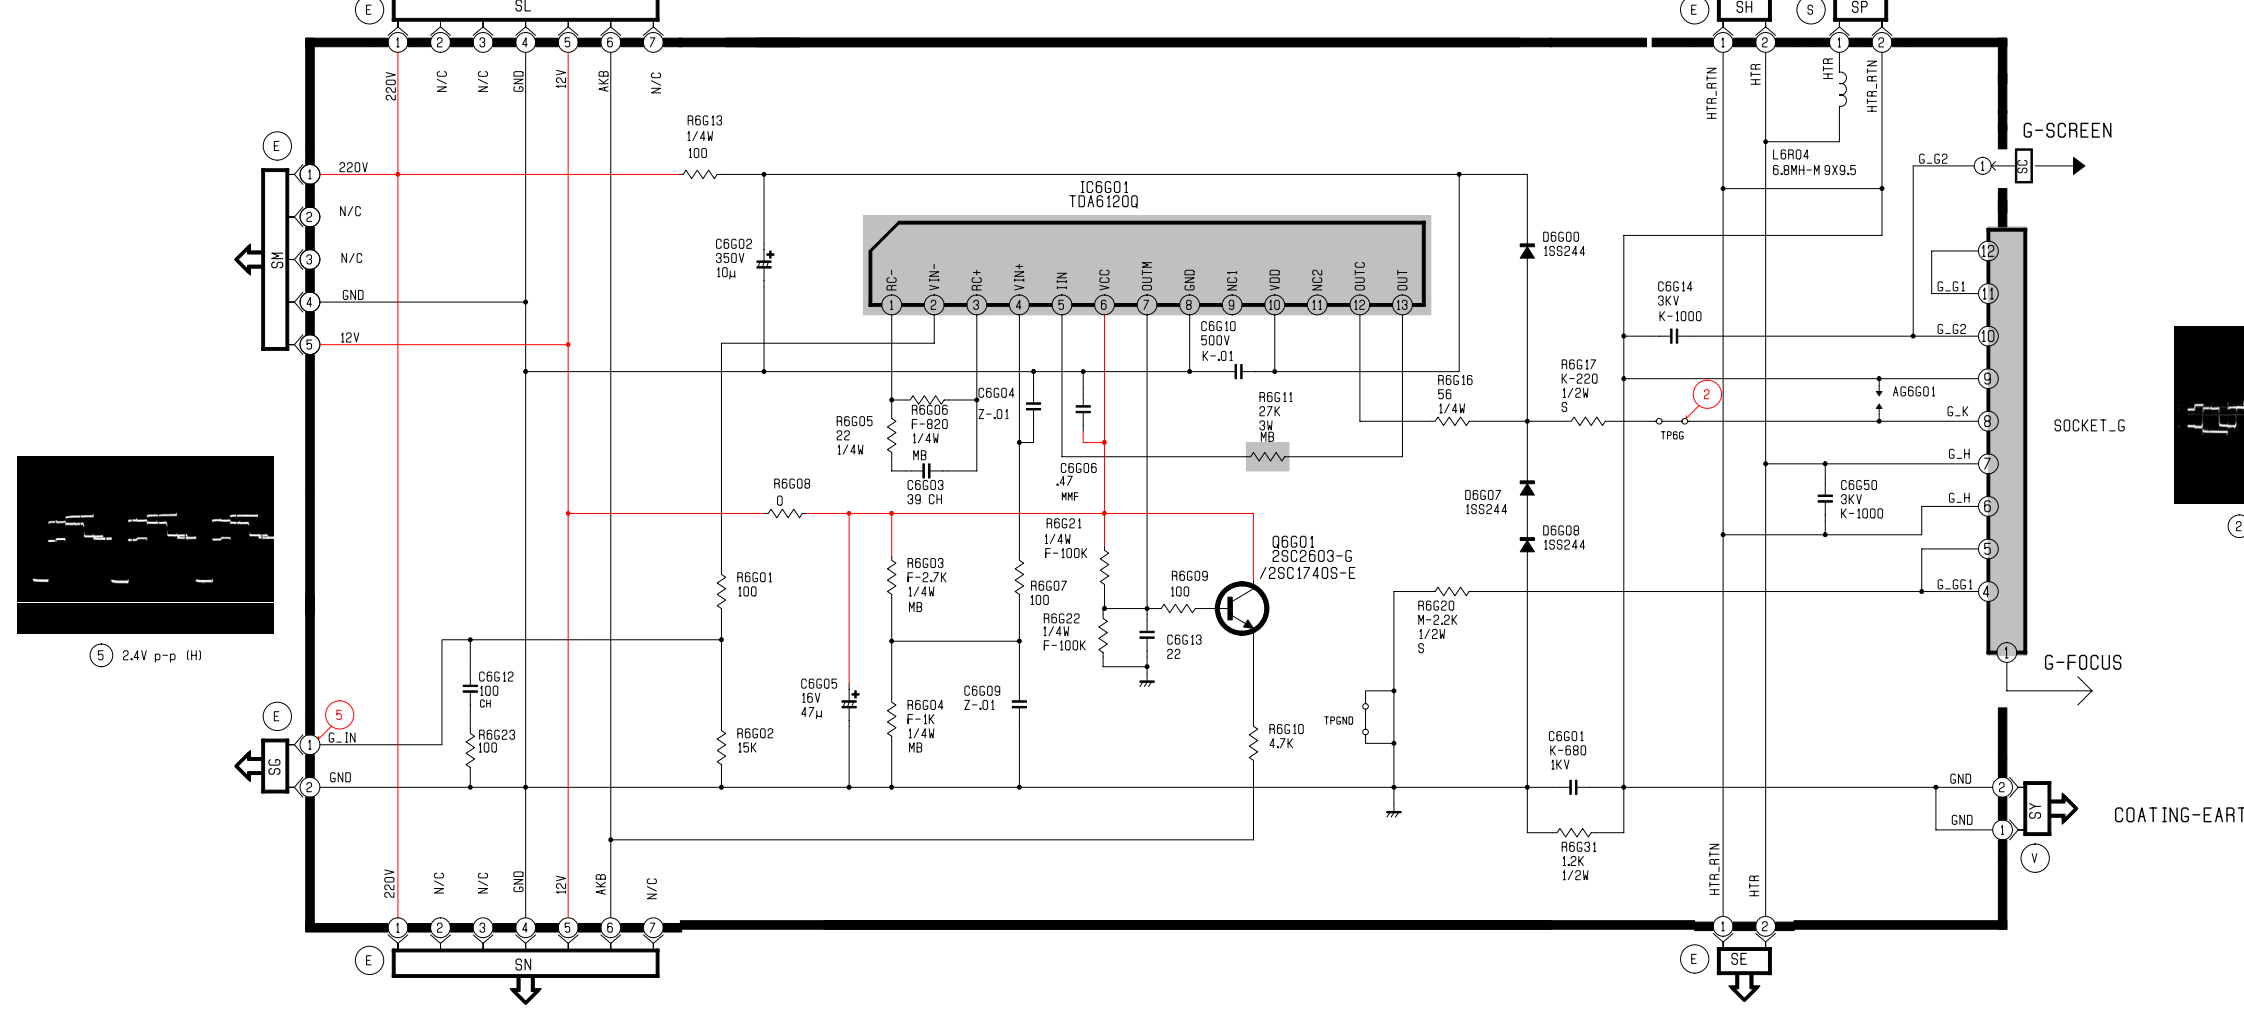


PWB-DBF

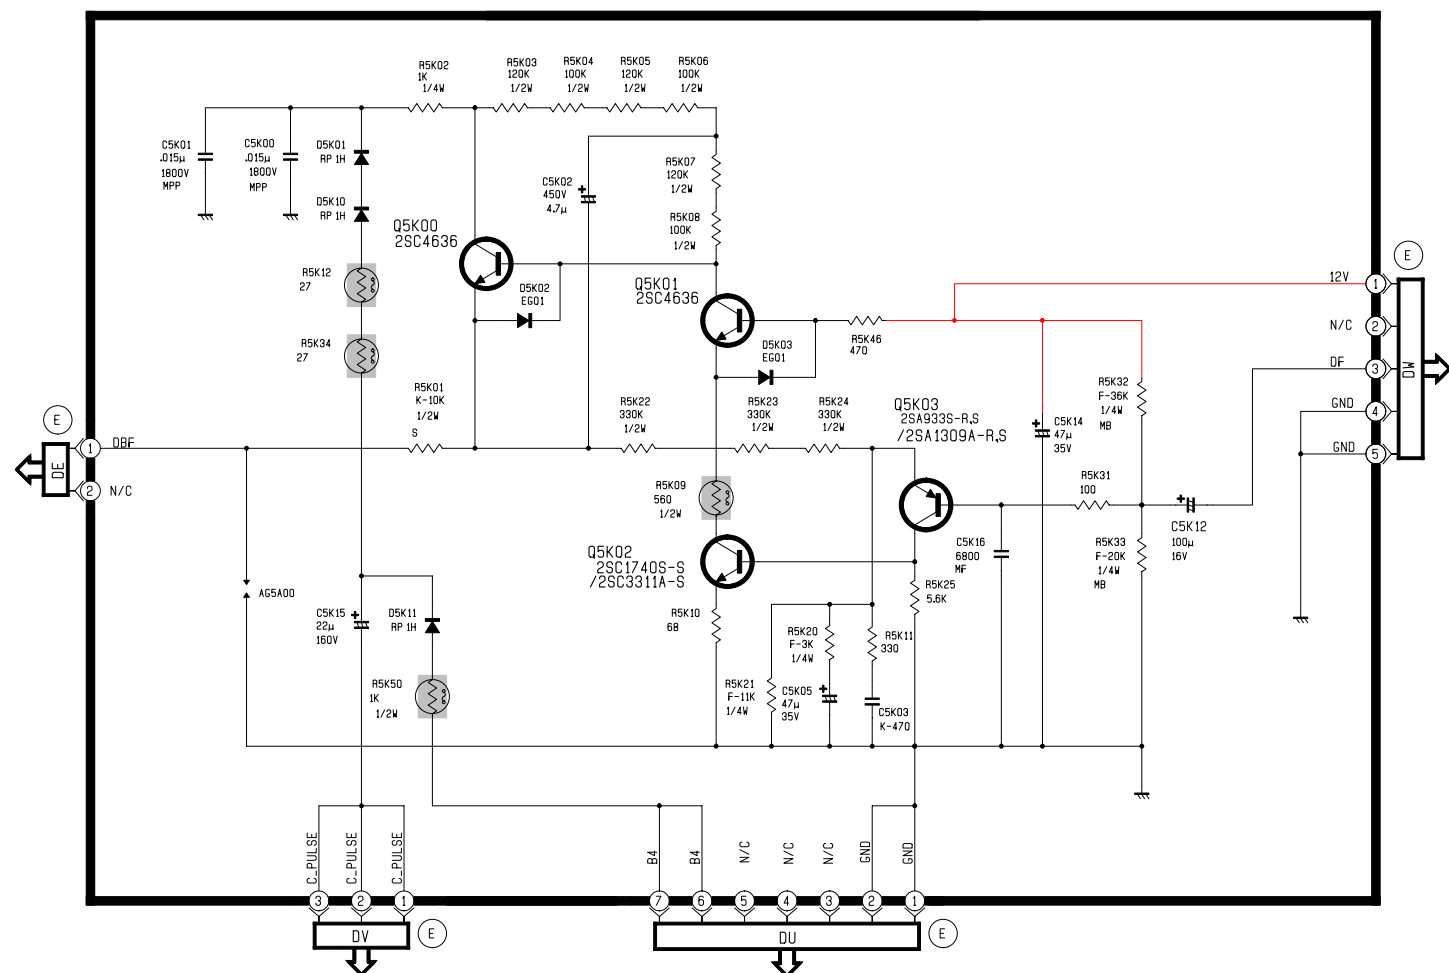


PWB-CRT (B)

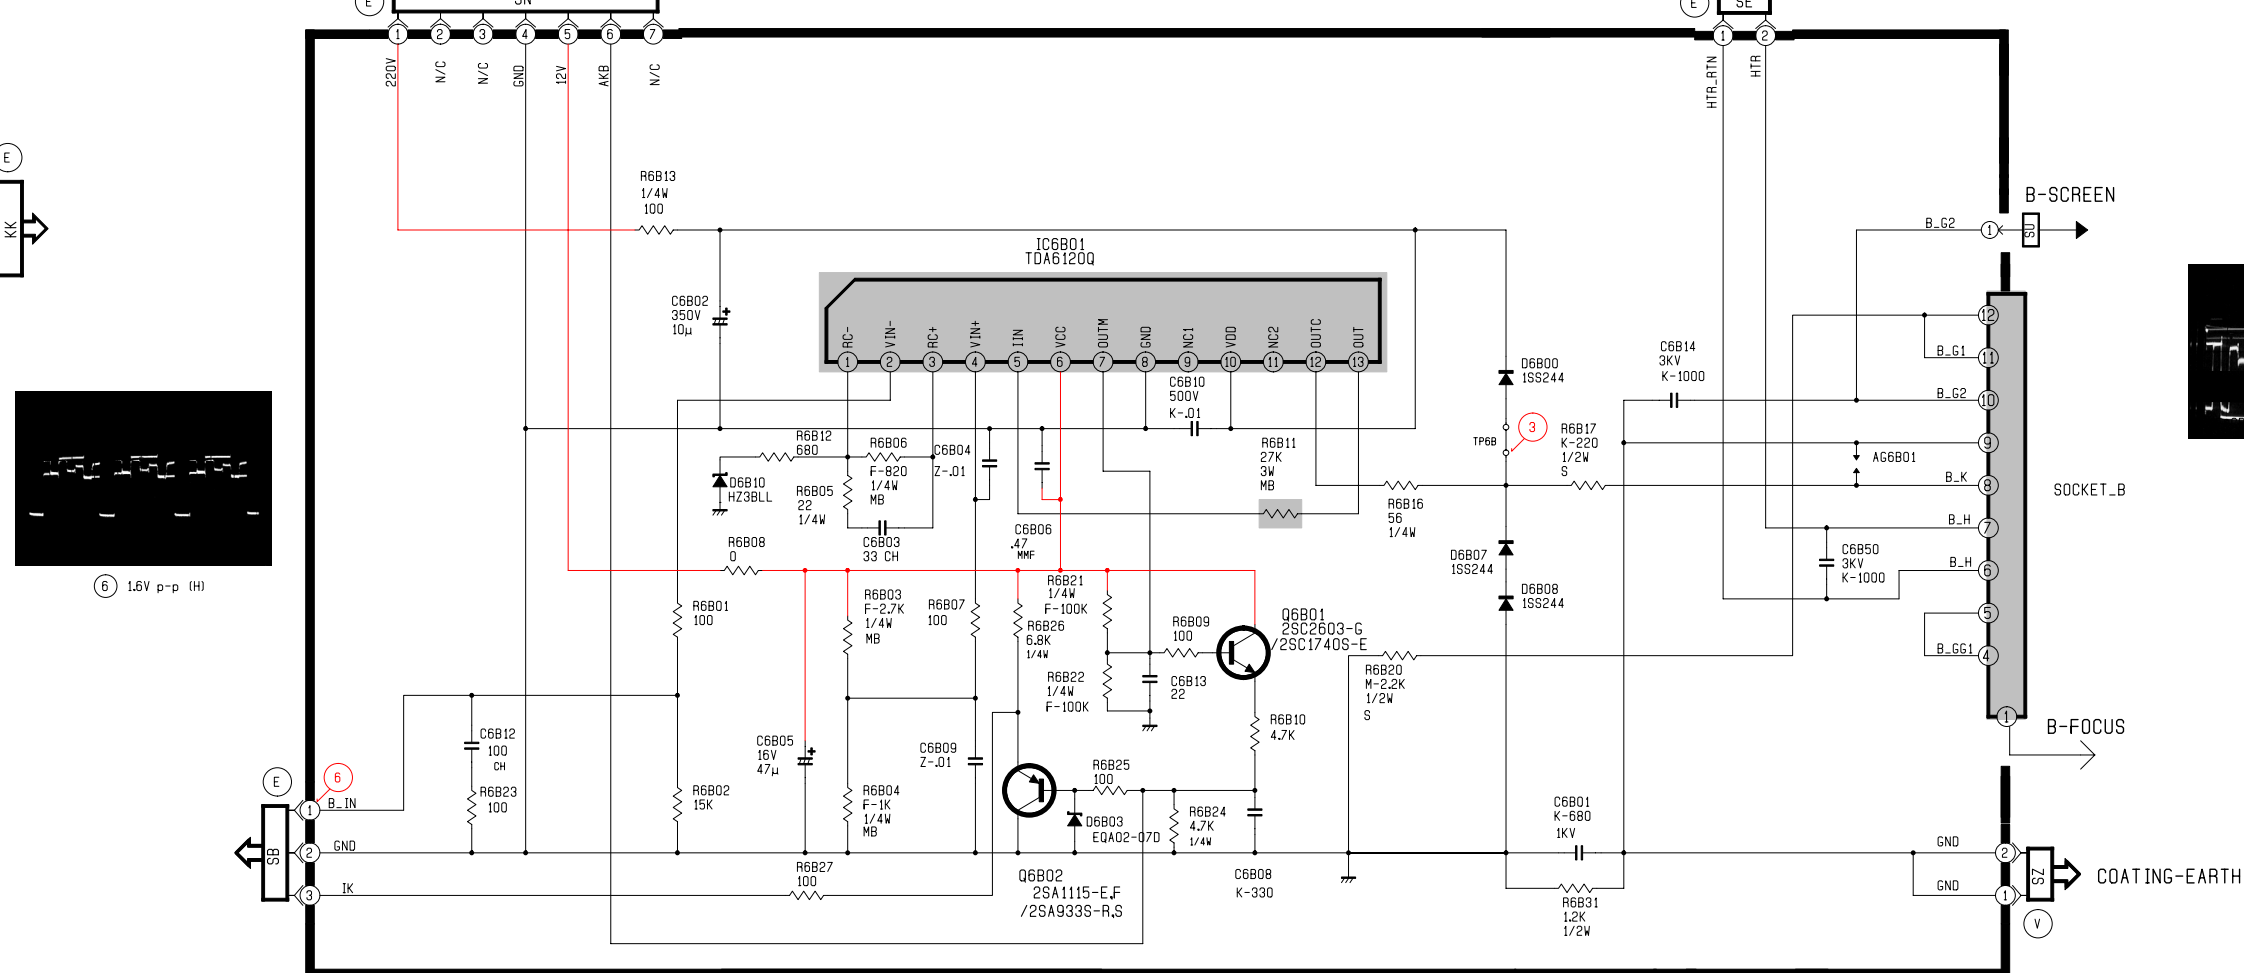


PWB-UNI

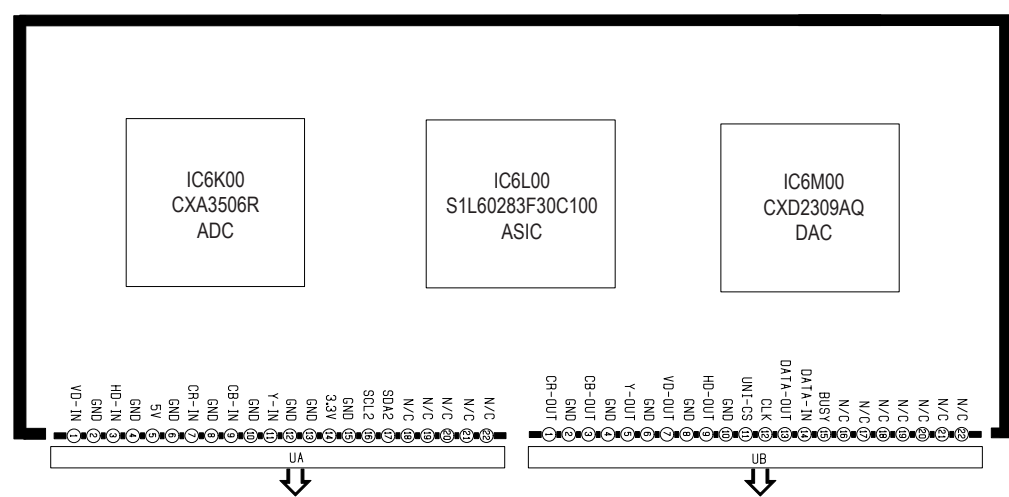

PWB-PREAMP

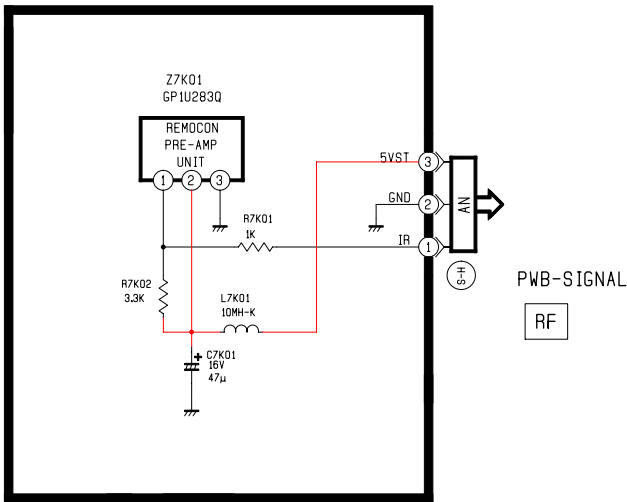

PWB-SVM

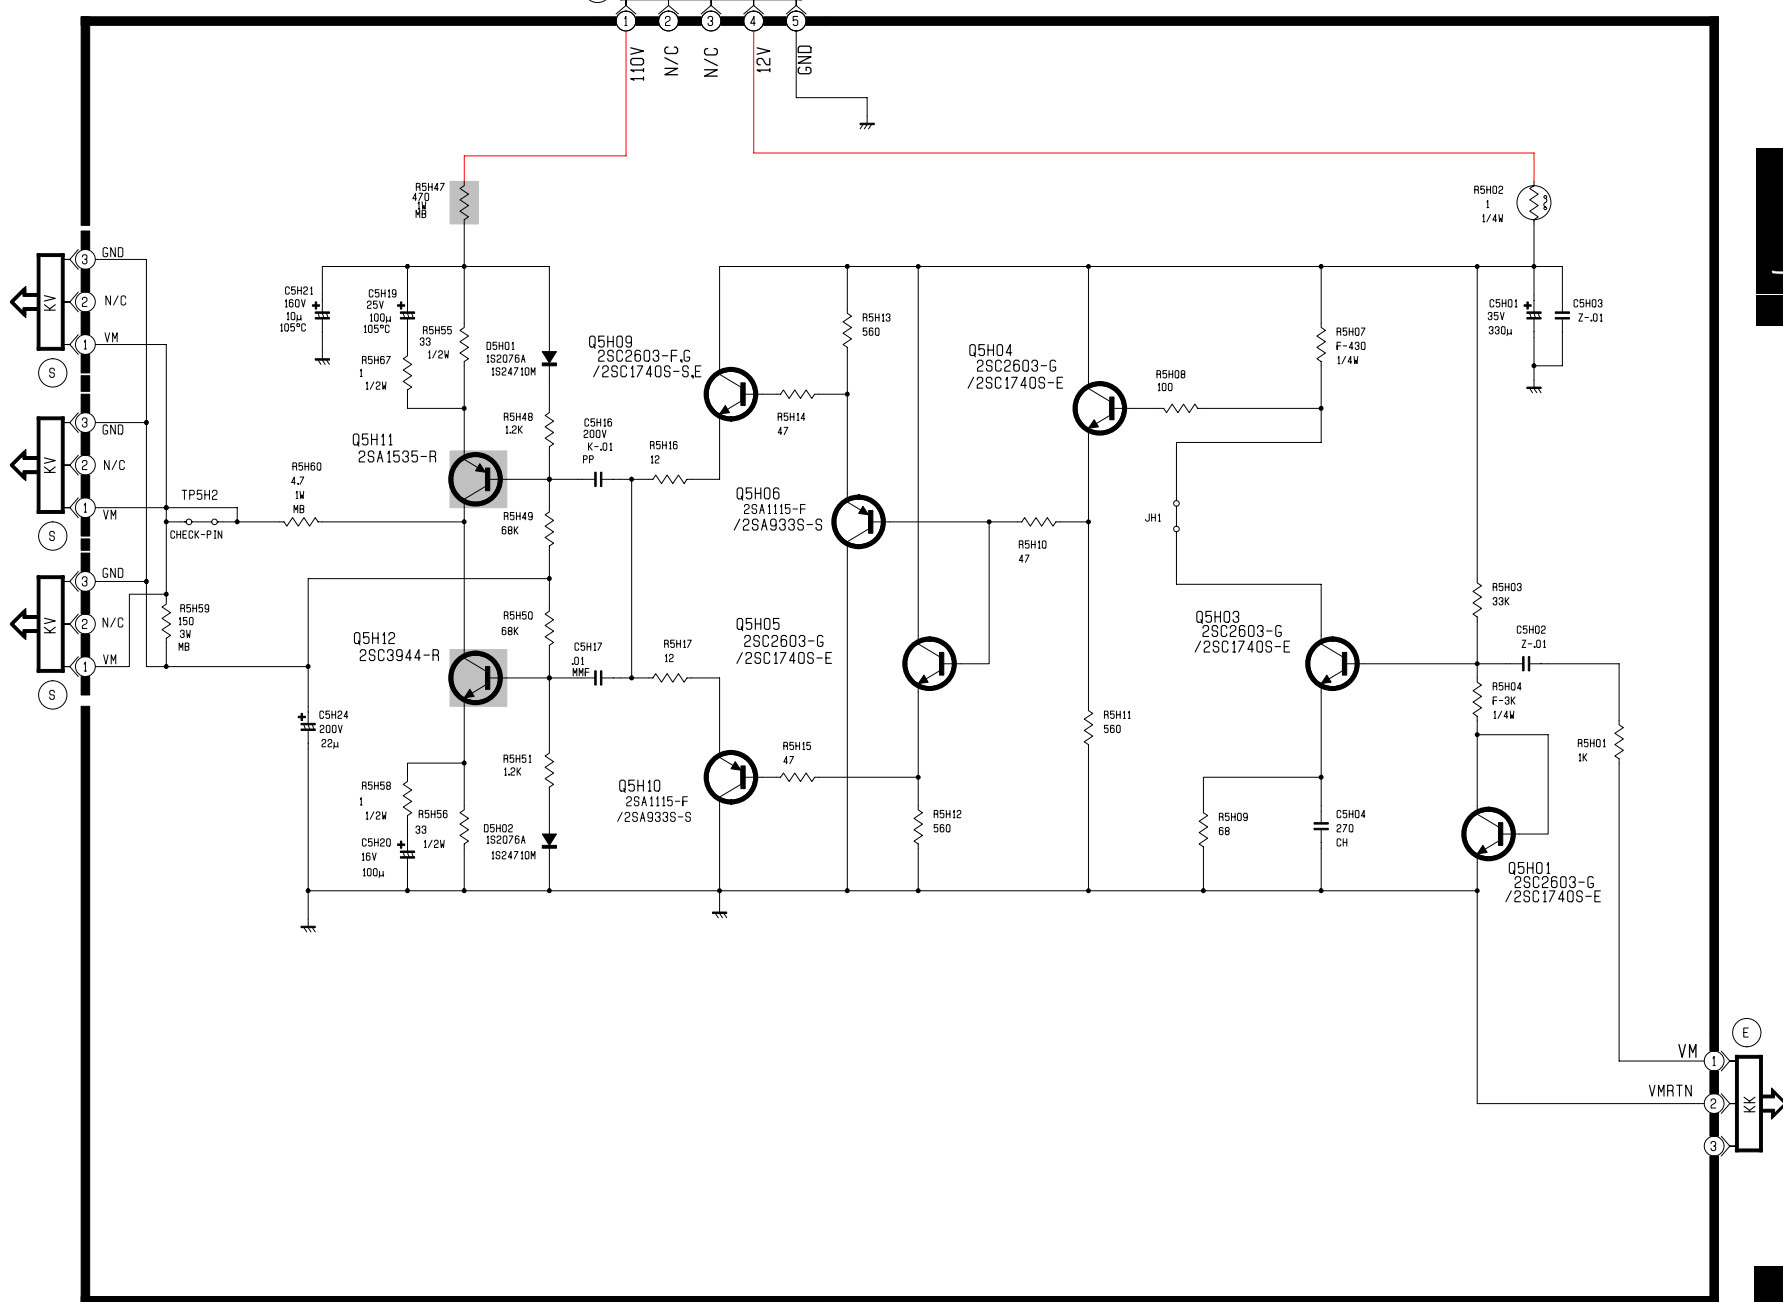


CONTENTS	
PG.1...	BLOCK DIAGRAM
PG.2...	MAIN
PG.3...	POWER
PG.4...	TERMINAL-1 (INPUT SW)
PG.5...	TERMINAL-2 (30V)
PG.6...	SIGNAL-1 (AV 1/10)
PG.7...	SIGNAL-2 (MICRO)
PG.8...	SIGNAL-3 (VIDEO/CHROMA)
PG.9...	SIGNAL-4 (CONV GEN)
PG.10...	CRT/CONTROL/FRONT/PREAMP
PG.11...	DOUBLER-1 (IN)
PG.12...	DOUBLER-2 (MAIN)
PG.13...	DOUBLER-3 (OUT)


MODEL
WT-42311
WT-A42

*****Masked*****Model# WT-42311 (PAGE 10) ** This is printed in BLACK ink *****Masked*****



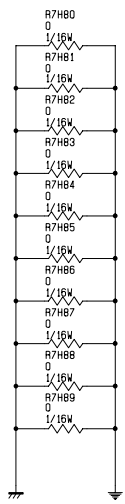

- M17
- M16
- M15
- M14
- M13
- M12
- M11
- M10
- M9
- M8
- M7
- M6
- M5
- M4
- M3
- M2
- M1
- M0
- M17
- M16
- M15
- M14
- M13
- M12
- M11
- M10
- M9
- M8
- M7
- M6
- M5
- M4
- M3
- M2
- M1
- M0
- M17
- M16
- M15
- M14
- M13
- M12
- M11
- M10
- M9
- M8
- M7
- M6
- M5
- M4
- M3
- M2
- M1
- M0

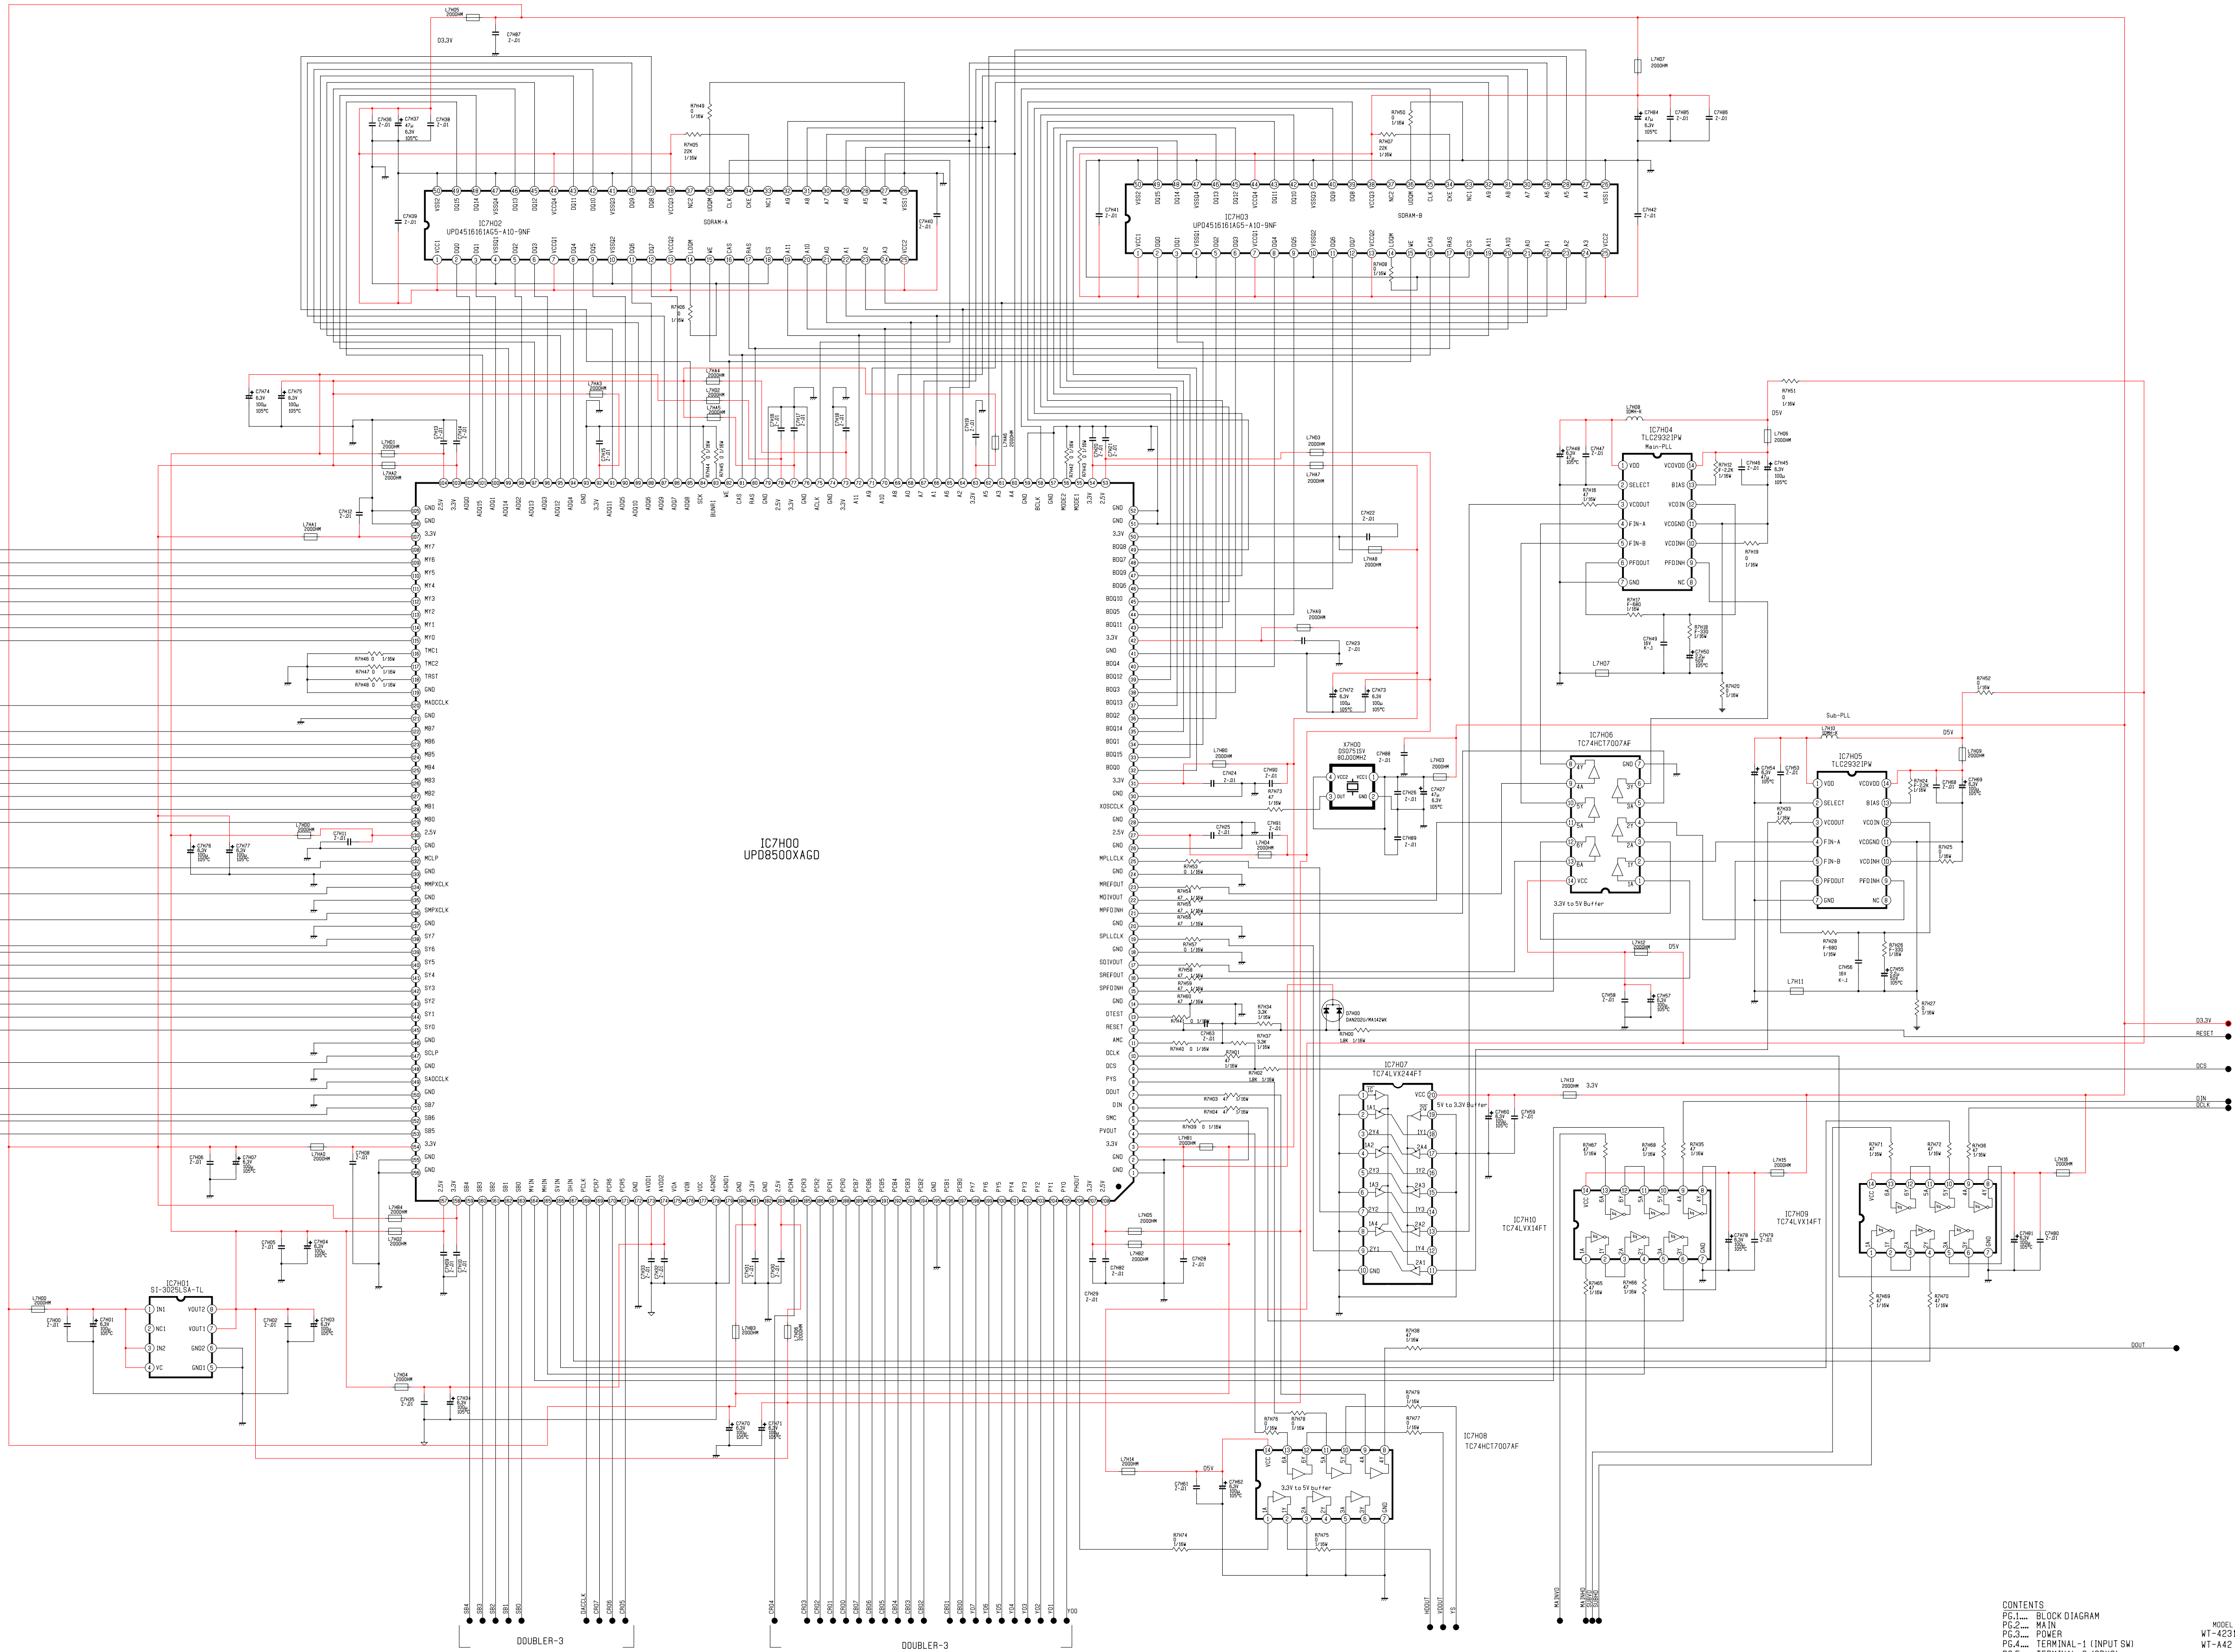


* EXCEPT WHERE NOTED, ALL OPEN-ENDED CIRCUIT PATHS CONNECT TO THE DOUBLER-1 SCHEMATIC

CONTENTS	
PG.1...	BLOCK DIAGRAM
PG.2...	MAIN
PG.3...	POWER
PG.4...	TERMINAL-1 (INPUT SW)
PG.5...	TERMINAL-2 (30V)
PG.6...	SIGNAL-1 (AV 1/0)
PG.7...	SIGNAL-2 (MICRO)
PG.8...	SIGNAL-3 (VIDEO/CHROMA)
PG.9...	SIGNAL-4 (CONV GEN)
PG.10...	CRT/CONTROL/FRONT/PREAMP
PG.11...	DOUBLER-1 (IN)
PG.12...	DOUBLER-2 (MAIN)
PG.13...	DOUBLER-3 (OUT)

MODEL
WT-42311
WT-A42

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

A
B
C
D
E
F
G
H
I
J
K

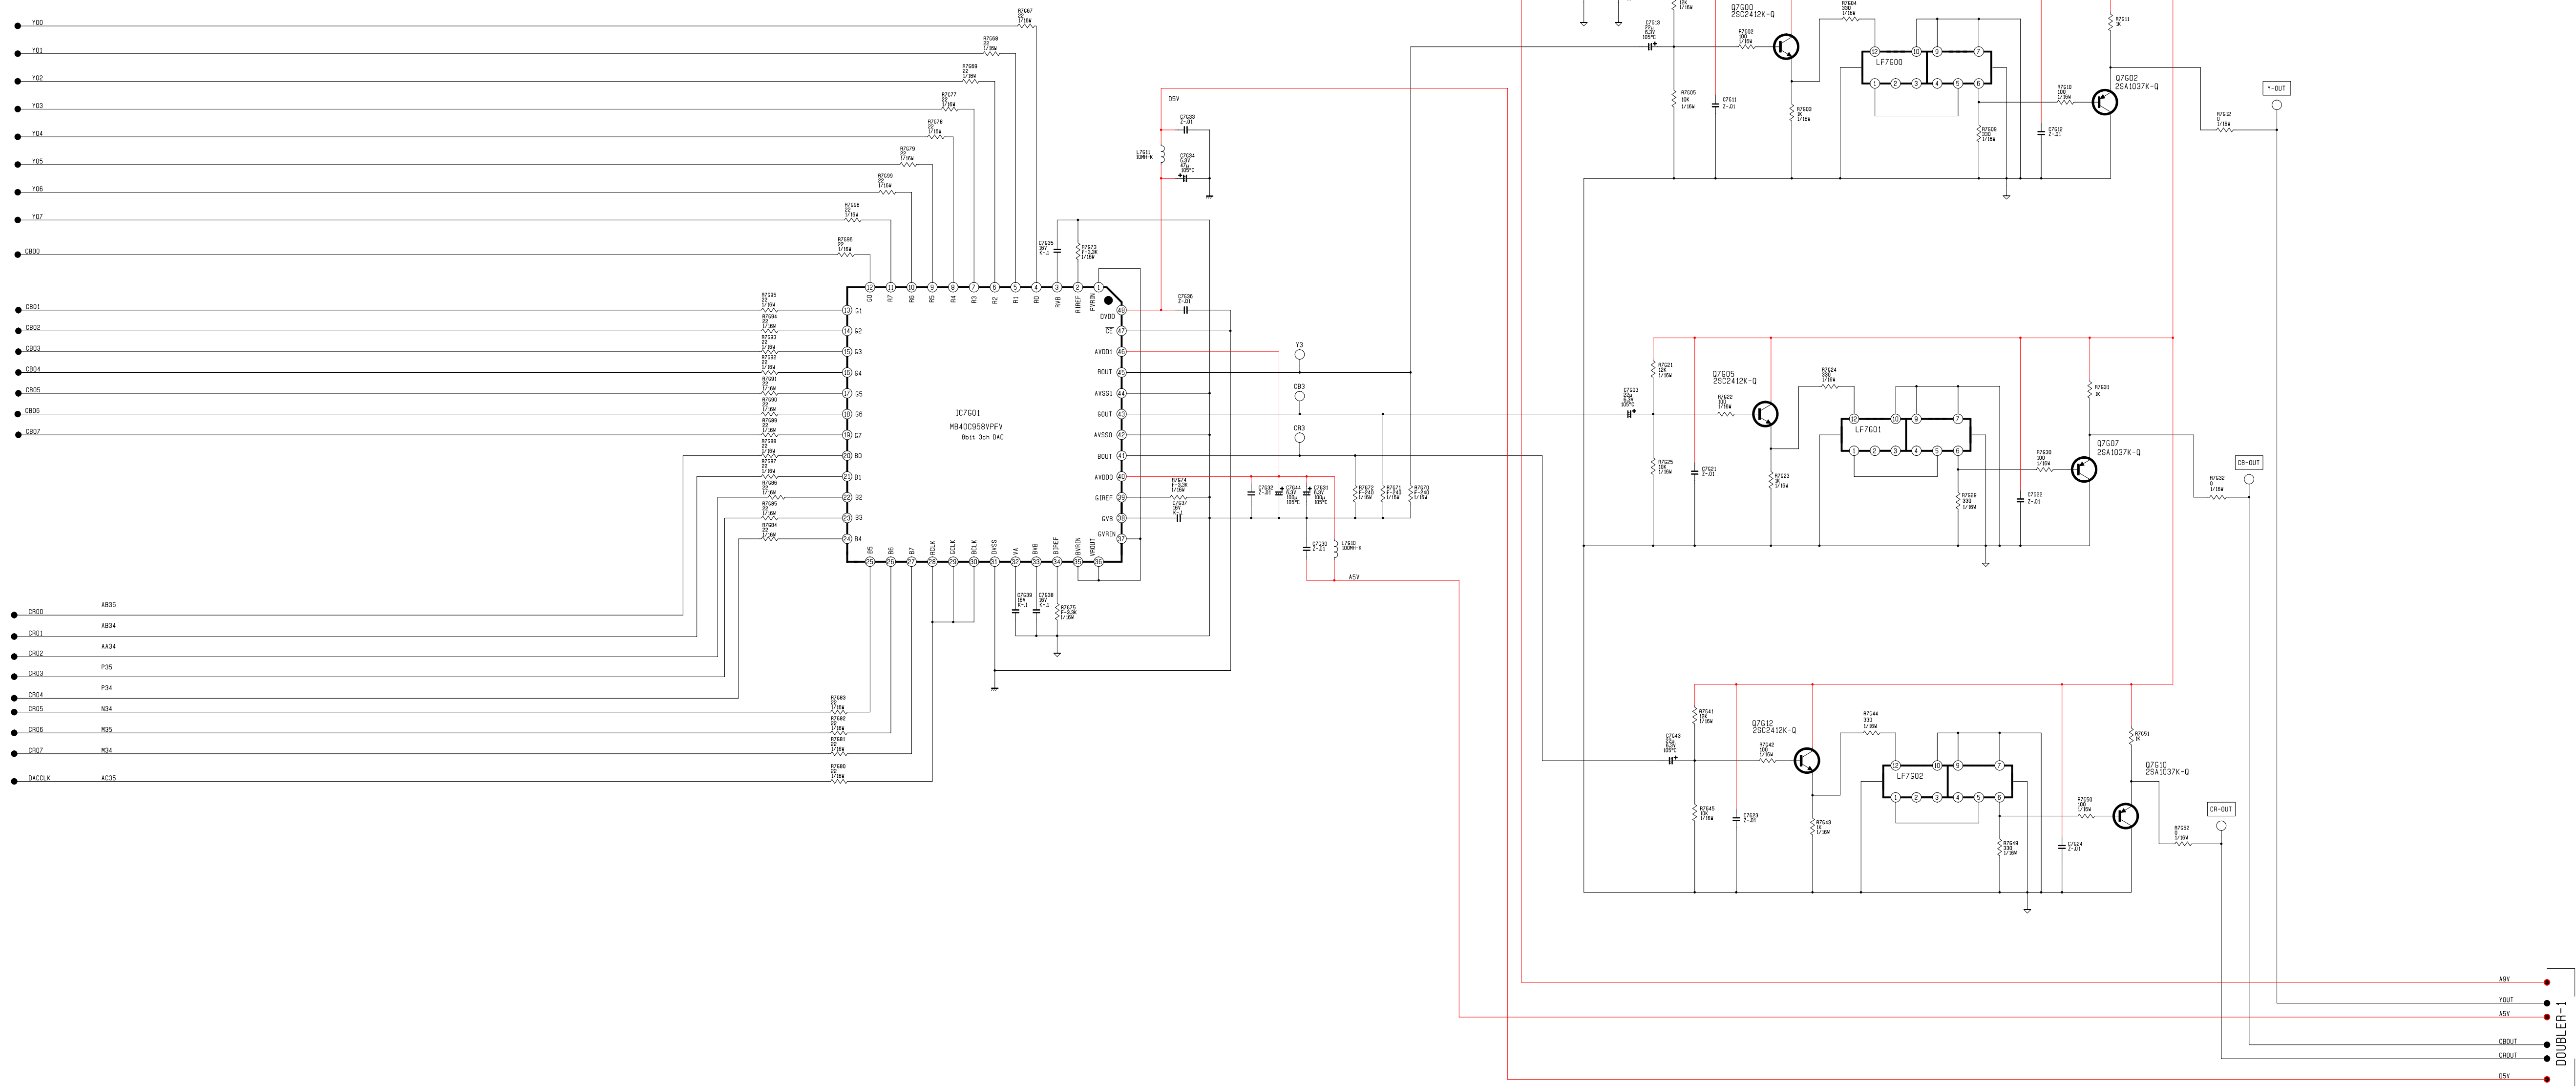

CONTENTS

INTRODUCTION	5
PRODUCT SAFETY NOTICE	5
SAFETY PRECAUTIONS	6
CABINET DISASSEMBLY	
Front View Disassembly	7
Rear View Disassembly	8
SERVICING THE LENTICULAR SCREEN AND FRESNEL LENS	
Lenticular Screen and Fresnel Lens Removal	9
Lenticular Screen and Fresnel Lens Installation	9
SERVICING PCBs	
Accessing the Main Chassis	10
PCB Locations	11
Main Components Location	11
CRT REPLACEMENT	
Second Anode Lead Removal	12
CRT Removal	12
CRT Installation	23
ELECTRICAL ADJUSTMENTS	
Test Equipment	15
Initial Setup	16
LED Indicator Diagnostics	17
Circuit Adjustment Mode	18
Convergence Adjustment Mode	19
Adjustment Items List	21
Adjustment Test Points	24
Adjustment Procedures	
High Voltage Regulation	25
Main/Sub Y Level	25
Main/Sub Color Level	26
CRT Cutoff	26
White Balance (NTSC)	27
White Balance (HD)	27
Black Level	28
Sub Contrast	28
Dynamic Focus Preset	29
Lens Focus	29
Electrostatic Focus	30
On Screen Display Character Position	30
Deflection/Convergence Geometry Presets	31
Deflection Circuit Geometry Adjustments	32
Convergence Circuit Geometry Adjustments	43
Centering and Static Convergence	34
Coarse Convergence Adjustments	35
Fine Convergence Adjustments	36
CHIP PARTS REPLACEMENT	37

REPLACEMENT PARTS

Parts Ordering	38
Critical and Warranty Parts Designation	38
Parts Tolerance Codes	38
Replacement Part Notes	
When replacing the RF-Switch or PCB-SIGNAL	38
When replacing the EEPROM	38
Quick Reference List	39
Service Parts List	40
Screen Parts List	51

CIRCUITRY BLOCK DIAGRAMS

Power Supply	52
Video / Color Signal Path	53
Sync Signal Path	54
Deflection / HV	55
X-Ray Protect	56
HV Regulation	57
Sound Signal Path	58
Convergence	59
Control Circuitry	60

Section 2 Schematic Diagrams

SCHEMATIC DIAGRAMS

Overall Block Diagram	1
PCB-MAIN	2
PCB-POWER	3
PCB-TERMINAL (Input Sw)	4
PCB-TERMINAL (3DYC / Decoders)	5
PCB-SIGNAL-1 (AV I.O)	6
PCB-SIGNAL-2 (Micro)	7
PCB-SIGNAL-3 (VCJ)	8
PCB-SIGNAL-4 (Convergence Generator)	9
PCBs - FRONT / CONTROL / CRT / PREAMP	10
PCB-DOUBLER-1 (Input)	11
PCB-DOUBLER-2 (Main)	12
PCB-DOUBLER-3 (Output)	13

PCB LAYOUT DIAGRAMS	14
---------------------------	----

INTRODUCTION

This service manual provides service instructions for PTV Models WT-42311 and WT-A42 using the VK20 chassis. Service personnel should read this manual thoroughly before servicing this chassis.

This service manual includes:

1. Assembly and disassembly instructions for the front and rear cabinet components.
2. Servicing of the Lenticular Screen and Fresnel Lens.
3. Servicing printed circuit boards (PCBs).
4. CRT replacement procedure.
5. Electrical adjustments.
6. Chip parts replacement procedures.
7. Circuit path diagrams.

The parts list section of this service manual includes:

1. Cabinet and screen parts.
2. Electrical parts.

Schematic and block diagrams of the above listed models are included in this service manual for better understanding of the circuitry. PCB drawings are also included for easy location of parts and test points.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have special safety characteristics are identified in this service manual.

Electrical components having such features are identified by shading  on the schematic diagram and by **bold type** in the parts list of this service manual. **The replacement for any safety part should be identical in value and characteristics.**

SAFETY PRECAUTIONS

NOTICE: Observe all cautions and safety related notes located inside the receiver cabinet and on the receiver chassis.

WARNING:

1. Operation of this receiver outside the cabinet or with the cover removed presents a shock hazard from the receiver's power supplies. Work on the receiver should not be attempted by anyone who is not thoroughly familiar with the precautions necessary when working on high voltage equipment.
2. Do not install, remove or handle the picture tubes in any manner unless shatterproof goggles are worn. People not so equipped should be kept away while the picture tube is being handled. Keep the picture tube away from the body while handling.
3. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage area. Where a short-circuit has occurred, replace those components that indicate evidence of overheating.

X-Radiation warning

The surface of the cathode ray tubes (CRTs) may generate X-Radiation, so take proper precautions when servicing. It is recommended that a lead apron be used for shielding while handling the CRT. Use this method if possible.

When replacing the CRTs, use only the designated replacement part since it is a critical component with regard to X-Radiation. High voltage must be set as prescribed under the section titled Electrical Adjustments.

Leakage current check


Before returning the receiver to the customer, it is recommended that leakage current be measured according to the following methods.

1. Cold Check

With the alternating current (AC) plug removed from the AC source, place a jumper across the two AC plug prongs. Connect one lead of an ohm meter to the AC plug and touch the other lead to each exposed metal part (i.e. antennas, handle bracket, metal cabinet, screw heads, metal overlay, control shafts, etc.), particularly any exposed metal part that has a return path to the chassis. The resistance of the exposed metal parts having a return path to the chassis **should be a minimum of 1 Mega Ohm**. Any resistance below this value indicates an abnormal condition and requires corrective action.


2. Hot Check ...Use the circuit shown below to perform the hot check test.

1. Keep switch S1 open and connect the receiver to the measuring circuit. Immediately after connection, and with the switching devices of the receiver in their operating positions, measure the leakage current for both positions of switch S2.
2. Close switch S1, energizing the receiver. Immediately after closing switch S1, and with the switching devices of the receiver in their operating positions, measure the leakage current for both positions of switch S2. Repeat the current measurements of items 1 and 2 after the receiver has reached thermal stabilization. **The leakage current must not exceed 0.5 milliampere (mA).**

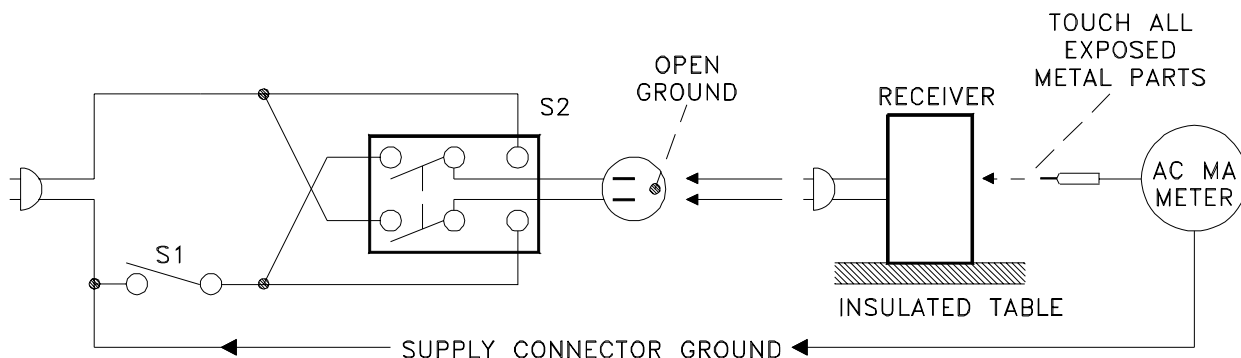

CABINET DISASSEMBLY (FRONT VIEW)


***Refer to PARTS LIST for Part Numbers**

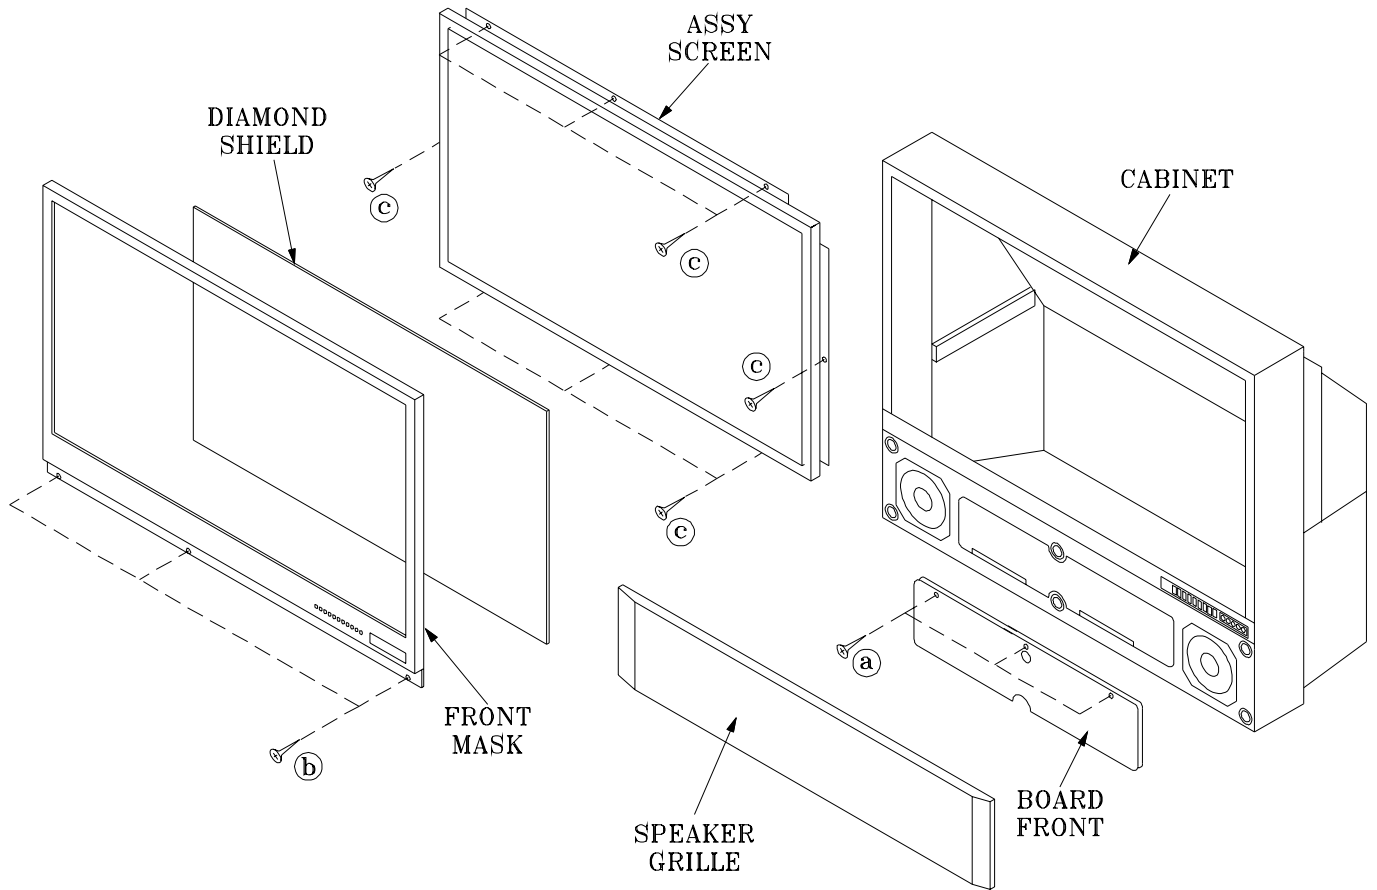

Front Cabinet Disassembly

1. Remove the Speaker Grille by pulling forward.
2. Remove the Board-Front by removing 3 screws "a".
3. Remove 3 screws "b" and then remove the Front Mask and Diamond Shield.
4. Remove 8 screws "c" and then the Assembly Screen.

CABINET DISASSEMBLY (REAR VIEW)

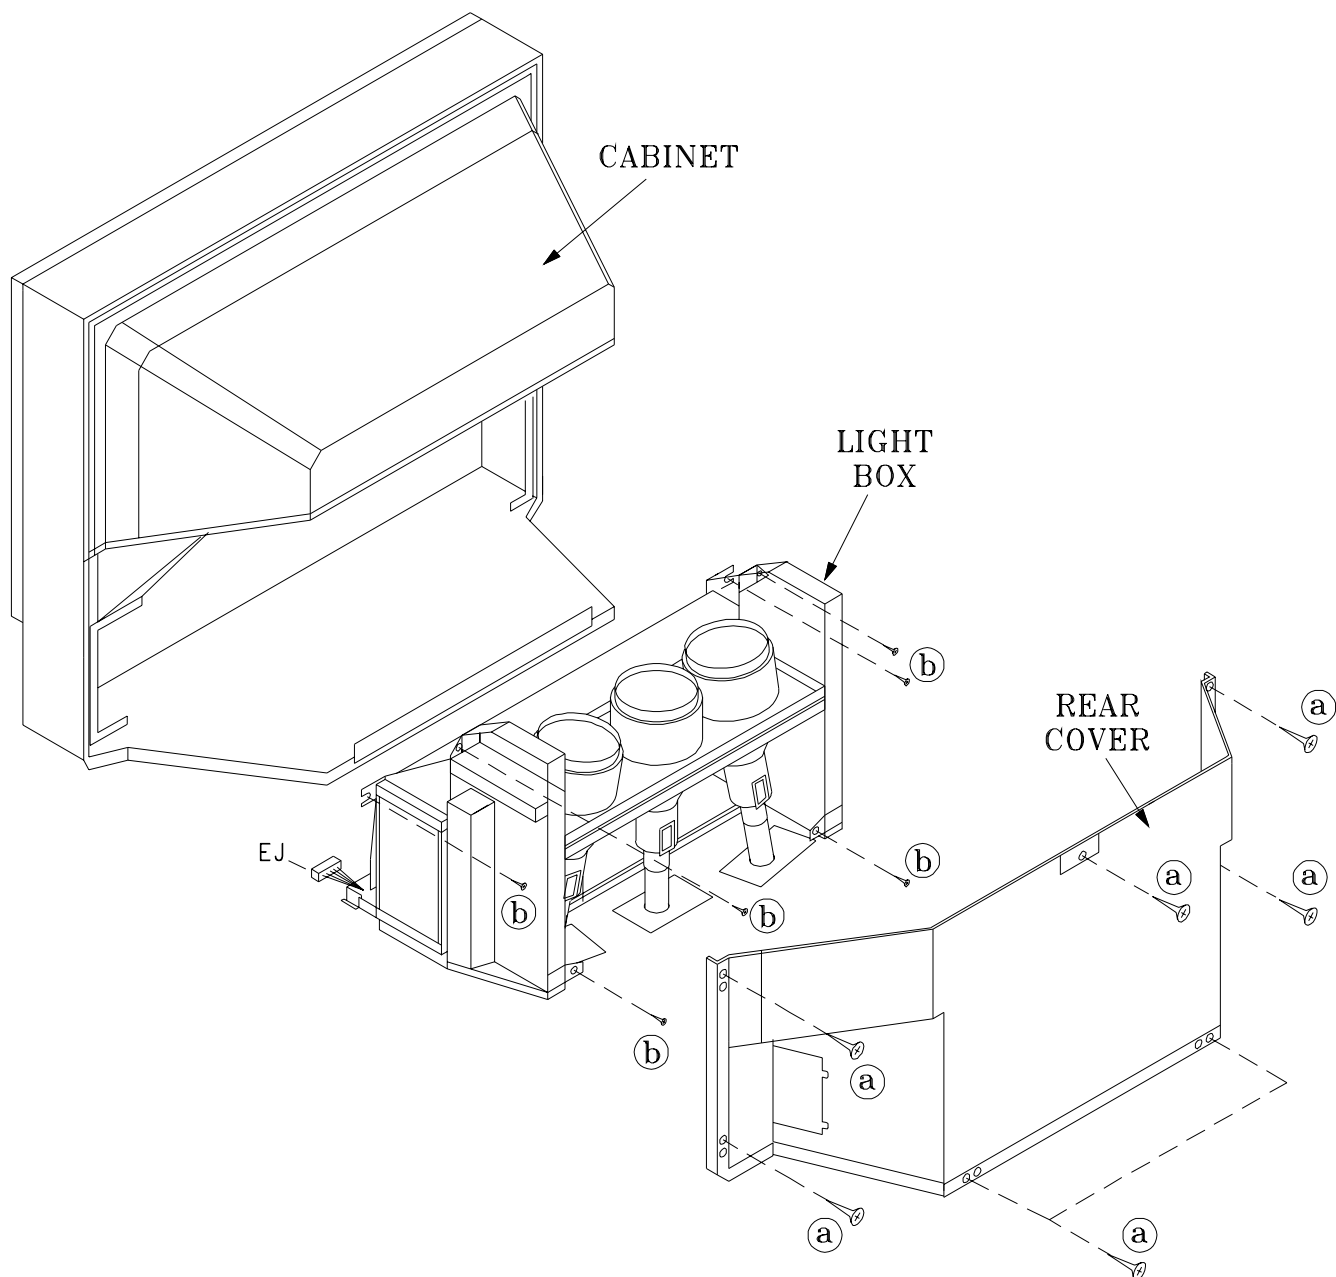

Rear Cabinet Disassembly

1. Remove the Back Board by removing screws 7 "a".
2. Remove 6 screws "b" securing the Light Box Assembly.
3. Disconnect connector EJ.
4. Slide the Light Box Assembly out of the cabinet.


SERVICING THE LENTICULAR SCREEN AND FRESNEL LENS

CAUTION: **Wear gloves** when handling the Lenticular Screen and Fresnel Lens.
This prevents cuts and finger prints. **Do not place Fresnel Lens in the sun.**
This may cause fire and heat related injuries.

1. Lenticular Screen and Fresnel Lens Removal

1. Remove the screen assembly as shown in the Cabinet Front Disassembly procedure.
2. Remove screws "a" from the bottom Corner Brackets.
3. Remove the Holder-Screen-Bottom.
4. Slide the Lenticular Screen and Fresnel Lens from the Assembly Screen as shown below..


Note: When separating the Lenticular Screen from the Fresnel Lens, use caution while prying the Screen and Lens apart. Use a slot type screw drive, and remove the pressure sensitive double sided tape.

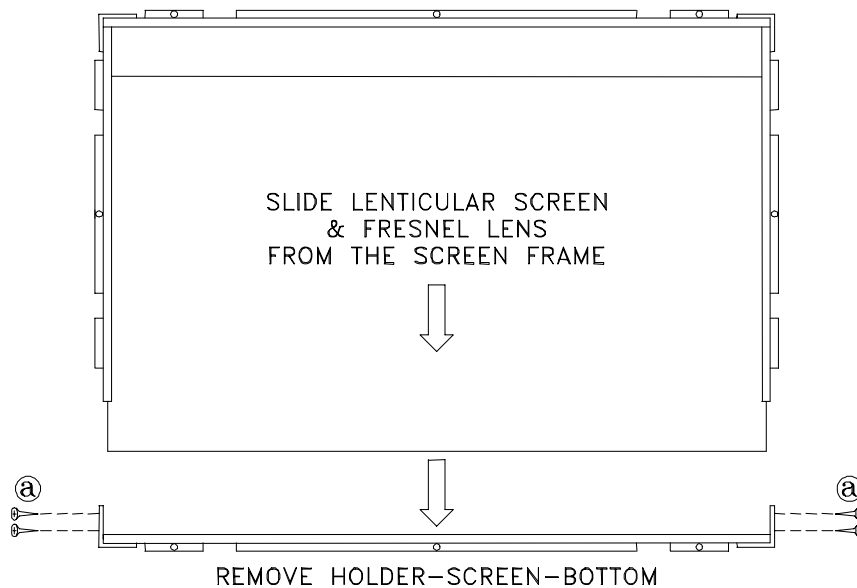

2. Installation of the Lenticular Screen and Fresnel Lens

Note: Store the Lenticular Screen and Fresnel Lens in a cool dry place. High humidity may deform the Lenticular Screen and Fresnel Lens.

1. Apply 36.5 inches of double sided tape (Part # LENS-TAPE) along the top front edge of the Fresnel Lens.
2. Place the Fresnel Lens on top of the Lenticular Screen and apply pressure at the top edge to bond them together as shown below.
3. Reverse the disassembly procedure to install the screens in the screen frame.


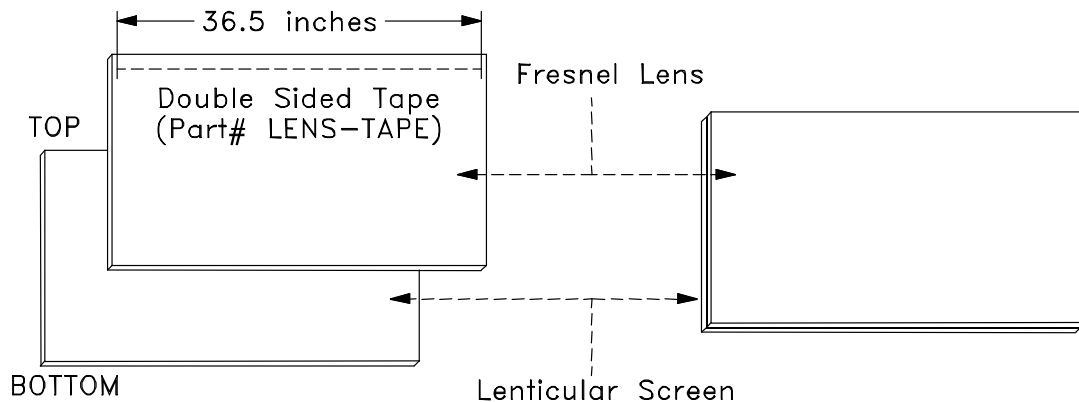


SERVICING PCBs


Accessing The Main Chassis

In the VK20 chassis, the Main Chassis is located in front of the CRTs. Use the following procedure to access the Main Chassis.


- 1) Remove the Light Box Assembly, refer to the Cabinet Rear Disassembly.
- 2) The shelf in the front of the Light Box Assembly is removable, refer to Figure 1.
- 3) Release the shelf lock. Apply pressure to the shelf lip on the right side (downward and towards the front). Refer to Figure 2
- 4) Hold both sides of the shelf, pull forward and then upward to remove the shelf.

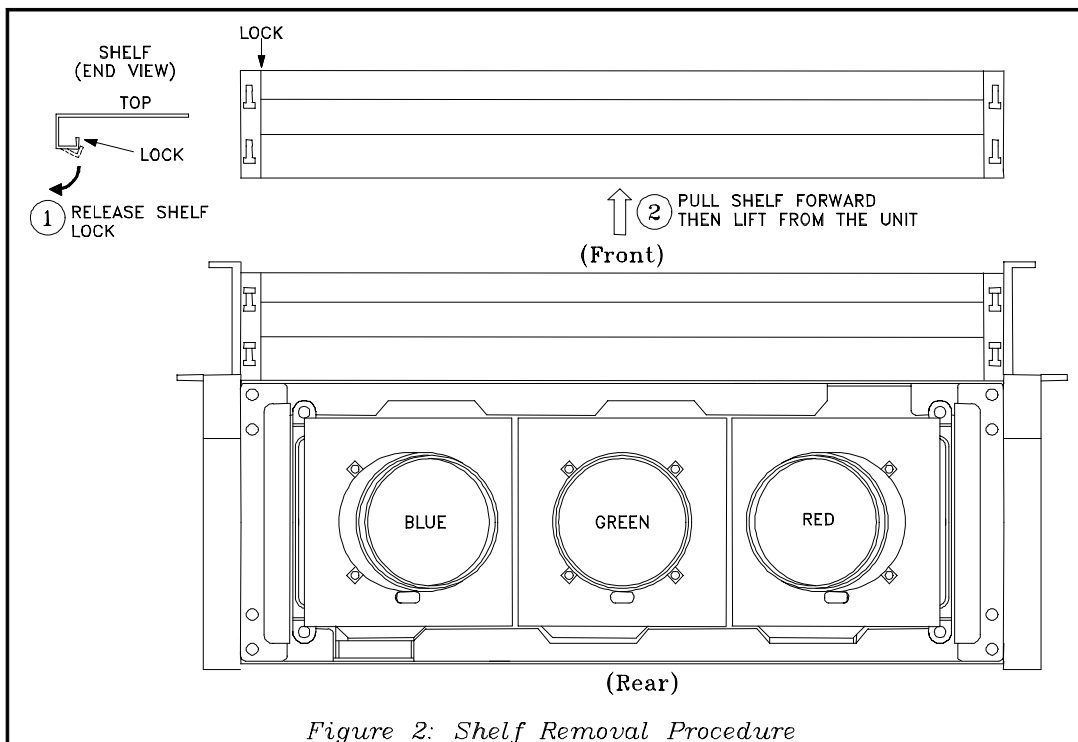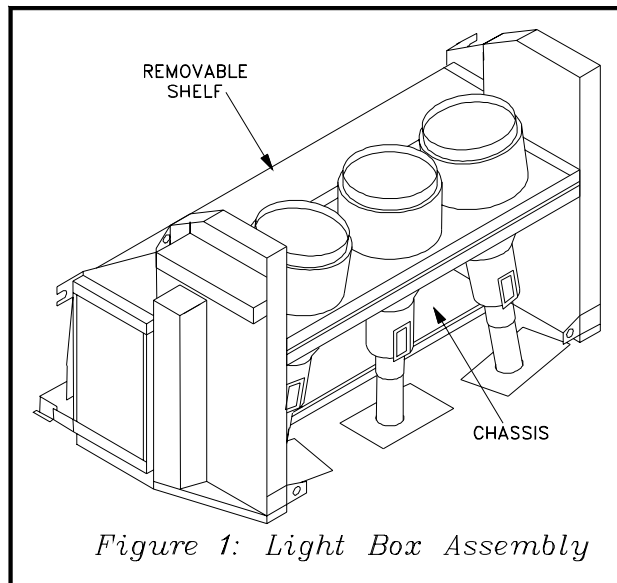

PCB Locations

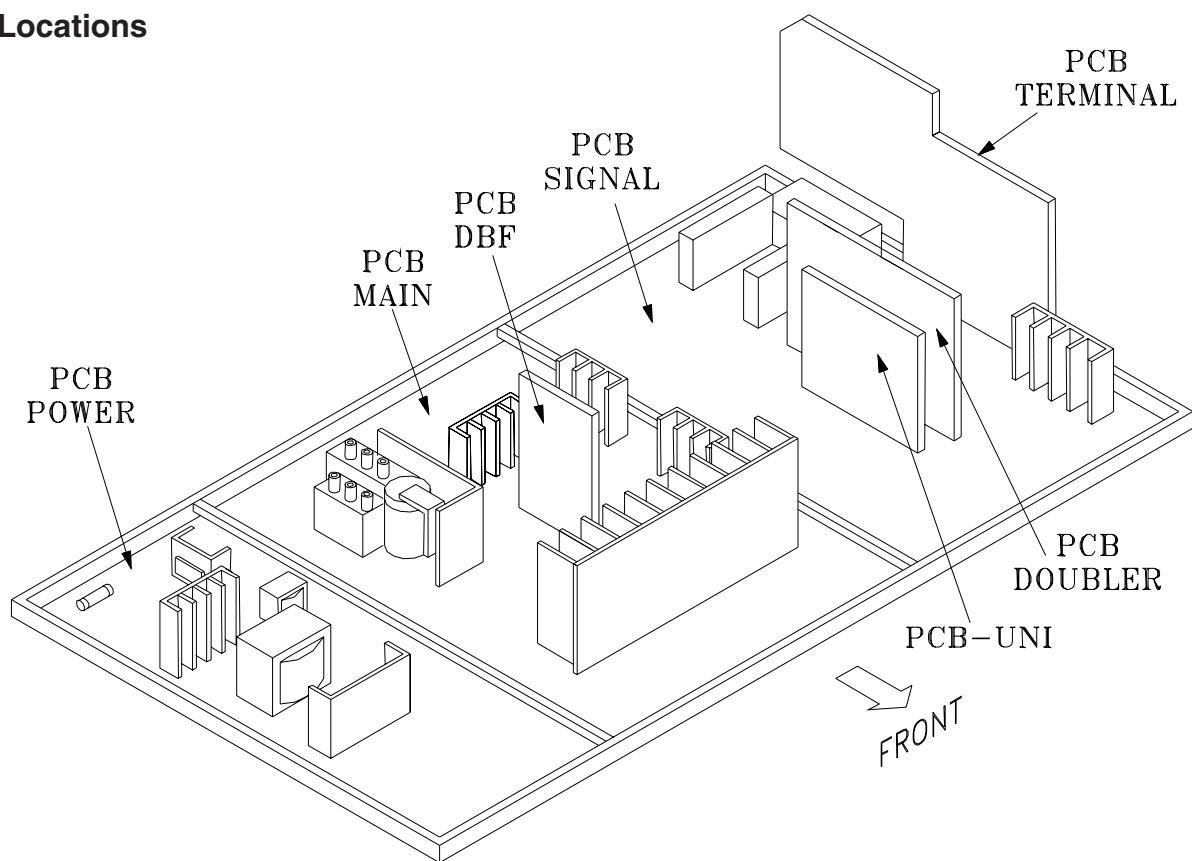


Major Parts Locations

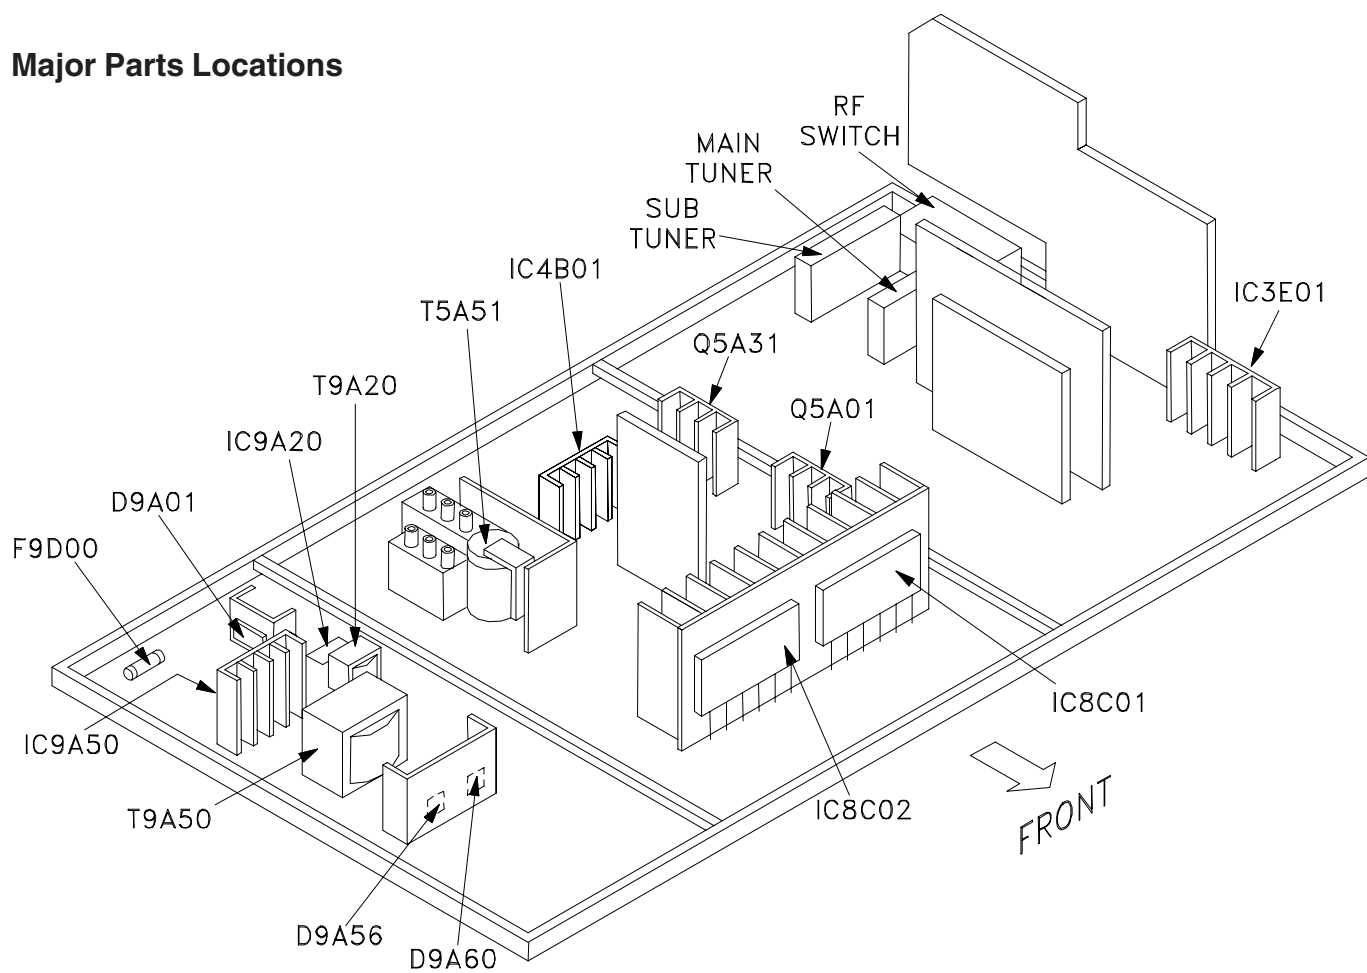

ANODE LEAD REMOVAL

CAUTION: To prevent damage, the following procedure must be used when removing an Anode Lead from the Flyback Transformer.

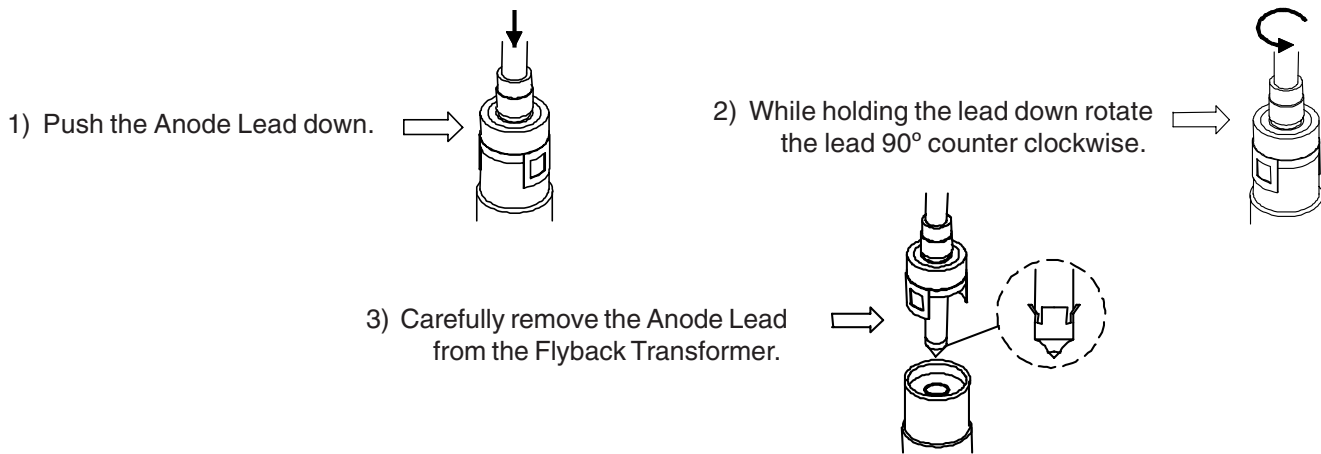

CRT REPLACEMENT


1. Removal of the CRT

Caution! High voltage should be completely discharged prior to CRT removal. Since the CRTs receive high voltage from the Flyback transformer, discharge the CRTs by shorting the open end of the respective high voltage cable to chassis ground.

1. Refer to Cabinet Disassembly and remove the Light Box Assembly.
2. Remove the three Anode Lead Wires from the Flyback transformer and discharge the CRTs. (Use the above procedure)
3. Unplug the three PCB-CRTs.
4. Remove 4 screws "a" retaining the Optical Unit. [Figure 1]
5. Remove 4 screws "b" retaining the Lens of the respective CRT
6. Lift the Optical Unit from the Light Box and set it lens down on a flat surface.
7. Remove 4 screws "c" retaining the CRT. [Figure 2]


Note: **DO NOT loosen the spring loaded screws.** Doing so will break the seal between the C-Element and the # 6 Lens, causing leakage of the CRT Coolant.

8. Remove the Deflection Yoke from the neck of the CRT. [Figure 3]

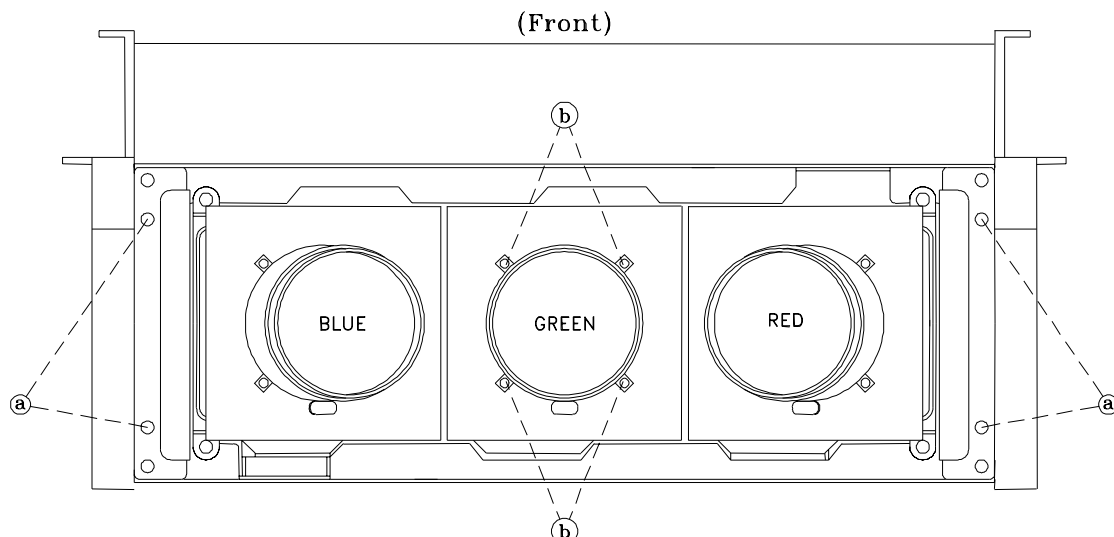

LIGHT BOX (Top View)

Figure 1

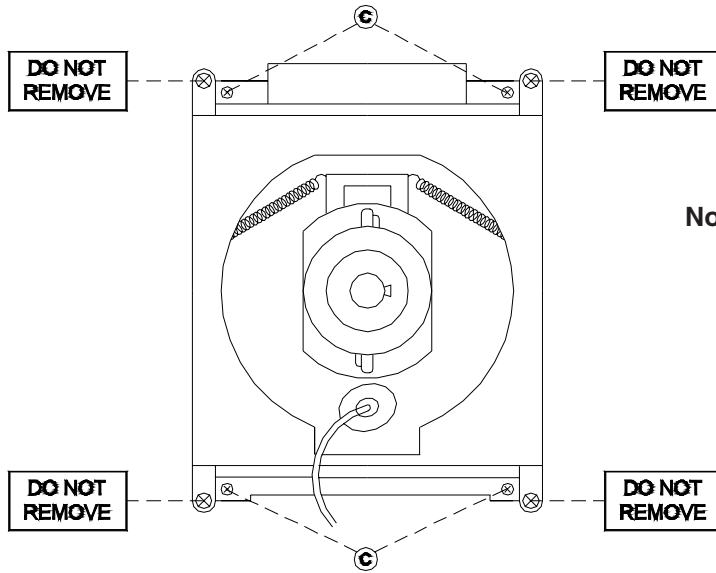

Note: The 4 spring-loaded screws shown in Fig 2 and labeled as "DO NOT REMOVE", should not be loosened under any circumstance. Doing so will break the seal between the CRT and the CRT-Spacer, causing leakage of the CRT Coolant.

Figure 2

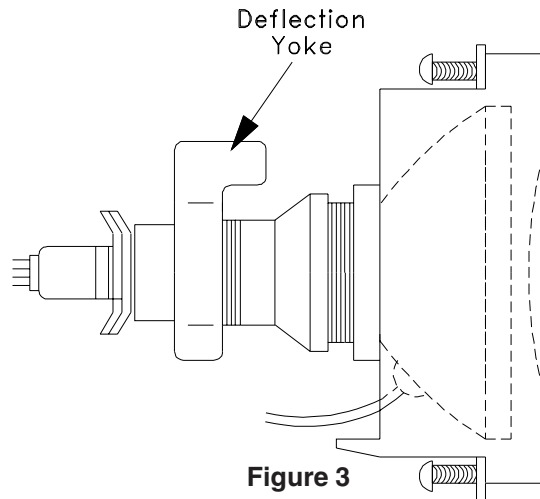


Figure 3

2. Installation of the CRT

Note: The replacement CRT is supplied as an assembly comprised of the CRT and the Inner Lens with the space between them filled with ethylene glycol. Care should be taken during handling and installation to prevent shock from disrupting the seal or alignment between the CRT and Inner Lens. [Figure 4]

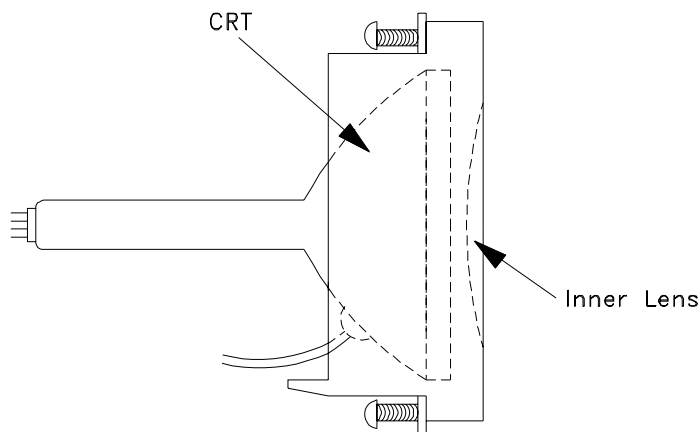


Figure 4

1. Carefully position the replacement CRT and fasten in place using 4 screws "c". [Figure 2]
2. Install the Deflection Yoke on the CRT neck. [Figure 3]
3. Install the Lens that was removed in step 5 of Removal of the CRT.
 - a) Position the Lens so that the Lens Adjustment Set Screw faces the rear of the TV [Figure 5].
 - b) Install the Lens mounting screws "b". [Figure 1]
4. Insert the Optical Unit into the Light Box Assembly and secure it with 4 screws "a" [Figure 1].
5. Plug in the PCB-CRTs.
6. Insert the Anode Lead Wires into the Flyback Transformer.
7. Re-clamp the Lead Wire in its original position.

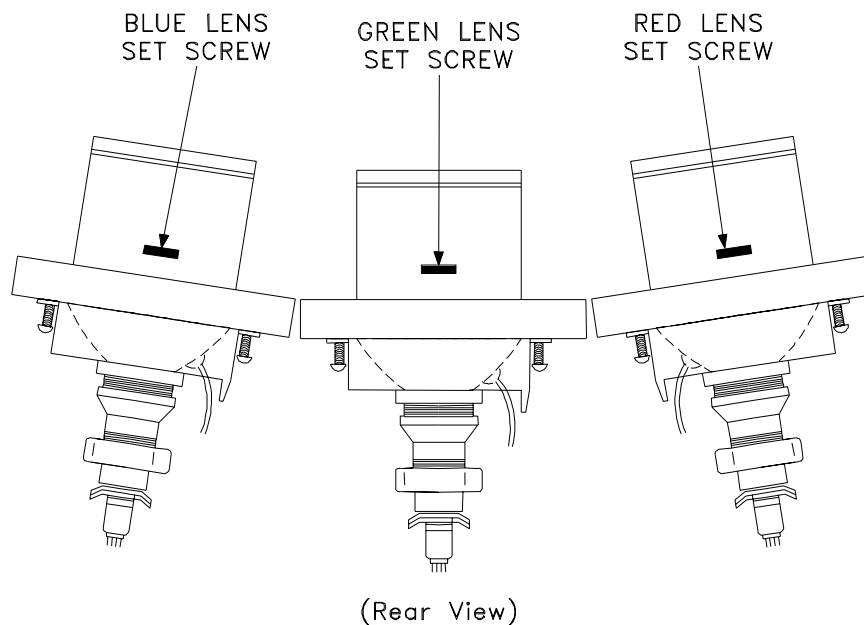


Figure 5

Adjustment procedures after replacing the CRT(s)

- CRT Cut Off / White Balance Adjustment
- Static Convergence Adjustment
- Dynamic Convergence Adjustment

ELECTRICAL ADJUSTMENTS

Note: Perform only the adjustments required.
Do not attempt an alignment if proper equipment is not available.


1. Test Equipment

- Oscilloscope (Unless otherwise specified, use 10:1 probes)
- Signal Generator (both SD and HD capable)
- Frequency Counter
- Direct Current Voltmeter
- Direct Current Power Supply
- Multiplex Audio Signal Generator
- Direct Current Ampere Meter

2. Test Signal

A. Monoscope Signal


Note: If you do not have a monoscope signal source, connect the unit to a VCR and play a Monoscope alignment tape.
(* Part Number: 859C568060)

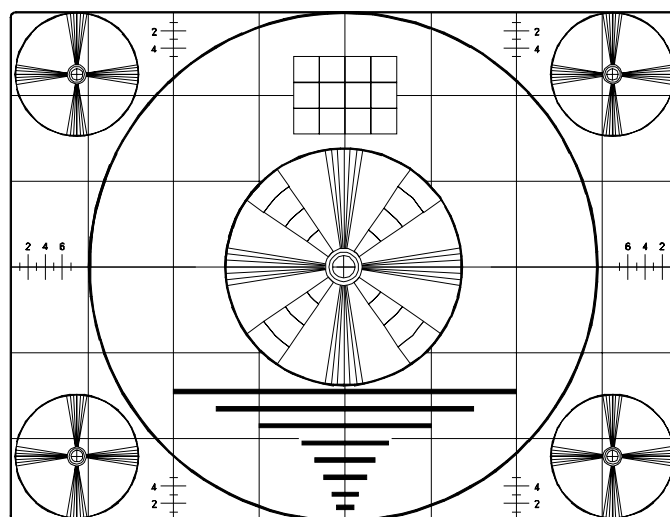

Monoscope Signal

B. Color Bar Signal

Use the color bar signal shown below, unless otherwise specified in this manual.

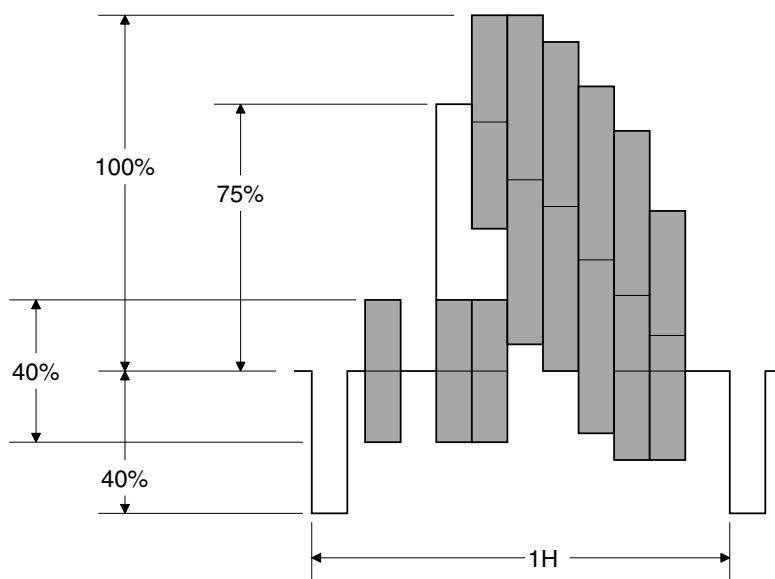

Split-Field Color Bars (100% window)

3. Initial Setup

A. Option Menu Setup

Follow the steps below for the initial set-up:

1. Select the "MENU" display by pressing the "MENU" button once.
2. Press the number buttons "2", "2", "7", "0" in sequence to select the "OPTION MENU" display.
3. Press the "ADJUST" button to select "INITIAL."
4. Press "ENTER."

NOTE: At this time channel 3 is automatically selected.

MENU-2-2-7-0

OPTION MENU	
Initial	
Power Restore	:OFF
DTV Port	:Auto
Direct Key Mode	:OFF

B. Default Settings

MAIN MENU DEFAULT SETTINGS

SETUP		AUDIO/VIDEO	
Memorize channels	ANT-A - Air	A/V Memory Reset	Ant-A
Language (idioma)	English	TV Speakers (Internal)	On
Front Button Lock	Off	Audio Output	Variable
CLOCK		AUDIO SETTINGS	
Clock Setting	Auto	TV Bass	50%
Time Zone	Eastern	TV Treble	50%
Daylight Savings Time	Applies	TV Balance	50%
Clock Time	N/A	TV Surround	Off
Set Day	N/A	TV Listen To	Stereo
CAPTIONS		TV Level Sound	Off
Closed Captions	On if Mute	VIDEO SETTINGS	
CC Background	Gray	TV Contrast	1
CHANNEL EDIT		TV Brightness	50%
Antenna	ANT-A	TV Sharpness	50%
Channel	3	TV Color	50%
Memory	Deleted	TV Tint	50%
Name	N/A	TV Color Temp	High
SQV	N/A	TV Video Noise	Standard
V-CHIP-LOCK		TV Film Mode (Auto)	Off
V-Chip	Off	TV VSM Sharpness	On
TV Rating	TV-PG	TV Volume	
FV- Fantasy Violence	Allow	PIP Source	
D-Sexual Dialog	Allow	PIP Position	
L-Adult Language	Allow	POP Position	
S-Sexual Situations	Allow	Format	
V-Violence	Allow	PIP/POP Format	

Items in the table below are set to following after Initialization.

AV Memory Initial Settings

A/V Memory	Ant-A Ant-B	DTV	NTSC 1/2/3	COMP. 1/2
Contrast	Max	Max	Max	Max
Brightness	Mid	Mid	Mid	Mid
Sharpness	Mid	Mid	Mid	Mid
Color	Mid	Mid	Mid	Mid
Tint	Mid	Mid	Mid	Mid
Color Temp.	High	High	High	High
Video Noise	Std.	Std.	Std.	Std.
Image type	Video	Video	Video	Video
TV VSM				
Sharpness	On	On	On	On
Bass	Mid	Mid	Mid	Mid
Treble	Mid	Mid	Mid	Mid
Balance	Mid	Mid	Mid	Mid
Surround	Off	Off	Off	Off
Listen To	Stereo	N/A	N/A	N/A
Level Sound	Off	Off	Off	Off

4. LED Indicator Diagnostics

The "Power ON LED" provides an indication of the sets operation, and the possible cause of a malfunction.

A. Initial Control Circuitry Check

Immediately after the TV is connected to an AC power source:

- The LED flashes three times ... indicating the Microprocessor has initialized and is functioning properly.
- If the LED does not flash ... the Microprocessor is NOT functioning.

B. Error Code Operational Check

Pressing the front panel "INPUT" and "MENU" buttons at the same time, and holding for 5 seconds, activates the Error Code Mode. The LED flashes denoting a two digit Error Code, or indicating no problem has occurred since the last Initialization.

Note: The front panel buttons must be used, NOT those on the Remote Control.

- The number of flashes indicates the value of the MSD (tens digit) of the Error Code.
- The flashing then pauses for approximately 1/2 second.
- The LED then flashes indicating the value of the LSD (ones digit) of the Error Code.
- The Error Code is repeated a total of 5 times.

Example: If the Error Code is "24", the LED will flash two times, pause, and then flash four times.

C. Error Codes

The Error Code designations indicating a malfunction, or no malfunction, are listed below:

Error Code	Description
12	No error has occurred.
21	X-Ray Protect circuit.
22	Short Protect circuit.
23	Horizontal Deflection failure.
24	Vertical Deflection failure.

5. Circuit Adjustment Mode


Except for the following, all adjustment items must be performed using the remote hand unit.

- Lens Focus
- Electrostatic Focus

A. Activating the Circuit Adjustment Mode

1. Press the "MENU" button on a remote hand unit.
2. Press the number buttons "2", "2", "5", "7" in sequence. The screen will change to the Adjustment Mode.

Note: Repeat steps 1 and 2 if the circuit adjustment mode display does not appear on screen

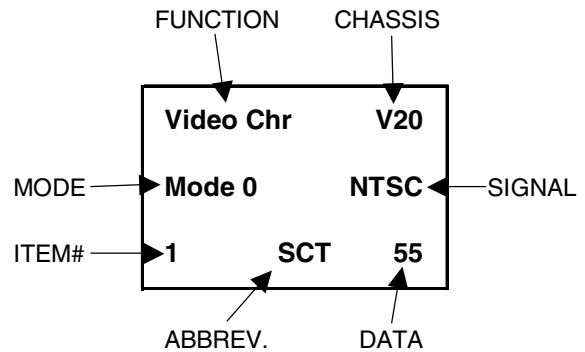


B. Selection of adjustment Functions and Adjustment Items

To select an adjustment item in the circuit adjustment mode, first select the adjustment function that includes the specific adjustment item to be selected. Then, select the adjustment item.

Refer to the following pages for the listing of adjustment functions and adjustment items.

1. Press the "AUDIO" button on a remote hand unit to select an adjustment function. Each time the button is pressed, the Function changes in the following sequence:

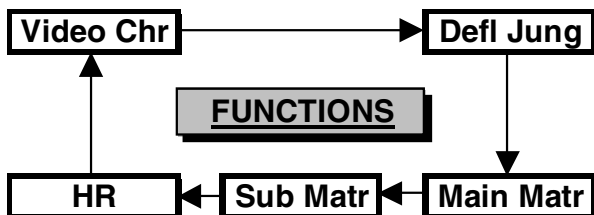


2. Press the "VIDEO" button to select a specific Adjustment Item. The Item number increases each time the "VIDEO" button is pressed.

C. Changing Data

After selecting an adjustment Item, use the "ADJUST UP/DOWN" button to change data.

- Press "ADJUST DOWN" to decrease the data value.
- Press "ADJUST UP" to increase the data value.

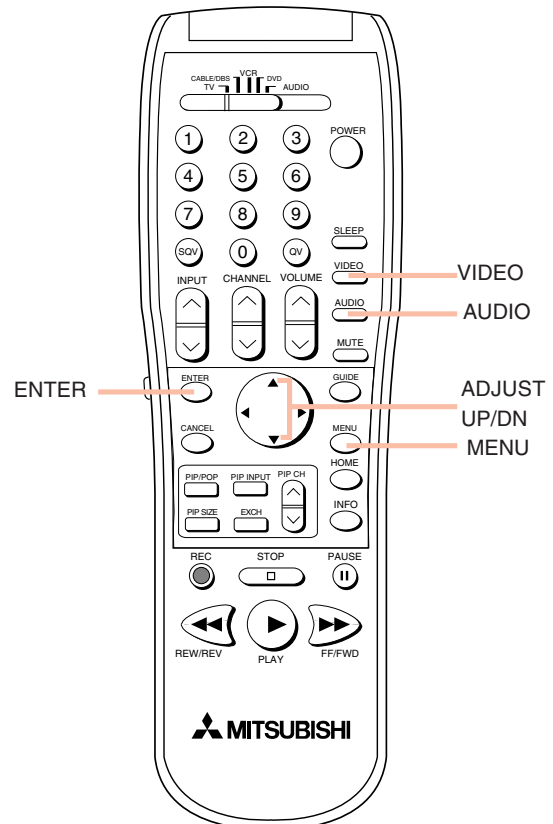

D. Saving Adjustment Data

Press “ENTER” to save adjustment data in memory. The character display turns red for approximately one second in this step.

Note: If the circuit adjustment mode is terminated without pressing “ENTER”, changes in adjustment data are not saved.

E. Terminating the Circuit Adjustment Mode

Press the “MENU” button on the remote hand unit twice to terminate the adjustment mode.

Note: The circuit adjustment mode can also be terminated by turning power OFF.

6. Convergence Adjustment Mode

The Convergence mode is used to perform raster geometry correction, and convergence adjustments as specified in Adjustment Procedures 15 through 18.

A. Convergence Mode Activation

1. Press MENU-2-2-5-9
2. When the Convergence Mode is activated, the display at the right appears on a Green Crosshatch.

SD	Coarse	BLUE
1	HSTA	-50

Coarse Conv. Display

B. Selecting the HD or SD Mode

1. **Select the Signal Source** before entering the Convergence Mode, either an NTSC or HD source.
2. **Enter the Convergence Mode** (MENU-2-2-5-9)
 - If the signal source is NTSC, the SD mode is activated.
 - If the signal source is HD 1080i, the HD mode is activated.
3. **Activating the HD mode when no HD signal is available.**
 - Activate the Factory Option Menu (MENU-2-2-7-0)
 - Use the “Adjust” keys to select “DTV Port” and press “Enter” to change the setting to “1080i”. Sequence = “Auto”-”480i”-480-p”-”1080i”. **Ignore any loss of sync while changing modes.**
 - Exit the Option Menu (Press “MENU” twice).
 - Select the DTV Inputs as the signal source (INPUT button).
 - Activate the Convergence Mode ... the Convergence mode will be in the HD mode and the internal crosshatch is displayed.
4. **After adjusting Convergence, be sure to set the DTV Port back to AUTO.**
 - Select an analog input as the signal source (INPUT button).
 - Activate the Option Menu (MENU-2-2-7-0).
 - Use the “Adjust” keys to select “DTV Port and press “Enter” to change the setting from “1080i” to “AUTO”.
 - Exit the Option Menu (Press MENU twice).

C. Convergence Mode Functions

In the Convergence Mode there are three main Functions (Categories).

- Pressing “6” activates CONV MISC
- Pressing “5” activates COARSE CONV
- Pressing “4” activates FINE CONV

D. CONV MISC (Press 6)

This mode is used to preset data values controlling the Convergence Generator, and to perform the HV Regulation adjustment.

1. Use the VIDEO button to select an item.
2. Use the ADJUST buttons to change data.

Note: When Item “1 HVOL” is selected the screen goes black except for the data display. This occurs since a black screen is required when making the HV Regulation adjustment.

E. COARSE CONV (Press 5)

There are four Sub Functions in the Coarse mode, COARSE GREEN, COARSE RED, COARSE BLUE and DF.

- COARSE GREEN used to make Coarse Raster Geometry Adjustments.
 - COARSE RED ... used to make Coarse Red Convergence Adjustments.
 - COARSE BLUE ... used to make Coarse Blue Convergence Adjustments.
 - DF ... used to preset data values controlling the Dynamic Beam Focus circuit drive signal.
1. Use AUDIO button to select a Sub Function
 2. Use the VIDEO button to select an Adjustment Item.
 3. Use the ADJUST buttons to change data.

F. FINE CONV (Press 4)

Sub Functions

This mode is used to perform Fine Raster Correction, and Fine Red and Blue Convergence Adjustments.


There are three Sub Adjustment Functions, selected with the AUDIO button:

- FINE GREEN a Green Crosshatch is displayed, for Fine Raster Corrections.
- FINE RED a White Crosshatch is displayed, for Fine Red Convergence Adjustments.
- FINE BLUE a White Crosshatch is displayed, for Fine Blue Convergence Adjustments.

Cursor

In the Fine mode a Cursor is added to the Crosshatch. The ENTER button toggles the Cursor between two modes:

- MOVE (blinking Cursor) use the ADJUST buttons to select any of 64 points on the Crosshatch.
- ADJUST (Non blinking Cursor) the ADJUST buttons adjust the active color at the current Cursor position, horizontally or vertically.

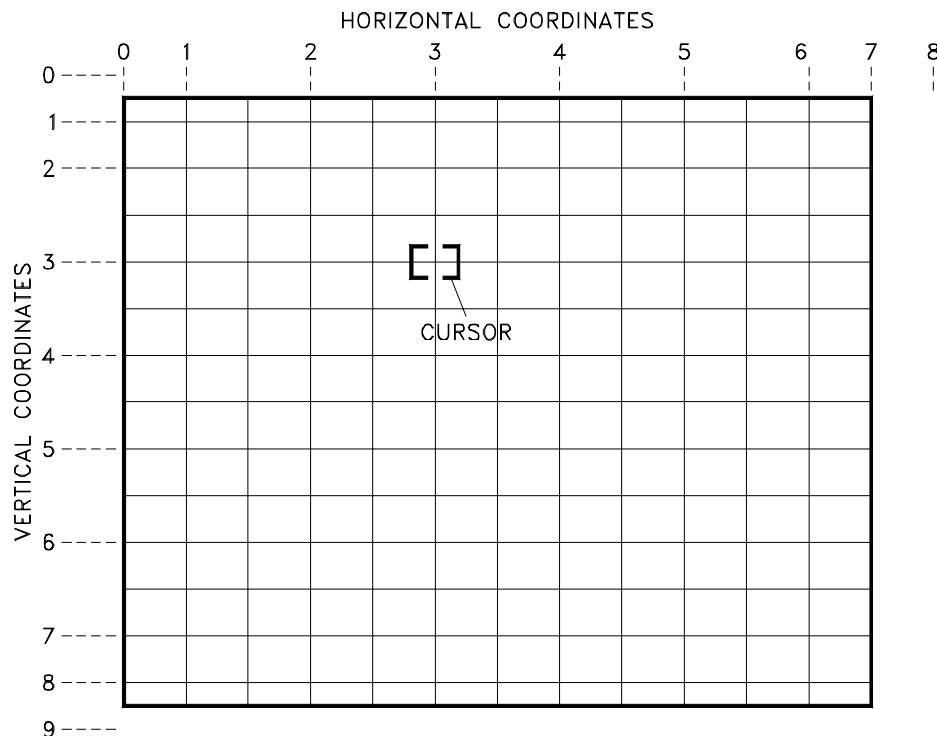


Fine Mode Crosshatch and Cursor

Cursor Coordinates

Specific intersections in the Crosshatch are assigned vertical and horizontal coordinates. These are shown in the preceding diagram. The Cursor can only be moved to those positions that have coordinates assigned. If the Cursor is at coordinates outside the screen area, the Cursor will not be visible. Use the ADJUST buttons to move the Cursor to an intersection on the screen.

Display

The on-screen display changes in the Fine mode, as shown below. The display shows the vertical and horizontal data for the current Cursor Position, and the horizontal and vertical coordinates for that position.

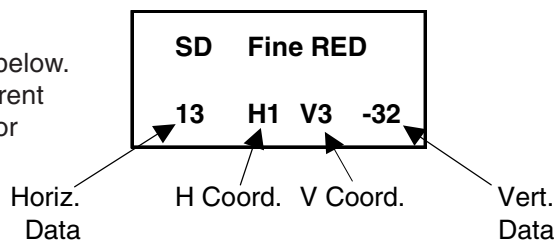**F. Saving Data and Exiting the Convergence Mode**

Press MENU twice to exit the Convergence mode, data is automatically saved.

Note: If power is interrupted prior to properly exiting the Convergence Mode, changes in adjustment data will not be saved.

ADJUSTMENT ITEMS LIST

Video Chroma Function							Menu-2-2-5-7
Item#	Abbrev.	Description	Data				Adjustment
			Range	480i	480p	1080i	
1	SCT	Picture Gain control	0~63	31	31	31	Sub Contrast
2	SBRT	Sub Brightness	0~63	31	31	31	Black Level
3	SCON	Sub Contrast	0~15	0	0	0	Preset
4	RDRH	R Drive (H temp)	0~63	31	31	31	White Balance
5	GDRH	G Drive (H temp)	0~63	41	41	41	Preset
6	BDRH	B Drive (H temp)	0~63	31	31	31	White Balance
7	CTRH	R Cutoff (H temp)	0~63	31	31	31	"
8	CTGH	G Cutoff (H temp)	0~63	46	46	46	Preset
9	CTBH	B Cutoff (H temp)	0~63	31	31	31	White Balance
10	RDRL	R Drive (L temp)	0~63	31	31	31	"
11	GDRL	G Drive (L temp)	0~63	41	41	41	Preset
12	BDRL	B Drive (L temp)	0~63	31	31	31	White Balance
13	CTRL	R Cutoff (L temp)	0~63	31	31	31	"
14	CTGL	G Cutoff (L temp)	0~63	55	55	55	Preset
15	CTBL	B Cutoff (L temp)	0~63	31	31	31	White Balance
16	GMMA	RGB Gamma Correction	0~3	1	1	1	Preset
17	GAML	Gamma Differential Corr. Switch	0~1	0	0	0	"
18	BRT	Brightness	0~63	31	31	31	"
19	COL	Color	0~63	35	31	31	White Balance
20	TINT	Tint	0~63	28	31	31	Preset
21	SHRP	Sharpness	0~63	31	33	31	"
22	CBOF	Cb DC Offset	0~63	31	31	31	"
23	CROF	Cr DC Offset	0~63	31	31	31	"
31	VMLE	VM Output Level	0~3	2	2	1	"
40	AGIW	White output aging mode switch	0~1	0	0	0	"
55	ABLT	Threshold Adjust for ABL input	0~15	7	7	7	"

Deflection Jungle				Menu-2-2-5-7	
Item#	Abbrev.	Description	Range	HD	Others
1	HWID	Width	0~63	13	17
2	HKEY	Horiz. Keystone	0~63	9	3
3	EWPT	Top EW-PCC	0~63	31	31
7	VHGT	Height	0~63	18	36
8	VLIN	Vert. Linearity	0~15	8	6
9	VSCN	Vert. S Corr.	0~15	0	0
18	VPOS	Vert. Position	0~63	31	31

MAIN MATRIX			MENU-2-2-5-7	
Item#	Abbrev.	Description	Data	
			Range	Initial
1	TNTM	Main Tint Control	0~63	30
2	COLM	Main Color Control	0~63	29
3	YDRM	Main Y Gain	0~63	12

SUB MATRIX			MENU-2-2-5-7	
Item#	Abbrev.	Description	Data	
			Range	Initial
1	TNTS	Sub Tint Control	0~63	28
2	COLS	Sub Color Control	0~63	19
3	YDRS	Sub Y Gain	0~63	9
4	VPDS	U signal DC Control	0~15	7
5	UPDS	V signal DC Control	0~15	7

HR		MENU-2-2-5-7	
Item#	Abbrev.	Description	Initial
1	HR	NTSC Disp.Pos.	29
2	HRHD	HD Disp. Position	15

CONVERGENCE MODE ITEMS

CONV MISC.			MENU-2-2-5-9-6		
Item#	Abbrev.	Description	Data		
			Range	SD	HD
1	HVOL	HV Adjust	0~352	150	150
2	VCNT	V-saw amplitude	0~127	29	29
3	VSTR	V-saw start timee	0~127	0	10
4	VOFS	V-saw offset	0~127	10	8
5	STLN	Start line	0~127	38	26
6	FPHS	Fine phase	0~352	310	296
7	CPHS	Coarse phase	0~31	15	15
8	HOFS	H-saw offset	0~127	22	22
9	DPHS	DF coarse horiz phase	0~31	1	1
10	DOFS	DF offset	0~127	33	15
11	TPHS	Test Pattern phase	0~352	45	38
12	TPVD	Test Pattern Vert. Position	0~127	22	39
13	ODEV	Odd/Even detection	0~352	200	125
14	HRTC	H-saw retrace	0~3	1	1
15	DRTC	DF retrace	0~3	1	1
16	DAC	External DAC selection	0~1	1	1
17	EPWP	EEPROM write protection	0~1	0	0

COARSE CONV GREEN (MENU-2-2-5-9-5)

#	Abbrev.	Description	SD	HD
1	HSTA	Horiz. Position	0	0
2	VSTA	Vert. Position	0	0
3	SKEW	Skew (Y axis)	0	0
4	TILT	Tilt (X axis)	0	0
5	HWID	Width	50	50
6	HLIN	Horiz. Linearity	0	0
7	SPCC	Side PC Corr.	20	0
8	HKEY	Horiz. Keystone	0	0
9	TBPC	Top/Bottom PC	-180	-140
10	VKEY	Vert. Keystone	0	0
11	VWID	Height	11	20
12	VLIN	Vert. Linearity	-18	-18

COARSE CONV RED (MENU-2-2-5-9-5)

#	Abbrev.	Description	SD	HD
1	HSTA	Horiz. Position	50	50
2	VSTA	Vert. Position	0	0
3	SKEW	Skew (Y axis)	0	0
4	TILT	Tilt (X axis)	0	0
5	HLIN	Horiz. Linearity	-300	-250
6	HWID	Width	-20	0
7	VKEY	Vert. Keystone	-155	-190
8	VWID	Height	0	0
9	VLIN	Vert. Linearity	0	0
10	TBPC	Top/Bottom PC	70	100
11	SDBW	Side Bow	30	30





COARSE CONV BLUE (MENU-2-2-5-9-5)

#	Abbrev.	Description	SD	HD
1	HSTA	Horiz. Position	-50	-50
2	VSTA	Vert. Position	0	0
3	SKEW	Skew (Y axis)	0	0
4	TILT	Tilt (X axis)	0	0
5	HLIN	Horiz. Linearity	300	250
6	HWID	Width	0	0
7	VKEY	Vert. Keystone	180	175
8	VWID	Height	0	0
9	VLIN	Vert. Linearity	0	0
10	TBPC	Top/Bottom PC	-30	0
11	SDBW	Side Bow	-30	-30

DF (MENU-2-2-5-9-5)

Item	Abbr.	Description	Data
0	DFH	Dynamic Focus (Horizontal)	-300
1	DFV	Dynamic Focus (Vertical)	-100

Adjustment Test Point Locations

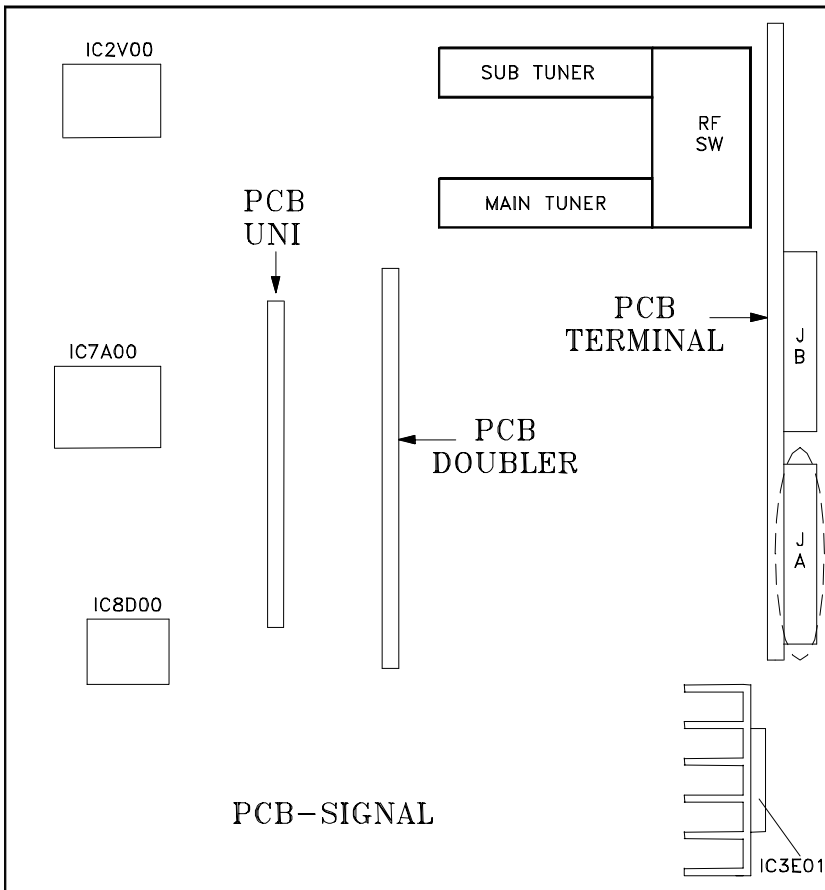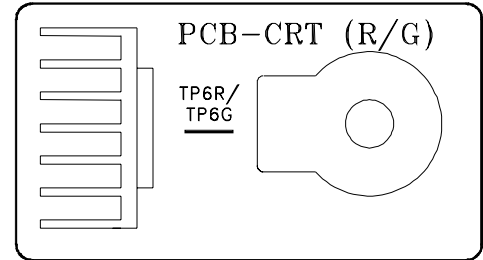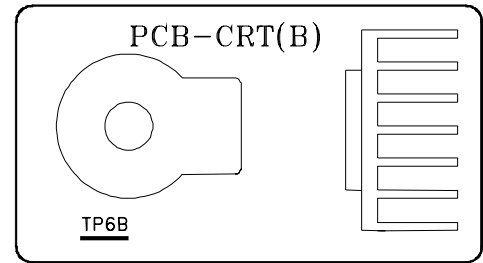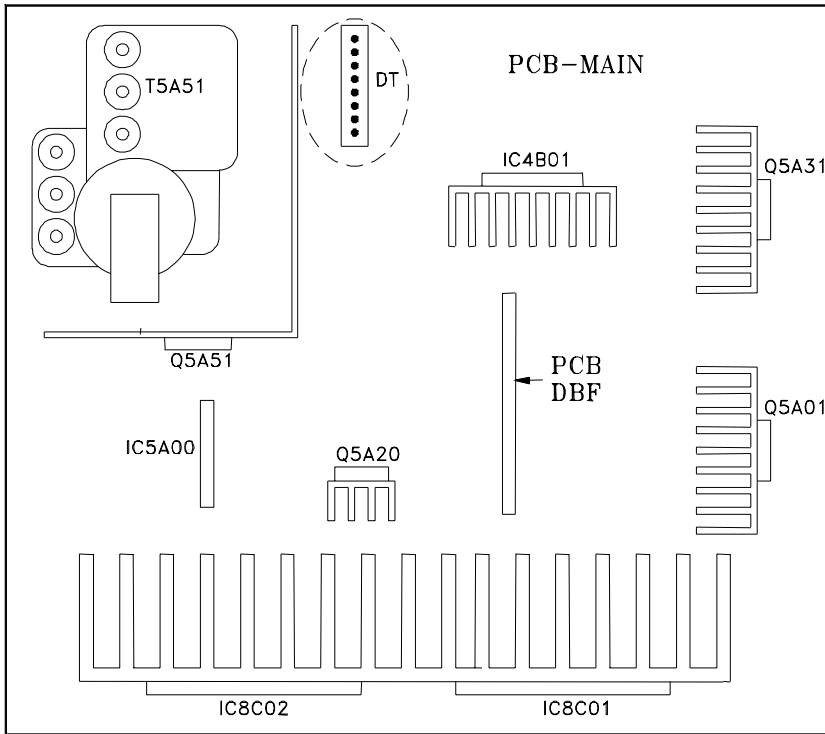

Test Points

- DT pin 3 - HV Adjust
- DT pin 6 - Ground
- DT pin 7 - 12 Volts
- DT pin 8 - ACL
- JA pin 14- Main Picture (Y)
- JA pin 18 - Main Color (Cr)
- JA pin 4 - Sub Picture (Y)
- JA pin 8 - Sub Picture (Cr)
- TP6(R, G or B) - CRT Cathode

MODEL: WT-42311 / WT-A42

[HV Circuit]		Purpose: To set the CRT Anode voltage.
1. HV Regulation		Symptom: Dark Picture


Measuring Instrument	DC Voltmeter
Test Point	DT connector pins 3 & 6
Ext. Trigger	-----
Measuring Range	-----
Input Signal	Video Signal Monoscope
Input Terminal	Video Input

Note: This adjustment must be rechecked following Adjustment 9 CRT Cutoff.

1. Supply a video monoscope signal.
2. Set Contrast to maximum, and Brightness to mid position.
3. Connect a DC volt meter between pins 3 and 6 of the DT connector.
(Positive lead to pin 3)
4. Activate the Conv-Misc Mode.
5. Select Item "1 HVOL" (screen goes black).
6. Adjust Item "1 HVOL" for 15.4V $\pm$ 0.05V on the meter.
7. Save data and exit the Conv-Misc mode.
8. Confirm that the voltage does not change more than 0.15V.

Note: This adjustment must be performed if E2RESET or Convergence E2RESET are activated.

REAR

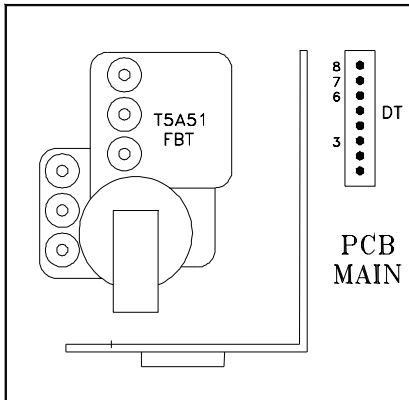

CONVERGENCE MODE

Activate MENU-2-2-5-9

Misc."6"

Coarse....."5"

Fine "4"

Color (R,G or B).....AUDIO

Item No.....VIDEO

Adjust/Move.....ADJUST

Cursor Toggle.....ENTER

Save & Exit.....MENU (twice)

CONVERGENCE MODE

Activate MENU-2-2-5-9
 Misc."6"
 Coarse....."5"
 Fine "4"
 Color (R,G or B).....AUDIO
 Item No.....VIDEO
 Adjust/Move.....ADJUST
 Cursor Toggle.....ENTER
 Save & Exit.....MENU (twice)

[Video Circuit] 2. Main/Sub Y Level		Purpose To set picture luminance Symptom: Excess or insufficient brightness.
Measuring Instrument	Oscilloscope	1. Supply a color bar signal to a Video Input (not an RF input). 2. Select the color bar signal for both the main and sub pictures. 3. Connect the oscilloscope to connector JA pin 14 (Main-Y). 4. Activate the Adjustment Mode 5. Select Item "3 YDRM" in the Main Matrix function. 6. Adjust the data so the Main-Y signal is between 0.71 Vp-p max. and 0.66 Vp-p min. at JA pin 14. (If it cannot be adjusted within this range, set to the lower value) 7. Move the oscilloscope to connector JA pin 4 (Sub-Y). Activate PIP if the waveform is unstable. 8. Select Item "3 YDRS" in the Sub Matrix function. 9. Adjust the data to equal the MAIN-Y Gain (+0.0V -0.1V).
Test Point	JA Connector pin 14 JA Connector pin 4	
Ext. Trigger	-----	
Measuring Range	----- Color Bars	
Input Signal		
Input Terminal	Video Input	

CIRCUIT ADJUST MODE

Activate MENU-2-2-5-7


Function AUDIO

Item No. VIDEO

Adjust Data ADJUST

Save Data ENTER

Exit MENU (twice)

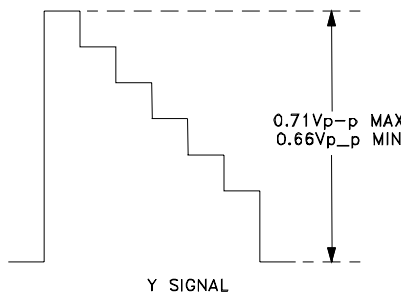

CIRCUIT ADJUST MODE

Activate MENU-2-2-5-7
 Function AUDIO
 Item No. VIDEO
 Adjust Data ADJUST
 Save Data ENTER
 Exit MENU (twice)

[Video Circuit] 3. Main/Sub Color Level		Purpose: To match the sub picture color to that of the main picture. Symptom: Main and sub pictures colors differ.
Measuring Instrument	Oscilloscope	1. Supply an NTSC signal to an External Video Input. 2. Select the NTSC signal as the source for both the main and sub pictures. 3. Connect an oscilloscope to connector JA pin 18 (Main PR). 4. Activate the Adjustment mode. 5. Select Item "2 COLM" in the Main Matrix Function. 6. Adjust data so the PR signal is 0.71 Vp-p max. - 0.66 Vp-p min (If it cannot be adjusted within this range, set to the lower value) 7. Connect an oscilloscope to connector JA pin 8 (Sub PR). If the waveform is unstable, activate PIP. 8. Select item "2 COLS" in the Sub Matrix Function. 9. Adjust so Sub PR = Main PR.
Test Point	JA pin 18 JA pin 8	
Ext. Trigger	-----	
Measuring Range	-----	
Input Signal	Color Bars	
Input Terminal	Video	

CIRCUIT ADJUST MODE
 Activate MENU-2-2-5-7
 Function AUDIO
 Item No. VIDEO
 Adjust Data ADJUST
 Save Data ENTER
 Exit MENU (twice)

PR SIGNAL

[CRT Circuit] 4. CRT Cutoff		Purpose To set the cutoff point for all three CRTs. Symptom: Monochrome has a color tint, or incorrect brightness.
Measuring Instrument	Oscilloscope	Note: Use the Expand mode (full screen) 1. Select an External Input with no signal. 2. Enter the Adjustment Mode, Video Chroma Function. 3. Press "1", automatically blanks the screen and sets COL to 0. 4. Set the data to the values given in the table below. 5. Connect the oscilloscope to TP6R. 6. Adjust the Red Screen VR so the black level is 170V, as shown below, or 176V $\pm$ 1VDC using an DC Voltmeter. 7. Repeat Steps 4 and 5 to set the Blue and Green Screen VRs, using TP6G and TP6B. Note: White Balance must be performed after this adjustment.
Test Point	TP6R, TP6G, TP6B	
Ext. Trigger	-----	
Measuring Range	50V/Div. 2msec/Div.	
Input Signal	None	
Input Terminal	Video Input	

Cutoff Preset VC Data

Item	Abbr	Data
1	SCT	31
2	SBRT	31
3	SCON	0
4	RDRH	31
5	GDRH	41
6	BDRH	31
7	CTRH	31
8	CTGH	46
9	CTBH	31

CIRCUIT ADJUST MODE
 Activate MENU-2-2-5-7
 Function AUDIO
 Item No. VIDEO
 Adjust Data ADJUST
 Save Data ENTER
 Exit MENU (twice)

MODEL: WT-42311 / WT-A42

[Video Circuit] 7. Black Level		Purpose: To set the black level of the picture. Symptom: Excess or insufficient brightness.	
Measuring Instrument	-----	1. Supply a Monoscope signal to a Video Input. 2. Activate the Adjust Mode, Video Chroma Function. 3. Adjust Item "2 SBRT" so the 0% and 10% black levels on the gradation scale are the same. (SBRT data should fall between 24 and 28.) 4. Press ENTER to save data. 7. Exit the Service Mode.	
Test Point	-----		
Ext. Trigger	-----		
Measuring Range	-----		
Input Signal	Monoscope		
Input Terminal	Video Input		

CIRCUIT ADJUST MODE

Activate MENU-2-2-5-7

Function AUDIO

Item No. VIDEO


Adjust Data ADJUST

Save Data ENTER

Exit MENU (twice)

40%	30%	20%	10%
50%	0%	0%	0%
60%	70%	80%	90%

GRADATION SCALE

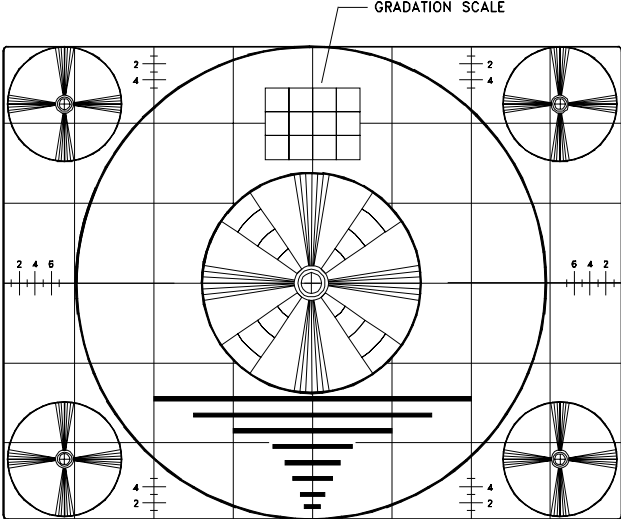

[Video Circuit] 8. Sub Contrast		Purpose To set overall beam current to its' optimum level. Symptom: Excess or insufficient contrast.	
Measuring Instrument	DC ma meter	Note: Activate the Expand mode (full screen). 1. Supply a Grayscale signal to a RF Input. 2. Activate the Adjust Mode, Video Chroma Function. 3. Select Item "1 SCT", signal level automatically reduces. 4. Connect a 3ma DC meter between DT connector pins 7 and 8. Positive lead to pin 7. 5. Adjust Item "1 SCT" for 500μA ±10μA . 6. Remove the meter. 7. Save data and Exit the Service Mode.	
Test Point	DT connector pins 7 & 8		
Ext. Trigger	-----		
Measuring Range	-----		
Input Signal	Grayscale		
Input Terminal	RF Input		

CIRCUIT ADJUST MODE

Activate MENU-2-2-5-7


Function AUDIO

Item No. VIDEO


Adjust Data ADJUST

Save Data ENTER

Exit MENU (twice)

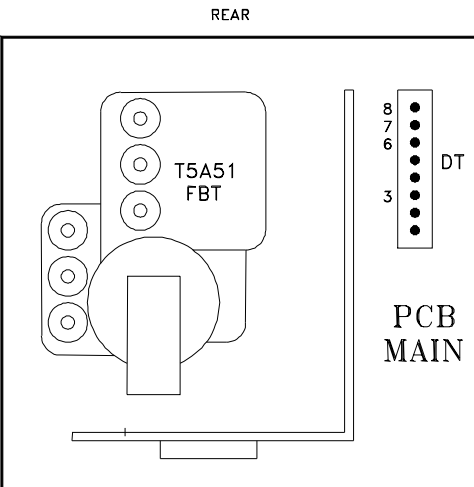


[Focus Circuit] 9. Dynamic Focus Preset		Purpose: To improve edge focus. Symptom: Poor focus at the edges of the screen.																		
Measuring Instrument	----	1. Supply a Monoscope signal to a Video Input 2. Activate the Convergence Mode. 3. Select the DF Function under the Conv. Coarse Mode. 4. Set Items "0 DFH" and "1 DFV" to the data values given in the DF Table. 5. Press "6" to activate CONV-MISC 6. Set "0 FPHS" and "1 DPHS" to data values given in the CONV-MISC Table. 5. Exit the Conv. Mode.																		
Test Point	----																			
Ext. Trigger	-----																			
Measuring Range	----																			
Input Signal	Monoscope																			
Input Terminal	Video Input																			
CONVERGENCE MODE Activate MENU-2-2-5-9 Misc."6" Coarse....."5" Fine "4" Color (R,G or B).....AUDIO Item No.....VIDEO Adjust/Move.....ADJUST Cursor Toggle.....ENTER Save & Exit.....MENU (twice)		DF <table border="1"> <thead> <tr> <th>Item</th><th>Abbr.</th><th>Data</th></tr> </thead> <tbody> <tr> <td>1</td><td>DFH</td><td>-300</td></tr> <tr> <td>2</td><td>DFV</td><td>-100</td></tr> </tbody> </table> CONV MISC <table border="1"> <thead> <tr> <th>Item</th><th>Abbr.</th><th>Data</th></tr> </thead> <tbody> <tr> <td>9</td><td>DPHS</td><td>1</td></tr> <tr> <td>10</td><td>DOFS</td><td>33</td></tr> </tbody> </table>	Item	Abbr.	Data	1	DFH	-300	2	DFV	-100	Item	Abbr.	Data	9	DPHS	1	10	DOFS	33
Item	Abbr.	Data																		
1	DFH	-300																		
2	DFV	-100																		
Item	Abbr.	Data																		
9	DPHS	1																		
10	DOFS	33																		

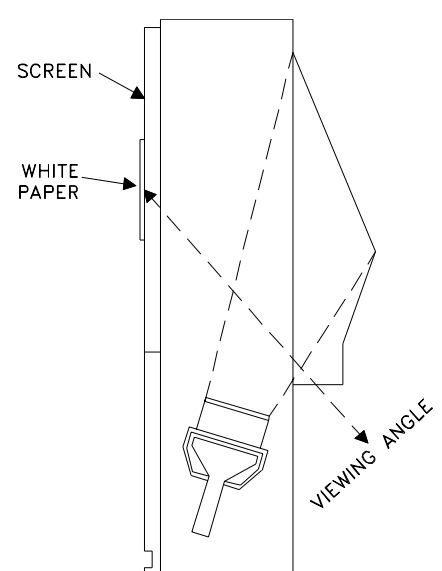[Video Circuit] 10. Lens Focus		Purpose To set the Lens position for optimum focus. Symptom: Poor focus
Measuring Instrument	----	Note: <i>This adjustment must be done before Electrostatic Focus. Perform this adjustment for RED, GREEN, and BLUE monochrome pictures.</i> 1. Supply a VIDEO signal (Monoscope). 2. Cover the Red and Blue Lens (producing a green raster). 3. Adjust the Green Lens for best focus at the center of the Monoscope pattern. Note: <i>Attach a white paper to the screen center. During adjustment, observe the picture on the screen from inside for easier adjustment.</i> 4. Supply a crosshatch signal 5. Confirm that the width at the top and bottom of the center vertical line are the same. If not, check mechanical centering adjustment.. 6. Repeat Steps 2 and 5 for the Red and Blue monochrome pictures.
Test Point	-----	
Ext. Trigger	-----	
Measuring Range	----	
Input Signal	Monoscope & Crosshatch	
Input Terminal	Video Input	
		

MODEL: WT-42311 / WT-A42

[CRT Circuit]		Purpose: To set electrostatic focus to the optimum point.								
11. Electrostatic Focus		Symptom: Poor focus.								
Measuring Instrument	-----	Note: <i>This adjustment must be performed after the Sub Contrast adjustment.</i> Static Focus Adjustment 1. Supply a Monoscope signal to a Video Input 2. Activate A/V Reset 3. Select Red, Green or Blue rasters using the table below. 3. Set the Red, Green and Blue Focus VRs for optimum focus at the top center of the picture.. Raster Color Selection <table><tr><td>Color Raster</td><td>Activation Code</td></tr><tr><td>Red</td><td>MENU-2-2-5-9-1</td></tr><tr><td>Green</td><td>MENU-2-2-5-9-2</td></tr><tr><td>Blue</td><td>MENU-2-2-5-9-3</td></tr></table>	Color Raster	Activation Code	Red	MENU-2-2-5-9-1	Green	MENU-2-2-5-9-2	Blue	MENU-2-2-5-9-3
Color Raster	Activation Code									
Red	MENU-2-2-5-9-1									
Green	MENU-2-2-5-9-2									
Blue	MENU-2-2-5-9-3									
Test Point	-----									
Ext. Trigger	-----									
Measuring Range	-----									
Input Signal	Monoscope & Crosshatch									
Input Terminal	Video Input									

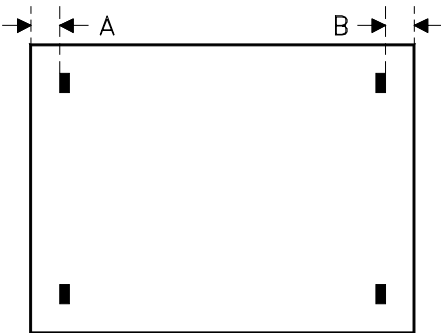[On Screen Display] 12.Character Position		Purpose To position the character display horizontally. Symptom: Incorrect display position
Measuring Instrument	-----	1. Supply a Monoscope signal to the Video or RF Input. 2. Select the Monoscope as the source for the main picture (Input button). 3. Activate the Service Mode, HR Function. 4. Use the Adjust Right/Left buttons to center the display horizontally. (A = B) 5. Save data and exit the Service Mode.. 
Test Point	-----	
Ext. Trigger	-----	
Measuring Range	-----	
Input Signal	Video Signal (HD/NTSC)	
Input Terminal	ANT-A/DTV	

MODEL: WT-42311 / WT-A42

[Conv/Defl] 13. Geometry Preset		Purpose: To preset data controlling raster geometry Symptom: Raster distortion.
Measuring Instrument	-----	Note: <i>This procedure is usually only necessary if an E2PROM is replaced in the TV Control or Convergence circuits.</i> Procedure In the Circuit Adjustment and Coarse Convergence Modes pre-set the data to the values given in the Tables below.
Test Point	-----	
Ext. Trigger	-----	
Measuring Range	-----	
Input Signal	NTSC & HD	
Input Terminal	Video & DTV Inputs	

DEFL JUNGLE
(MENU-2-2-5-7)

#	Abbrev.	HD	NTSC
1	HWID	31	31
2	HKEY	31	31
3	EWPT	31	31
7	VHGT	28	40
8	VLIN	5	5
9	VSCN	0	0
18	VPOS	31	31

COARSE CONV GREEN
(MENU-2-2-5-9-5)

#	Abbrev.	SD	HD
1	HSTA	0	0
2	VSTA	0	0
3	SKEW	0	0
4	TILT	0	0
5	HWID	50	50
6	HLIN	0	0
7	SPCC	20	0
8	HKEY	0	0
9	TBPC	-180	-140
10	VKEY	0	0
11	VWID	11	20
12	VLIN	-18	-18

COARSE CONV RED
(MENU-2-2-5-9-5)

#	Abbrev.	SD	HD
1	HSTA	50	50
2	VSTA	0	0
3	SKEW	0	0
4	TILT	0	0
5	HLIN	-300	-250
6	HWID	-20	0
7	VKEY	-155	-190
8	VWID	0	0
9	VLIN	0	0
10	TBPC	70	100
11	SDBW	30	30

COARSE CONV BLUE
(MENU-2-2-5-9-5)

#	Abbrev.	SD	HD
1	HSTA	-50	-50
2	VSTA	0	0
3	SKEW	0	0
4	TILT	0	0
5	HLIN	300	250
6	HWID	0	0
7	VKEY	180	175
8	VWID	0	0
9	VLIN	0	0
10	TBPC	-30	0
11	SDBW	-30	-30

[Deflection Circuit]

**14: Deflection Geometry
Height & Width Adjustments**

Purpose: To set the height, width and linearity of the raster.

Symptom: Incorrect height, width and/or linearity.

Measuring Instrument	-----
Test Point	-----
Ext. Trigger	-----
Measuring Range	-----
Input Signal	Monoscope (NTSC & HD)
Input Terminal	Video & DTV Inputs

Preliminary:

1. DO NOT change the initial values for "#8 VLIN" in the Defl. Jungle Function.
2. DO NOT exceed the following VHGT adjustment ranges:
NTSC ... from -4 to +10
HD ... from -10 TO +5

NTSC Mode


1. Supply an NTSC Monoscope signal to a Video Input.
2. Select the Monoscope as the signal source.
3. Activate the Adjustment Mode, JNGL Function.
4. Select and adjust each of the following items.
 - "7 VHGT" ... so the vertical marker sum = 4
 - "1 HWD" ... so the horizontal marker sum = 7
5. Save data and Exit the Service Mode.

HD Mode

1. Supply an HD Monoscope signal to the DTV HD Inputs.
2. Select the DTV Inputs as the signal source (Input button)
3. Activate the Service Mode, Defl. Jungle Function.
4. Select and adjust each of the following items.
 - "7 VHGT" ... so the vertical marker sum = 2
 - "1 HWD" ... so the horizontal marker sum = 5
5. Save data and Exit the Service Mode.

CIRCUIT ADJUST MODE

Activate MENU-2-2-5-7
Function AUDIO
Item No. VIDEO
Adjust Data ADJUST
Save Data ENTER
Exit MENU (twice)

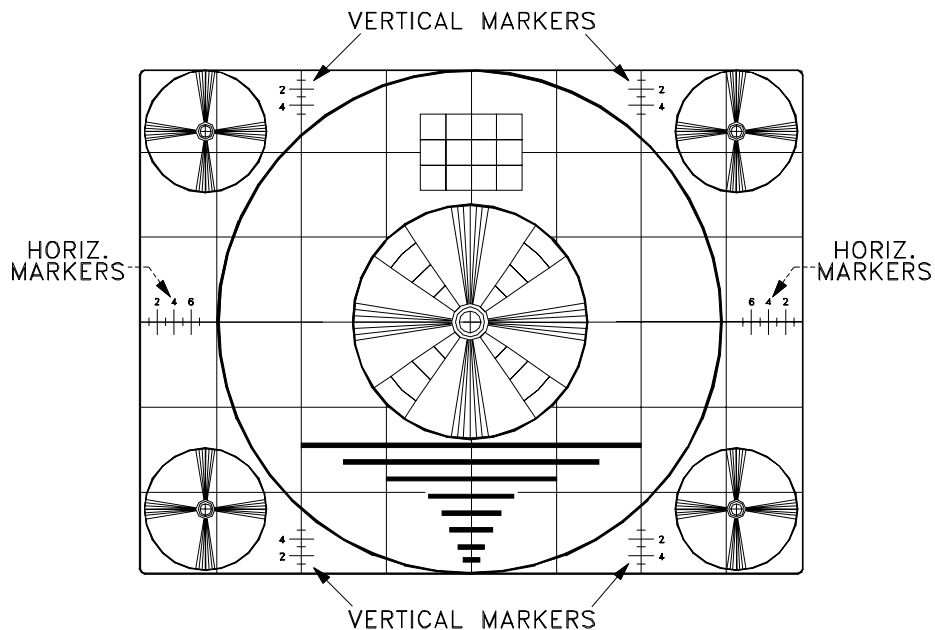

[Convergence Circuit]**15. Convergence Geometry Adjustments****Purpose:** To set the Convergence circuit geometry adjustments.**Symptom:** Raster distortion at the top, bottom or sides of the picture.**Measuring Instrument**

Test Point

Ext. Trigger

Measuring Range

Input SignalNTSC -- None
HD -- HD sync**Input Terminal**

Video & DTV Inputs

Note: Deflection Circuit Geometry must be performed before this adjustment.**NTSC mode**

1. Select a Video Input with no signal.
2. Activate the Convergence Mode, Coarse Green.
3. Adjust the Coarse Green Items shown below for straight crosshatch lines.
4. Select the Fine Green Mode, a Cursor is displayed on the crosshatch.
5. Use the Cursor to adjust for straight crosshatch lines.
6. Exit the Convergence Mode.

HD mode

1. Supply horizontal and vertical HD sync to the DTV Inputs and select the DTV Inputs as the source.

Note: If an HD signal is not available, use the Conv. HD with No Signal Procedure

2. Enter the Convergence Mode, Coarse Green.
3. Repeat NTSC Steps 3 through 6 in the HD mode.








CONVERGENCE MODE

Activate MENU-2-2-5-9
 Misc. "6"
 Coarse..... "5"
 Fine "4"
 Color (R,G or B).....AUDIO
 Item No.....VIDEO
 Adjust/Move.....ADJUST
 Cursor Toggle.....ENTER
 Save & Exit.....MENU (twice)

CONV. HD WITH NO SIGNAL

1. MENU-2-2-7-0
2. Set DTV Port to 1080i
3. MENU (Twice)
4. INPUT select DTV inputs
5. MENU-2-2-5-9

**After Adjusting, set the
DTV Port to AUTO**

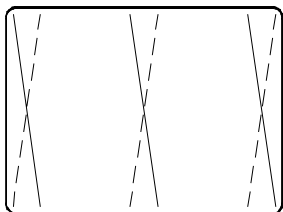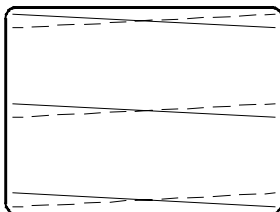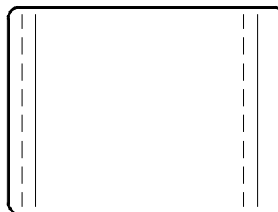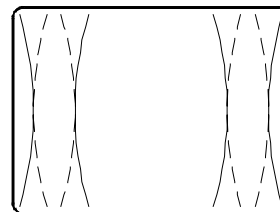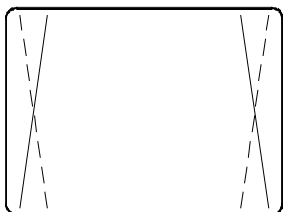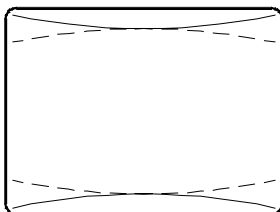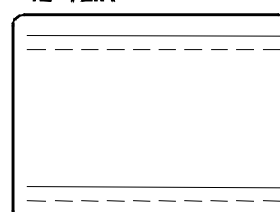COARSE GREEN ADJUSTMENTS**3 SKEW****4 TILT****6 HLIN****7 SPCC****8 HKEY****9 TBPC****10 VKEY****12 VLIN**

[Convergence Circuit]

16. Centering and Static Convergence

Purpose: To converge red, green and blue at the center of the screen
Symptom: Color edging over the entire picture.

Measuring Instrument	-----
Test Point	-----
Ext. Trigger	-----
Measuring Range	-----
Input Signal	NTSC -- Monoscope HD -- Monoscope
Input Terminal	Video & DTV Inputs

CONVERGENCE MODE

Activate MENU-2-2-5-9
Misc. "6"
Coarse..... "5"
Fine "4"
Color (R,G or B).....AUDIO
Item No.....VIDEO
Adjust/Move.....ADJUST
Cursor Toggle.....ENTER
Save & Exit.....MENU (twice)

Preliminary

Degauss the shield cover and bracket unit of the CRT assembly and chassis.
DO NOT degauss the CPM Assemblies.


HD mode

1. Supply an HD Monoscope signal to the DTV Inputs.
2. Select the DTV Inputs as the signal source (Input button).
3. Enter the Convergence Coarse mode.
4. Set the data for the "HSTA" and "VSTA" items to:

<u>GREEN</u>	<u>RED</u>	<u>BLUE</u>
HSTA = 0	HSTA = 50	HSTA = -50
VSTA = 0	VSTA = 0	VSTA = 0
5. In the Coarse Green mode:
 - Center the Green Raster using the Green Centering Magnet.
 - Rotate the Green Deflection Yoke to correct any tilt.
6. In the Coarse Red mode, use the Red Centering Magnet to converge red on the green at the center of screen. Correct any red tilt with the Red Deflection Yoke.
7. In the Coarse Blue mode, repeat Step 6 using the Blue Centering magnet and the Blue Deflection Yoke.
8. Exit the Convergence mode.

SD mode

1. Supply an NTSC Monoscope signal to a Video Input.
2. Select the Monoscope as the signal source (Input button).
3. Enter the Convergence Coarse Green mode.
4. If needed, center the green raster using "1 HSTA" and "2 VSTA" adjustments.
5. In the Coarse Red mode, use "1 HSTA" and "2 VSTA" adjustments to converge the red on the green at the center of the screen.
6. In the Coarse Blue mode, repeat step 5 to converge the blue of the green.
7. Exit the Convergence Mode

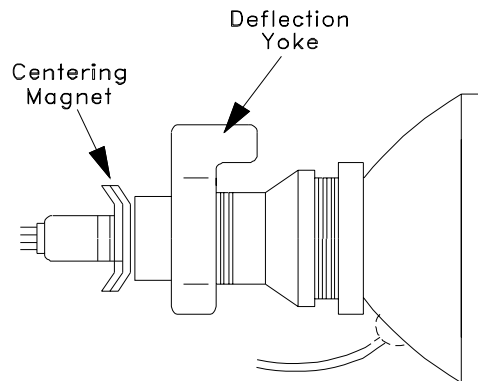

[Convergence Circuit]**17. Coarse Convergence**

Purpose: To converge red and blue on green at the edges of the screen.

Symptom: Color edging at the top, bottom and sides of the screen.

Measuring Instrument	-----
Test Point	-----
Ext. Trigger	-----
Measuring Range	-----
Input Signal	NTSC -- None HD -- HD sync
Input Terminal	Video & HD Inputs

SD mode

1. Select an External Input with no signal.
2. Activate the Convergence Mode, Coarse Red.
3. Adjust the Items shown below to converge the red on the green.
4. Select Coarse Blue mode.
5. Adjust the Items shown below to converge the blue on the green.

Note: If center convergence shifts, use red and blue Items "1 HSTA" and "2 VSTA" to correct the shift.

6. Exit the Convergence Mode.

HD mode

1. Supply horizontal and vertical HD sync to the DTV Inputs and select the DTV Inputs as the source.

Note: If an HD signal is not available, use the Conv. HD with No Signal Procedure.

2. Repeat SD Steps 2 through 5 in the HD mode.
3. Exit the Convergence mode.











CONVERGENCE MODE

Activate MENU-2-2-5-9
 Misc. "6"
 Coarse..... "5"
 Fine "4"
 Color (R,G or B).....AUDIO
 Item No.....VIDEO
 Adjust/Move.....ADJUST
 Cursor Toggle.....ENTER
 Save & Exit.....MENU (twice)

CONV. HD WITH NO SIGNAL

1. MENU-2-2-7-0
2. Set DTV Port to 1080i
3. MENU (Twice)
4. INPUT select DTV inputs
5. MENU-2-2-5-9

After Adjusting, set the DTV Port to AUTO

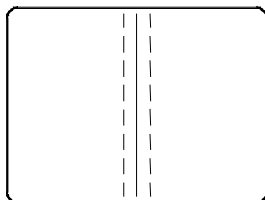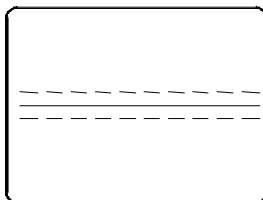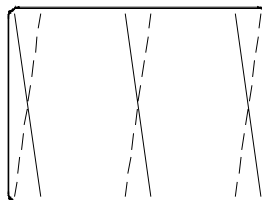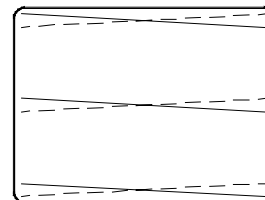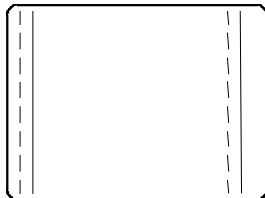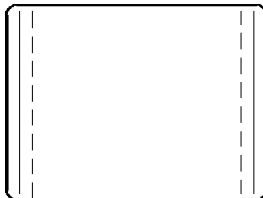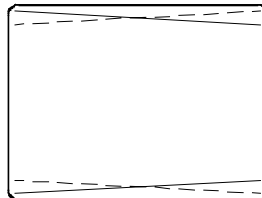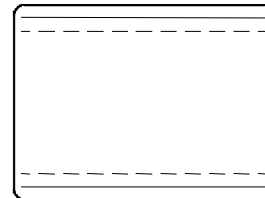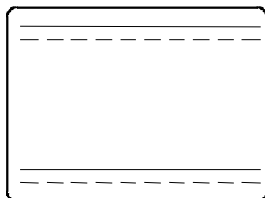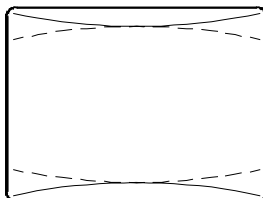COARSE CONVERGENCE RED & BLUE ADJUSTMENTS**1 HSTA*****2 VSTA*****3 SKEW****4 TILT****5 HLIN****6 HVID****7 VKEY****8 VVID****9 VLIN****10 TBPC****11 HSBW**

*Data should not exceed ± 100

[Convergence Circuit]

18. Fine Convergence

Purpose: To converge red, green and blue at the edges of the screen
Symptom: Color edging at the edges of the picture.

Measuring Instrument	----
Test Point	----
Ext. Trigger	-----
Measuring Range	----
Input Signal	NTSC -- None HD -- HD sync
Input Terminal	Video & DTV Inputs

CONVERGENCE MODE

Activate MENU-2-2-5-9
 Misc. "6"
 Coarse..... "5"
 Fine "4"
 Color (R,G or B).....AUDIO
 Item No.....VIDEO
 Adjust/Move.....ADJUST
 Cursor Toggle.....ENTER
 Save & Exit.....MENU (twice)

SD Fine Adjustment

1. Select an External Input, no signal.
2. Activate the Convergence Mode, Fine Red.
3. Use the Cursor to converge red on the green.
4. Select the Fine Blue mode.
5. Use the Cursor to converge blue on the green.
6. Exit the Convergence mode.

HD Fine Adjustment

1. Supply an HD signal (sync only) to the DTV inputs and select DTV with the "Audio" button.

Note: If an HD signal is not available, use the Conv. HD with No Signal Procedure.

2. Repeat SD Fine Adjustment Steps 2 through 6, in the HD mode.

CONV. HD WITH NO SIGNAL

1. MENU-2-2-7-0
2. Set DTV Port to 1080i
3. MENU (Twice)
4. INPUT select DTV inputs
5. MENU-2-2-5-9

**After Adjusting, set the
DTV Port to AUTO**

CHIP PARTS REPLACEMENT


Some resistors, shorting jumpers (0 Ohm resistors), ceramic capacitors, transistors and diodes are chip parts. The following precautions should be taken when replacing these parts.

Cautions:

1. Use a fine tipped, well insulated soldering iron (approximately 30 watts), and tweezers.
2. Melt the solder and remove the chip parts carefully so as not to tear the copper foil from the printed circuit board.
3. Discard removed chips; do not reuse them.
4. Do not apply heat for more than 3 (three) seconds to new chip parts.
5. Avoid using a rubbing stroke when soldering.
6. Take care not to scratch, or damage the chip parts when soldering.
7. Supplementary cementing is not required.


Chip Parts Removal (Resistors, Capacitors, etc.)

1. Grasp the part with tweezers. Melt the solder at both sides alternately, and remove one side of the part with a twisting motion.
2. Melt the solder at the other side and remove the part.

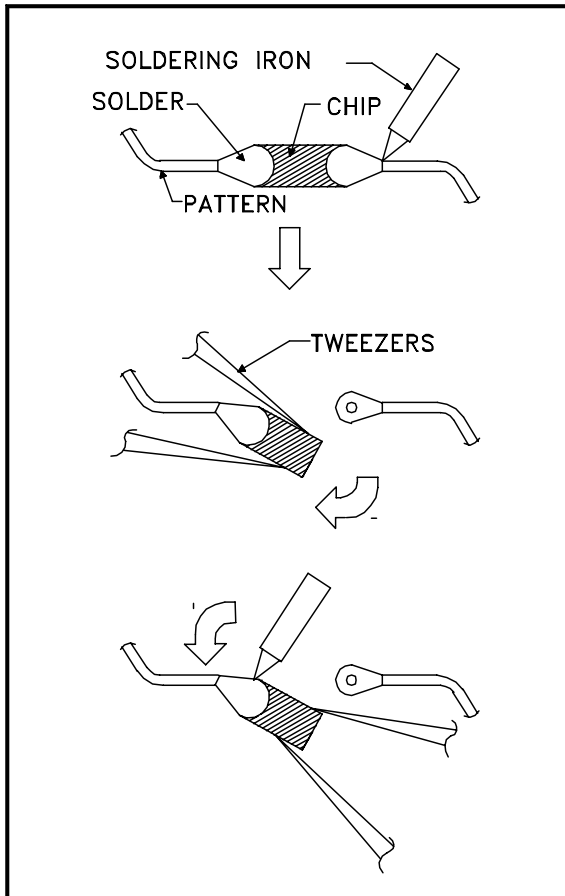


Chip Parts Removal (Transistors)

1. Melt the solder of one lead and lift the side of that lead upward.
2. Simultaneously melt the solder of the other two leads and lift the part from the PCB.

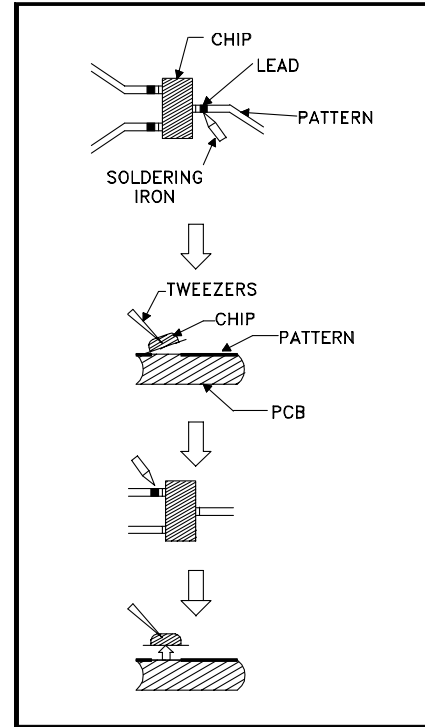

Replacement

1. Presolder the contact points on the circuit pattern.
2. Press the part downward with tweezers and apply the soldering iron as shown.

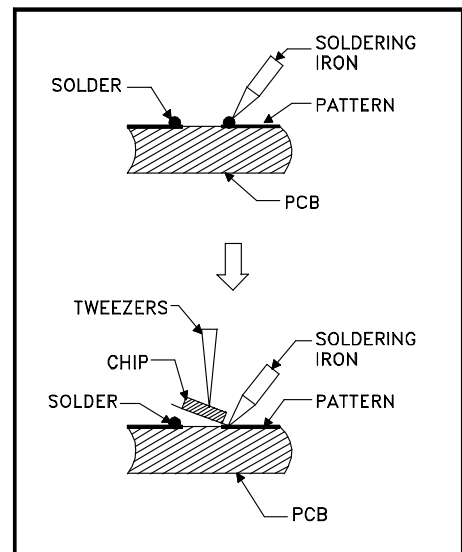

REPLACEMENT PARTS

Parts Ordering

To expedite delivery of replacement parts orders, specify the following:

1. Model Number/Serial Number
2. Part Number and description
3. Quantity

Note: Unless complete information is supplied, delay in processing of orders will result.

Critical and Warranty Parts Designation

Critical Electrical Components are indicated by **Bold Type** in the Parts List, and in the schematic diagrams by shading.

Warranty Return Parts are indicated in the Parts List with an (*).

Parts Tolerance Codes

Refer to the following chart for tolerance characteristics of electrical components.

MARK	B	C	D	F	G	J	K
Tolerance %	± 0.1	± 0.25	± 0.5	± 1	± 2	± 5	± 10


MARK	M	N	V	X	Z	P	Q
Tolerance %	± 20	± 30	± 10	+ 40 - 20	+80 - 20	+100 - 0	+30 - 10

MARK	M	N	V	X	Z
Tolerance (pF)	± 0.1	± 0.25	± 0.5	± 1	± 2

Replacement Part Notes

When Replacing the RF-Switch (RF-SW) or the PCB-SIGNAL:

1. Remove the PLATE-RF SW from the original component, shown in the diagram at the right.
2. Install the PLATE-RF SW on the new RF-SW.

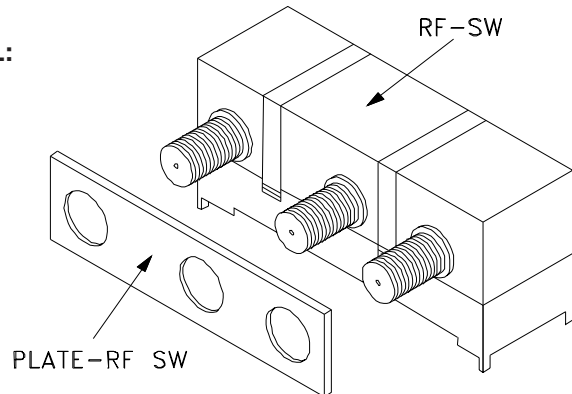

When Replacing the EEPROM

The EEPROMs (IC7C01, IC2K02 and IC8D0) store the adjustment data. After replacing the EEPROM, readjust the data to the values given in the "Adjustment Items List" tables. If good performance is not obtained with these values, perform the Adjustment Procedure(s) given in the Description and Adjustment columns.

QUICK REFERENCE FOR COMMON REPLACEMENT PARTS

CRT ASSEMBLIES

PART NO.	DESCRIPTION
251C219010	ASSY-CRT-RED
251C219020	ASSY-CRT-GREEN
251C219030	ASSY-CRT-BLUE

REMOTE CONTROL

290P111010 REMOTE CONTROL

HIGH VOLTAGE / DEFLECTION COMPONENTS

Q5A31	261P122010	HORIZ-OUT 2SC5778
Q5A51	261P082010	HV-OUT 2SK2771-O1R
T5A51	334P281010	TRANS-FLYBACK
	129P059050	VR-FOCUS
	330P288010	DEFL-YOKE
	453B036010	CAP-ANOD - SHORT - RED
	453B036040	CAP-ANODE - GREEN
	453B036050	CAP-ANOD - BLUE
	453B036060	CAP-ANODE - RED

MODEL	MIRROR	LENTICULAR SCREEN	FRESNEL LENS	DIAMOND SHIELD
WT-42311	494D006010	491P136010	491P137010	760D628070
WT-A42	494D006010	491P136010	491P137010	760D639050

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]
TUBES			
	251C219010	ASSY-CRT-RED	
	251C219020	ASSY-CRT-GREEN	
	251C219030	ASSY-CRT-BLUE	
INTEGRATED CIRCUITS			
IC2K00	270P623010	IC - CXA2069Q	
IC2K02	275P533010	IC-C-MOS - M24C64WM6T	
IC2L00	270P658030	IC - CXA2019AQ/T4	
IC2L01	272P379020	IC - LM1881MX (NSC)	
IC2LA0	270P658030	IC - CXA2019AQ/T4	
IC2LA1	272P379020	IC - LM1881MX (NSC)	
IC2M00	275P496010	IC-C-MOS - UPD64082GF-3BA	
IC2M01	275P531010	IC-C-MOS - MSM54V16258B-45TS-K	
IC2MD1	272P379020	IC - LM1881MX (NSC)	
IC2N00	270P870010	IC - CXA2151Q	
IC2P00	275P718010	IC-C-MOS - TC74HC4053FT	
IC2P01	275P718010	IC-C-MOS - TC74HC4053FT	
IC2S00	270P870010	IC - CXA2151Q	
IC2V00	270P937010	IC - CXA2180Q	
IC2Y01	275P735010	IC-C-MOS - TDA8601TD	
IC2Y50	270P472060	IC - NJM7805FA	
IC3A01	275P731010	IC-C-MOS - MSP3445G	
IC3E01	270P750010	IC - LA4663	
IC3K00	270P838010	IC-C-MOS - NJM2520M	
IC3K01	270P838010	IC-C-MOS - NJM2520M	
IC4B01	270P261020	IC - TDA8177	
IC5A00	267P163010	HIC - MSPAD401	
IC5A01	270P914010	IC - NJM2119D	
IC5A02	266P727040	IC - UPC339C/LM339N	
IC5A03	270P704010	IC - LM4040BIZ-10.0	
IC5A05	270P816010	IC - NJM431L	
IC6B01	270P667010	IC - TDA6120Q	
IC6G01	270P667010	IC - TDA6120Q	
IC6K00	270P818020	IC - CXA3506R	
IC6K04	274P088010	IC-C-MOS - MC74HC14AF	
IC6L00	275P848010	IC-C-MOS - S1L60283F30C100	
IC6L21	274P901010	IC-C-MOS - TC74HCT7007AF-EL	
IC6L22	270P898030	IC - SI-3025LSA-TL	
IC6L23	270P677010	IC - BA033FP	
IC6L24	275P236020	IC-C-MOS - TC74LVX244FT	
IC6L26	270P506010	IC - M51957BFP	
IC6M00	270P942010	IC - CXD2309AQ	
IC6R01	270P667010	IC - TDA6120Q	
IC6Y50	272P302010	IC - PA0030	
IC6Y51	270P650010	IC - MM1031XM	
IC7A00	275P729020	IC-C-MOS - M306V2-198FP	
IC7C01	275P533010	IC-C-MOS - M24C64WM6T	
IC7C10	270P706020	IC - MAX823REUK	
IC7D00	275P434010	IC-C-MOS - TC74HC4066AFT	
IC7D01	275P560010	IC - ADS931E A2D CONVERTER	
IC7D02	275P560010	IC - ADS931E A2D CONVERTER	
IC7D03	275P560010	IC - ADS931E A2D CONVERTER	
IC7D10	275P769010	IC-C-MOS - TC74AC157FT	
IC7D11	275P769010	IC-C-MOS - TC74AC157FT	
IC7E00	275P434010	IC-C-MOS - TC74HC4066AFT	
IC7E01	275P560010	IC - ADS931E A2D CONVERTER	
IC7E02	275P560010	IC - ADS931E A2D CONVERTER	
IC7E03	275P560010	IC - ADS931E A2D CONVERTER	

Ref #	Part #	Part Name & Description	[#]
IC7E10	275P769010	IC-C-MOS - TC74AC157FT	
IC7E11	275P769010	IC-C-MOS - TC74AC157FT	
IC7G01	275P247010	IC-C-MOS - MB40C958VPFV	
IC7H00	275P799010	IC-C-MOS - UPD85008XAGD	
IC7H01	270P898030	IC - SI-3025LSA-TL	
IC7H02	275P716010	IC-C-MOS - uPD4516161AG5-A10-9NF	
IC7H03	275P716010	IC-C-MOS - uPD4516161AG5-A10-9NF	
IC7H04	270P348010	IC - TLC2932IPW	
IC7H05	270P348010	IC - TLC2932IPW	
IC7H06	274P901010	IC-C-MOS - TC74HCT7007AF-EL	
IC7H07	275P236020	IC-C-MOS - TC74LVX244FT	
IC7H08	274P901010	IC-C-MOS - TC74HCT7007AF-EL	
IC7H09	275P278010	IC-C-MOS - TC74LVX14FT	
IC7H10	275P278010	IC-C-MOS - TC74LVX14FT	
IC7V01	275P362010	IC-C-MOS - Z86130	
IC8C01	267P141030	HIC - STK392-110	
IC8C02	267P141030	HIC - STK392-110	
IC8D00	275P595010	IC-C-MOS - CM0022AF	
IC8D01	263D011010	IC-C-MOS - 32K EEPROM	
IC8E00	270P751010	IC - TL084CD	
IC8E01	270P751010	IC - TL084CD	
IC8E02	270P751010	IC - TL084CD	
IC8E03	275P721010	IC-C-MOS - CD0031AM	
IC9A20	267P164010	HIC - TNY264P	
IC9A50	267P161010	HIC - STR-F6428S	
IC9A51	267P062050	HIC - SE110N	
IC9B01	270P668040	IC - SI-8120S	
IC9B02	270P668020	IC - SI-8050S	
IC9C01	270P210010	IC - NJM7809FA/AN7809F	
IC9C11	270P928010	IC - BA17809FP	
IC9C21	270P677020	IC - BA05FP	
IC9C31	270P677010	IC - BA033FP	
IC9C41	270P677010	IC - BA033FP	
TRANSISTORS			
CHIP Type Transistors (Listed by Part No.)			
	Part No.	Description	
	260P817010	2SA1037K-Q	
	260P817030	2SA1037K-S	
	260P818010	2SC2412K-Q	
	260P818030	2SC2412K-S	
	260P835030	2SC2413K-Q	
	261P801010	2SA1252-5,6	
TRANSISTORS			
Conventional Transistors (By Ref #)			
Ref #	Part #	Part Name & Description	[#]
Q4B01	260P559030	TR - 2SC1740S-S	
Q5A01	261P126010	TR - 2SD2052	
Q5A02	260P561020	TR - 2SA1371-E	
Q5A03	260P386010	TR - 2SC2230-GR	
Q5A04	260P559030	TR - 2SC1740S-S	
Q5A05	260P560040	TR - 2SA933S-S	
Q5A06	260P560040	TR - 2SA933S-S	
Q5A07	260P559030	TR - 2SC1740S-S	
Q5A08	260P559030	TR - 2SC1740S-S	
Q5A09	260P559030	TR - 2SC1740S-S	
Q5A10	260P560040	TR - 2SA933S-S	
Q5A20	260P560040	TR - 2SA933S-S	

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]	Ref #	Part #	Part Name & Description	[#]
Q5A31	261P122010	TR - 2SC5778		D5A53	264P489010	DIODE - RD16FB1	
Q5A32	261P127010	TR - 2SK2774-01		D5A54	264P622010	DIODE - AL01Z	
Q5A33	260P559030	TR - 2SC1740S-S		D5A55	264P622010	DIODE - AL01Z	
Q5A34	260P561020	TR - 2SA1371-E		D5A56	264P045040	DIODE - 1S24710M	
Q5A35	260P386010	TR - 2SC2230-GR		D5A57	264P521040	DIODE - EU1A	
Q5A36	260P630010	TR - 2SD2012		D5A58	264P045040	DIODE - 1S24710M	
Q5A37	260P559030	TR - 2SC1740S-S		D5A60	264P488030	DIODE - RD13FB2	
Q5A38	260P559030	TR - 2SC1740S-S		D5A61	264P487090	DIODE - RD12FB3	
Q5A39	260P560040	TR - 2SA933S-S		D5H01	264P045040	DIODE - 1S24710M	
Q5A40	260P560040	TR - 2SA933S-S		D5H02	264P045040	DIODE - 1S24710M	
Q5A51	261P082010	TR - 2SK2771-01R		D5H03	264D056020	DIODE - S5500D/EM1Z/ERB12-02RK	
Q5A57	260P416030	TR - 2SC2274-F,K-F		D5K01	264P528030	DIODE - RP1H	
Q5A59	260P255040	TR - 2SA950-Y		D5K02	264P543010	DIODE - EGO1	
Q5H01	260P559050	TR - 2SC1740S-E		D5K03	264P543010	DIODE - EGO1	
Q5H03	260P559050	TR - 2SC1740S-E		D5K10	264P528030	DIODE - RP1H	
Q5H04	260P559050	TR - 2SC1740S-E		D5K11	264P528030	DIODE - RP1H	
Q5H05	260P559050	TR - 2SC1740S-E		D6B00	262P063010	DIODE - 1SS244	
Q5H06	260P560040	TR - 2SA933S-S		D6B03	264P485060	DIODE - RD7.5FB2	
Q5H07	260P559030	TR - 2SC1740S-S		D6B07	262P063010	DIODE - 1SS244	
Q5H08	260P559030	TR - 2SC1740S-S		D6B08	262P063010	DIODE - 1SS244	
Q5H09	260P559050	TR - 2SC1740S-E		D6B10	264P501050	DIODE - HZ3BLL	
Q5H10	260P560040	TR - 2SA933S-S		D6G00	262P063010	DIODE - 1SS244	
Q5H11	260P644040	TR - 2SA1535-R		D6G07	262P063010	DIODE - 1SS244	
Q5H12	260P647040	TR - 2SC3944-R		D6G08	262P063010	DIODE - 1SS244	
Q5K00	260P664030	TR - 2SC4636		D6R00	262P063010	DIODE - 1SS244	
Q5K01	260P664030	TR - 2SC4636		D6R07	262P063010	DIODE - 1SS244	
Q5K02	260P559030	TR - 2SC1740S-S		D6R08	262P063010	DIODE - 1SS244	
Q5K03	260P560040	TR - 2SA933S-S		D7H00	264P828010	D-CHIP - DAN202U/MA142WK	
Q6B01	260P559030	TR - 2SC1740S-S		D7L21	264P212020	D-LED - LN31GPH	
Q6B02	260P560040	TR - 2SA933S-S		D8C01	264P045040	DIODE - 1S24710M	
Q6G01	260P559030	TR - 2SC1740S-S		D8C02	264P045040	DIODE - 1S24710M	
Q6R01	260P559030	TR - 2SC1740S-S		D8C03	264P486060	DIODE - RD9.1FB3	
Q9A50	260P416030	TR - 2SC2274-F,K-F		D8C04	264P486060	DIODE - RD9.1FB3	
Q9A51	260P559030	TR - 2SC1740S-S		D9A01	262P031010	DIODE - D6SB80	
Q9A54	260P559030	TR - 2SC1740S-S		D9A20	264P825040	DIODE - ERA15-08	
Q9A55	260P559030	TR - 2SC1740S-S		D9A21	264P825040	DIODE - ERA15-08	
Q9B01	260P559030	TR - 2SC1740S-S		D9A24	264P045040	DIODE - 1S24710M	
Q9B02	260P560040	TR - 2SA933S-S		D9A28	264P045040	DIODE - 1S24710M	
				D9A29	264P484040	DIODE - RD5.6FB3	
				D9A30	264P724010	DIODE - STF14	
				D9A31	264P486020	DIODE - RD8.2FB3	
				D9A50	264P045040	DIODE - 1S24710M	
				D9A53	264P622010	DIODE - AL01Z	
				D9A54	264P622010	DIODE - AL01Z	
				D9A55	264P622010	DIODE - AL01Z	
				D9A56	264P566010	DIODE - FMP-G12S	
				D9A57	264P899010	DIODE - BYV26E	
				D9A58	264P588010	DIODE - FML-G16S	
				D9A60	264P566010	DIODE - FMP-G12S	
				D9A61	264P669030	DIODE - S3L20U	
				D9A66	264P045040	DIODE - 1S24710M	
				D9A67	264P484040	DIODE - RD5.6FB3	
				D9A68	264P469070	DIODE - EQA02-28A/RD27EB4	
				D9A69	264P527020	DIODE - AK04	
				D9B01	264P045040	DIODE - 1S24710M	
				D9B02	264P045040	DIODE - 1S24710M	
				D9B03	264P045040	DIODE - 1S24710M	
				D9B04	264P880010	DIODE - RK46	
				D9B05	264P880010	DIODE - RK46	
				D9B07	264P485060	DIODE - RD7.5FB2	
DIODES							
D2W01	264P828010	D-CHIP - DAN202U/MA142WK					
D2W02	264P828010	D-CHIP - DAN202U/MA142WK					
D2W03	264P828010	D-CHIP - DAN202U/MA142WK					
D2W04	264P828010	D-CHIP - DAN202U/MA142WK					
D4B01	264D056020	DIODE - S5500D/EM1Z/ERB12-02RK					
D4B04	264P045040	DIODE - 1S24710M					
D5A01	264P045040	DIODE - 1S24710M					
D5A02	264D056020	DIODE - S5500D/EM1Z/ERB12-02RK					
D5A03	264P045040	DIODE - 1S24710M					
D5A12	264P045040	DIODE - 1S24710M					
D5A13	264P045040	DIODE - 1S24710M					
D5A14	264P045040	DIODE - 1S24710M					
D5A33	264P669030	DIODE - S3L20U					
D5A34	264P483070	DIODE - RD5.1FB1					
D5A35	264P045040	DIODE - 1S24710M					
D5A36	264P045040	DIODE - 1S24710M					
D5A37	264P521040	DIODE - EU1A					
D5A51	262P039010	DIODE - BYW96E/20					
D5A52	264P899010	DIODE - BYV26E					

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]
COILS			
L1A30	321C114010	COIL-RF - 2200MH-J	
L1A31	325C461030	COIL-PEAKING - 10MH-K	
L1B30	321C114010	COIL-RF - 2200MH-J	
L1B31	325C461030	COIL-PEAKING - 10MH-K	
L2K00	325C461030	COIL-PEAKING - 10MH-K	
L2K01	325C462080	COIL-PEAKING - 180MH-J	
L2K02	325C462080	COIL-PEAKING - 180MH-J	
L2K05	409P777080	EMI-F-CHIP - BLM21P221S	
L2L00	409P777080	EMI-F-CHIP - BLM21P221S	
L2L01	325C461030	COIL-PEAKING - 10MH-K	
L2L02	325C461030	COIL-PEAKING - 10MH-K	
L2L03	325C241030	COIL-CHIP - 10MH-K	
L2LA0	409P777080	EMI-F-CHIP - BLM21P221S	
L2LA1	325C461030	COIL-PEAKING - 10MH-K	
L2LA2	325C461030	COIL-PEAKING - 10MH-K	
L2M00	409P777080	EMI-F-CHIP - BLM21P221S	
L2M01	409P777080	EMI-F-CHIP - BLM21P221S	
L2M32	409P777080	EMI-F-CHIP - BLM21P221S	
L2M50	325C146050	COIL-CHIP - 15MH-J	
L2M93	409P777080	EMI-F-CHIP - BLM21P221S	
L2MA0	325C461050	COIL-PEAKING - 15MH-K	
L2MA1	325C461030	COIL-PEAKING - 10MH-K	
L2MD1	325C461030	COIL-PEAKING - 10MH-K	
L2N00	325C461090	COIL-PEAKING - 33MH-K	
L2NA1	325C461030	COIL-PEAKING - 10MH-K	
L2NA2	325C461080	COIL-PEAKING - 27MH-K	
L2NC0	325C461030	COIL-PEAKING - 10MH-K	
L2NC1	325C461030	COIL-PEAKING - 10MH-K	
L2P00	325C241030	COIL-CHIP - 10MH-K	
L2P01	325C461030	COIL-PEAKING - 10MH-K	
L2S00	325C461090	COIL-PEAKING - 33MH-K	
L2V19	325C461010	COIL-PEAKING - 6.8MH-K	
L2V29	325C461030	COIL-PEAKING - 10MH-K	
L2V55	325C461030	COIL-PEAKING - 10MH-K	
L2V61	325C461010	COIL-PEAKING - 6.8MH-K	
L2W02	409P923060	EMI-F-CHIP - BLM21B272S	
L2W03	409P923060	EMI-F-CHIP - BLM21B272S	
L2W04	409P923060	EMI-F-CHIP - BLM21B272S	
L3A10	409P923060	EMI-F-CHIP - BLM21B272S	
L3A49	409P923060	EMI-F-CHIP - BLM21B272S	
L3K00	325C461030	COIL-PEAKING - 10MH-K	
L4B01	321C130010	COIL-RF - 2MH	
L4B02	321C130090	COIL-RF - 10MH-K	
L5A22	333P059020	COIL-HORIZ-LIN	
L5A31	411P001010	LEAD-FERRITE	
L5A34	321C130010	COIL-RF - 2MH	
L5A41	321C141010	COIL-RF - 6.8MH-M	
L5A51	321C151040	COIL-RF - 12MH-K	
L5A54	411D009020	CORE-FERRITE	
L6B50	411P001010	LEAD-FERRITE	
L6G50	411P001010	LEAD-FERRITE	
L6K00	325C241030	COIL-CHIP - 10MH-K	
L6K01	325C241030	COIL-CHIP - 10MH-K	
L6K02	325C241030	COIL-CHIP - 10MH-K	
L6K03	409P777080	EMI-F-CHIP - BLM21P221S	
L6K04	409P777080	EMI-F-CHIP - BLM21P221S	
L6K05	409P777080	EMI-F-CHIP - BLM21P221S	
L6K06	409P777080	EMI-F-CHIP - BLM21P221S	
L6K07	409P777080	EMI-F-CHIP - BLM21P221S	

Ref #	Part #	Part Name & Description	[#]
L6K08	409P777080	EMI-F-CHIP - BLM21P221S	
L6K09	409P777080	EMI-F-CHIP - BLM21P221S	
L6L20	409P777080	EMI-F-CHIP - BLM21P221S	
L6L21	409P777080	EMI-F-CHIP - BLM21P221S	
L6L22	409P777080	EMI-F-CHIP - BLM21P221S	
L6L23	409P777080	EMI-F-CHIP - BLM21P221S	
L6M00	409P777080	EMI-F-CHIP - BLM21P221S	
L6M01	325C242010	COIL-CHIP - 47MH-K	
L6M03	325C241030	COIL-CHIP - 10MH-K	
L6R04	321C141010	COIL-RF - 6.8MH-M	
L6R50	411P001010	LEAD-FERRITE	
L6Y50	325C461030	COIL-PEAKING - 10MH-K	
L6Y51	325C167040	COIL-PEAKING - 82MH-J	
L7A16	409P777050	EMI-F-CHIP - BLM21B201S	
L7A62	409P777050	EMI-F-CHIP - BLM21B201S	
L7A99	409P777050	EMI-F-CHIP - BLM21B201S	
L7C21	409P777050	EMI-F-CHIP - BLM21B201S	
L7C22	409P777050	EMI-F-CHIP - BLM21B201S	
L7C23	409P777050	EMI-F-CHIP - BLM21B201S	
L7C24	409P777050	EMI-F-CHIP - BLM21B201S	
L7D00	409P777020	EMI-F-CHIP - BLM21A05	
L7D01	409P777020	EMI-F-CHIP - BLM21A05	
L7D03	409P777080	EMI-F-CHIP - BLM21P221S	
L7D04	409P777080	EMI-F-CHIP - BLM21P221S	
L7D11	325C241030	COIL-CHIP - 10MH-K	
L7D12	409P777020	EMI-F-CHIP - BLM21A05	
L7D13	325C241030	COIL-CHIP - 10MH-K	
L7D14	409P777020	EMI-F-CHIP - BLM21A05	
L7D15	325C241030	COIL-CHIP - 10MH-K	
L7E00	409P777020	EMI-F-CHIP - BLM21A05	
L7E01	409P777020	EMI-F-CHIP - BLM21A05	
L7E11	325C241030	COIL-CHIP - 10MH-K	
L7E12	409P777020	EMI-F-CHIP - BLM21A05	
L7E13	325C241030	COIL-CHIP - 10MH-K	
L7E14	409P777020	EMI-F-CHIP - BLM21A05	
L7E15	325C241030	COIL-CHIP - 10MH-K	
L7G00	325C242050	COIL-CHIP - 100MH-K	
L7G10	325C242050	COIL-CHIP - 100MH-K	
L7G11	325C241030	COIL-CHIP - 10MH-K	
L7H00	409P777080	EMI-F-CHIP - BLM21P221S	
L7H02	409P777080	EMI-F-CHIP - BLM21P221S	
L7H03	409P777080	EMI-F-CHIP - BLM21P221S	
L7H04	409P777080	EMI-F-CHIP - BLM21P221S	
L7H05	409P777080	EMI-F-CHIP - BLM21P221S	
L7H06	409P777080	EMI-F-CHIP - BLM21P221S	
L7H07	409P777080	EMI-F-CHIP - BLM21P221S	
L7H08	325C241030	COIL-CHIP - 10MH-K	
L7H09	409P777080	EMI-F-CHIP - BLM21P221S	
L7H10	325C241030	COIL-CHIP - 10MH-K	
L7H11	409P777080	EMI-F-CHIP - BLM21P221S	
L7H12	409P777080	EMI-F-CHIP - BLM21P221S	
L7H13	409P777080	EMI-F-CHIP - BLM21P221S	
L7H14	409P777080	EMI-F-CHIP - BLM21P221S	
L7H15	409P777080	EMI-F-CHIP - BLM21P221S	
L7H16	409P777080	EMI-F-CHIP - BLM21P221S	
L7HA0	409P777080	EMI-F-CHIP - BLM21P221S	
L7HA1	409P777080	EMI-F-CHIP - BLM21P221S	
L7HA2	409P777080	EMI-F-CHIP - BLM21P221S	
L7HA3	409P777080	EMI-F-CHIP - BLM21P221S	
L7HA4	409P777080	EMI-F-CHIP - BLM21P221S	

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]	Ref #	Part #	Part Name & Description	[#]
L7HA5	409P777080	EMI-F-CHIP - BLM21P221S		LC6K00	409P875090	EMI-F-CHIP - ELKE103FA	
L7HA6	409P777080	EMI-F-CHIP - BLM21P221S		LC6K01	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HA7	409P777080	EMI-F-CHIP - BLM21P221S		LC6K02	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HA8	409P777080	EMI-F-CHIP - BLM21P221S		LC6K03	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HA9	409P777080	EMI-F-CHIP - BLM21P221S		LC6K04	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HB0	409P777080	EMI-F-CHIP - BLM21P221S		LC6K05	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HB1	409P777080	EMI-F-CHIP - BLM21P221S		LC6M00	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HB2	409P777080	EMI-F-CHIP - BLM21P221S		LC6M01	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HB3	409P777080	EMI-F-CHIP - BLM21P221S		LC6M02	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HB4	409P777080	EMI-F-CHIP - BLM21P221S		LC6M03	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HD0	409P777080	EMI-F-CHIP - BLM21P221S		LC6M04	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HD1	409P777080	EMI-F-CHIP - BLM21P221S		LC6M05	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HD2	409P777080	EMI-F-CHIP - BLM21P221S		LC6M06	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HD3	409P777080	EMI-F-CHIP - BLM21P221S		LC6M07	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HD4	409P777080	EMI-F-CHIP - BLM21P221S		LC6M09	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7HD5	409P777080	EMI-F-CHIP - BLM21P221S		LC7D02	409P875090	EMI-F-CHIP - ELKE103FA	
L7HD6	409P777080	EMI-F-CHIP - BLM21P221S		LC7D05	409P875090	EMI-F-CHIP - ELKE103FA	
L7HD7	409P777080	EMI-F-CHIP - BLM21P221S		LC7D10	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L7K01	325C121030	COIL-PEAKING - 10MH-K		LC7D11	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8C01	321C141070	COIL-RF - 22MH-K		LC7D12	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8C02	321C141070	COIL-RF - 22MH-K		LC7D13	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8C03	321C141070	COIL-RF - 22MH-K		LC7D14	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8C04	321C141070	COIL-RF - 22MH-K		LC7E10	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8D01	409P777080	EMI-F-CHIP - BLM21P221S		LC7E11	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8D02	409P777080	EMI-F-CHIP - BLM21P221S		LC7E12	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8D03	409P777080	EMI-F-CHIP - BLM21P221S		LC7E13	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8D04	409P777080	EMI-F-CHIP - BLM21P221S		LC7E14	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8D05	409P777080	EMI-F-CHIP - BLM21P221S		LC7G01	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8D06	409P777080	EMI-F-CHIP - BLM21P221S		LC7G02	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8D07	409P777080	EMI-F-CHIP - BLM21P221S		LC7G03	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8G00	409P777080	EMI-F-CHIP - BLM21P221S		LC7G04	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L8G01	409P777080	EMI-F-CHIP - BLM21P221S		LC7G05	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L9A20	321C141070	COIL-RF - 22MH-K		LC7G06	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L9A50	411D009020	CORE-FERRITE		LC7G07	409P875090	EMI-F-CHIP - ELKE103FA	
L9A52	411D009020	CORE-FERRITE		LC7G08	409P875090	EMI-F-CHIP - ELKE103FA	
L9A53	321C141010	COIL-RF - 6.8MH-M		LC7G09	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L9A54	411D009020	CORE-FERRITE		LC7G10	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L9A55	321C142030	COIL-RF - 68MH-K		LC7G11	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L9A56	411D009020	CORE-FERRITE		LC7G12	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L9A57	321C141070	COIL-RF - 22MH-K		LC7G13	409P876020	EMI-F-CHIP - CNF20C470S/CKD510JB1H470S	
L9A62	321C141010	COIL-RF - 6.8MH-M		LF6Y90	337P208010	DELAY-LINE - 630EMN-1545 18	
L9A65	321C141010	COIL-RF - 6.8MH-M		LF6Y91	337P208010	DELAY-LINE - 630EMN-1545 18	
L9B01	351P226010	COIL-CHOKE - 150UH		LF7D00	409P901010	LP-FILTER - 14MHZ SMD	
L9B02	321C141070	COIL-RF - 22MH-K		LF7D01	409P901010	LP-FILTER - 14MHZ SMD	
L9B03	321C141070	COIL-RF - 22MH-K		LF7D02	409P901010	LP-FILTER - 14MHZ SMD	
L9B04	351P226010	COIL-CHOKE - 150UH		LF7E00	409P901010	LP-FILTER - 14MHZ SMD	
L9B05	321C141030	COIL-RF - 10MH-K		LF7E01	409P901010	LP-FILTER - 14MHZ SMD	
L9B06	411P001010	LEAD-FERRITE		LF7E02	409P901010	LP-FILTER - 14MHZ SMD	
L9B07	411P001010	LEAD-FERRITE		LF7G00	409P901010	LP-FILTER - 14MHZ SMD	
L9C01	321C142030	COIL-RF - 68MH-K		LF7G01	409P901010	LP-FILTER - 14MHZ SMD	
L9C02	321C142030	COIL-RF - 68MH-K		LF7G02	409P901010	LP-FILTER - 14MHZ SMD	
L9D00	351P222010	LINE FILTER - ELF24V050A		TRANSFORMERS			
L9D01	351P222010	LINE FILTER - ELF24V050A		T5A31	349P216010	TRANS-HORIZ	
L9D02	351P223010	LINE FILTER - SLF15N0601		T5A32	336P040010	TRANS-HORIZ-DRIVE	
LC2K00	409P777020	EMI-F-CHIP - BLM21A05		T5A51	334P281010	TRANS-FLYBACK	
LC2K01	409P777020	EMI-F-CHIP - BLM21A05		T9A20	350P796010	TRANS-POWER	
LC2K02	409P777020	EMI-F-CHIP - BLM21A05		T9A50	350P795010	TRANS-POWER	
LC2K03	409P777020	EMI-F-CHIP - BLM21A05					
LC3K00	409P777020	EMI-F-CHIP - BLM21A05					
LC3K01	409P777020	EMI-F-CHIP - BLM21A05					

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]
VARIABLE RESISTORS			
	129P059050	VR-FOCUS - MHF116-50W	
RV9D00	265P100020	VARISTOR - ERZV10D271CS	
RESISTORS			
CHIP Type Resistors (Listed by Value)			
<u>Value</u>	<u>Part No.</u>	<u>Value</u>	<u>Part No.</u>
1/16W 00HM	103P509050	1/16W 2.2K-F	103P493030
1/16W 22-J	103P500050	1/16W 2.2K-J	103P502090
1/8W 27-J	103P400060	1/16W 2.7K-J	103P503000
1/16W 33-J	103P500070	1/16W 3K-F	103P493060
1/16W 47-J	103P500090	1/16W 3.3K-F	103P493070
1/16W 56-J	103P501000	1/16W 3.3K-J	103P503010
1/16W 68-J	103P501010	1/16W 3.9K-F	103P493090
1/16W 82-J	103P501020	1/16W 3.9K-J	103P503020
1/16W 100-J	103P501030	1/16W 4.7K-F	103P494010
1/8W 100-J	103P401030	1/16W 4.7K-J	103P503030
1/16W 120-J	103P501040	1/16W 5.1K-F	103P494020
1/16W 180-J	103P501060	1/16W 5.6K-J	103P503040
1/16W 200-F	103P490080	1/16W 6.8K-F	103P494050
1/16W 220-F	103P490090	1/16W 6.8K-J	103P503050
1/16W 220-J	103P501070	1/16W 8.2K-J	103P503060
1/16W 240-F	103P491000	1/16W 10K-F	103P494090
1/8W 270-J	103P401080	1/16W 10K-J	103P503070
1/16W 330-F	103P491030	1/16W 12K-J	103P503080
1/16W 330-J	103P501090	1/16W 13K-F	103P495020
1/16W 390-F	103P491050	1/16W 15K-F	103P495030
1/16W 390-J	103P502000	1/16W 15K-J	103P503090
1/16W 470-F	103P491070	1/16W 18K-J	103P504000
1/16W 470-J	103P502010	1/16W 20K-F	103P495060
1/16W 510-F	103P491080	1/16W 22K-F	103P495070
1/16W 560-F	103P491090	1/16W 22K-J	103P504010
1/16W 560-J	103P502020	1/16W 33K-J	103P504030
1/16W 620-F	103P492000	1/16W 47K-J	103P504050
1/16W 680-F	103P492010	1/16W 56K-J	103P504060
1/16W 680-J	103P502030	1/16W 62K-F	103P496080
1/16W 820-F	103P492030	1/16W 68K-F	103P496090
1/16W 820-J	103P502040	1/16W 68K-J	103P504070
1/16W 1K-J	103P502050	1/16W 75K-J	103P509090
1/8W 1K-J	103P402050	1/16W 82K-J	103P504080
1/16W 1.1K-F	103P492060	1/16W 100K-J	103P504090
1/16W 1.2K-J	103P502060	1/16W 120K-J	103P505000
1/16W 1.3K-F	103P492080	1/16W 330K-J	103P505050
1/16W 1.5K-F	103P492090	1/16W 680K-J	103P505090
1/16W 1.5K-J	103P502070	1/16W 820K-J	103P506000
1/8W 1.5K-J	103P402070	1/16W 1M-J	103P506010
1/16W 1.8K-J	103P502080	1/16W 3.3M-J	103P506070
1/16W 2K-F	103P493020		
Conventional Resistors (By Ref #)			
<u>Ref #</u>	<u>Part #</u>	<u>Part Name & Description</u>	<u>[#]</u>
R3E09	109D151010	R-CARBON - 1/4W 2.2-J	
R3E11	109D151010	R-CARBON - 1/4W 2.2-J	
R3E12	109D151010	R-CARBON - 1/4W 2.2-J	
R3E14	109D151010	R-CARBON - 1/4W 2.2-J	
R4B03	103P713090	R-CARBON - 1/4W 15K-J	
R4B05	103P714030	R-CARBON - 1/4W 33K-J	
R4B10	103C188040	R-METAL - 2W 2.2-J	
R4B12	103C188040	R-METAL - 2W 2.2-J	

Ref #	Part #	Part Name & Description	[#]
R4B16	109P095010	R-METAL-LIN - 1/4W 5.1K-J	
R4B17	103P711090	R-CARBON - 1/4W 330-J	
R4B20	103P711090	R-CARBON - 1/4W 330-J	
R4B23	103P411070	R-CARBON - 1/4W 220-J	
R4B24	103P712050	R-CARBON - 1/4W 1K-J	
R4B25	103P712050	R-CARBON - 1/4W 1K-J	
R4B26	103P713030	R-CARBON - 1/4W 4.7K-J	
R5A00	103P711030	R-CARBON - 1/4W 100-J	
R5A01	103P713010	R-CARBON - 1/4W 3.3K-J	
R5A02	103P711030	R-CARBON - 1/4W 100-J	
R5A03	103P713010	R-CARBON - 1/4W 3.3K-J	
R5A04	103P462040	R-METAL - 1/4W 910-F	
R5A05	103P713010	R-CARBON - 1/4W 3.3K-J	
R5A06	103P712050	R-CARBON - 1/4W 1K-J	
R5A07	103P714080	R-CARBON - 1/4W 82K-J	
R5A08	103P714050	R-CARBON - 1/4W 47K-J	
R5A09	103P714040	R-CARBON - 1/4W 39K-J	
R5A10	103P714040	R-CARBON - 1/4W 39K-J	
R5A11	103P713070	R-CARBON - 1/4W 10K-J	
R5A12	103P712050	R-CARBON - 1/4W 1K-J	
R5A13	103P464020	R-METAL - 1/4W 2.4K-F	
R5A14	103P464030	R-METAL - 1/4W 5.6K-F	
R5A15	103P713030	R-CARBON - 1/4W 4.7K-J	
R5A16	103P714010	R-CARBON - 1/4W 22K-J	
R5A17	103P712050	R-CARBON - 1/4W 1K-J	
R5A18	103P712050	R-CARBON - 1/4W 1K-J	
R5A19	103P712010	R-CARBON - 1/4W 470-J	
R5A20	103P714050	R-CARBON - 1/4W 47K-J	
R5A21	103P713030	R-CARBON - 1/4W 4.7K-J	
R5A22	103P714010	R-CARBON - 1/4W 22K-J	
R5A23	103P713070	R-CARBON - 1/4W 10K-J	
R5A24	103P714070	R-CARBON - 1/4W 68K-J	
R5A25	103P464030	R-METAL - 1/4W 5.6K-F	
R5A26	103P464030	R-METAL - 1/4W 5.6K-F	
R5A27	103P713070	R-CARBON - 1/4W 10K-J	
R5A28	103P715010	R-CARBON - 1/4W 150K-J	
R5A29	103P714040	R-CARBON - 1/4W 39K-J	
R5A30	103P714040	R-CARBON - 1/4W 39K-J	
R5A31	103P712080	R-CARBON - 1/4W 1.8K-J	
R5A32	103P713070	R-CARBON - 1/4W 10K-J	
R5A33	103P463060	R-METAL - 1/4W 3K-F	
R5A34	103P711000	R-CARBON - 1/4W 56-J	
R5A35	103P142010	R-CARBON - 1/2W 470-J	
R5A36	103C393000	R-METAL-P - 3W 2.7K-J	
R5A37	103C393000	R-METAL-P - 3W 2.7K-J	
R5A38	103C197060	R-METAL - 3W 0.47-J	
R5A39	103P140090	R-CARBON - 1/2W 47-J	
R5A40	103P714090	R-CARBON - 1/4W 100K-J	
R5A41	103P715020	R-CARBON - 1/4W 180K-J	
R5A42	103P713070	R-CARBON - 1/4W 10K-J	
R5A43	103P714010	R-CARBON - 1/4W 22K-J	
R5A44	103P712090	R-CARBON - 1/4W 2.2K-J	
R5A45	103P143050	R-CARBON - 1/2W 6.8K-J	
R5A46	103C391050	R-METAL-P - 3W 150-J	
R5A47	103P714080	R-CARBON - 1/4W 82K-J	
R5A48	103P714050	R-CARBON - 1/4W 47K-J	
R5A49	103P711030	R-CARBON - 1/4W 100-J	
R5A50	103P714050	R-CARBON - 1/4W 47K-J	
R5A51	103P712050	R-CARBON - 1/4W 1K-J	
R5A52	103P713010	R-CARBON - 1/4W 3.3K-J	

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]	Ref #	Part #	Part Name & Description	[#]
R5A53	103P713070	R-CARBON - 1/4W 10K-J		R5H19	103P713070	R-CARBON - 1/4W 10K-J	
R5A54	103P714010	R-CARBON - 1/4W 22K-J		R5H20	103P713070	R-CARBON - 1/4W 10K-J	
R5A55	103P143050	R-CARBON - 1/2W 6.8K-J		R5H21	103P713030	R-CARBON - 1/4W 4.7K-J	
R5A56	103P715060	R-CARBON - 1/4W 390K-J		R5H44	103P711030	R-CARBON - 1/4W 100-J	
R5A57	103P711030	R-CARBON - 1/4W 100-J		R5H47	103C172010	R-METAL - 1W 470-J	
R5A58	103P464080	R-METAL - 1/4W 9.1K-F		R5H48	103P712060	R-CARBON - 1/4W 1.2K-J	
R5A59	103P461070	R-METAL - 1/4W 470-F		R5H49	103P714070	R-CARBON - 1/4W 68K-J	
R5A60	103P464000	R-METAL - 1/4W 4.3K-F		R5H50	103P714070	R-CARBON - 1/4W 68K-J	
R5A62	103P711070	R-CARBON - 1/4W 220-J		R5H51	103P712060	R-CARBON - 1/4W 1.2K-J	
R5A64	103P712010	R-CARBON - 1/4W 470-J		R5H55	103P140070	R-CARBON - 1/2W 33-J	
R5A65	103P141030	R-CARBON - 1/2W 100-J		R5H56	103P140070	R-CARBON - 1/2W 33-J	
R5A68	103P463050	R-METAL - 1/4W 2.7K-F		R5H58	103P148000	R-CARBON - 1/2W 1-J	
R5A69	103P462010	R-METAL - 1/4W 680-F		R5H59	103C191050	R-METAL - 3W 150-J	
R5A70	103P463040	R-METAL - 1/4W 2.4K-F		R5H60	103C178080	R-METAL - 1W 4.7-J	
R5A71	103P713070	R-CARBON - 1/4W 10K-J		R5H67	103P148000	R-CARBON - 1/2W 1-J	
R5A72	103P463050	R-METAL - 1/4W 2.7K-F		R5K02	103P412050	R-CARBON - 1/4W 1K-J	
R5A73	103P714050	R-CARBON - 1/4W 47K-J		R5K03	103P145000	R-CARBON - 1/2W 120K-J	
R5A74	103P713070	R-CARBON - 1/4W 10K-J		R5K04	103P144090	R-CARBON - 1/2W 100K-J	
R5A75	103P713070	R-CARBON - 1/4W 10K-J		R5K05	103P145000	R-CARBON - 1/2W 120K-J	
R5A76	103P713070	R-CARBON - 1/4W 10K-J		R5K06	103P144090	R-CARBON - 1/2W 100K-J	
R5A77	103P711090	R-CARBON - 1/4W 330-J		R5K07	103P145000	R-CARBON - 1/2W 120K-J	
R5A78	103P714010	R-CARBON - 1/4W 22K-J		R5K08	103P144090	R-CARBON - 1/2W 100K-J	
R5A79	103P713030	R-CARBON - 1/4W 4.7K-J		R5K09	103P762020	R-FUSE - 1/2W 560-J	
R5A80	102P106090	R-WIRE - 2W 0.12-K		R5K10	103P711010	R-CARBON - 1/4W 68-J	
R5A81	103P711030	R-CARBON - 1/4W 100-J		R5K11	103P711090	R-CARBON - 1/4W 330-J	
R5A82	103P370090	R-FUSE - 1/4W 47-J		R5K12	103P760060	R-FUSE - 1/2W 27-J	
R5A83	103P464070	R-METAL - 1/4W 8.2K-F		R5K20	103P463060	R-METAL - 1/4W 3K-F	
R5A84	103P464070	R-METAL - 1/4W 8.2K-F		R5K22	103P145030	R-CARBON - 1/2W 220K-J	
R5A85	103P710070	R-CARBON - 1/4W 33-J		R5K23	103P145030	R-CARBON - 1/2W 220K-J	
R5A86	103P142060	R-CARBON - 1/2W 1.2K-J		R5K24	103P145030	R-CARBON - 1/2W 220K-J	
R5A87	103P711030	R-CARBON - 1/4W 100-J		R5K25	103P713040	R-CARBON - 1/4W 5.6K-J	
R5A88	103P464000	R-METAL - 1/4W 4.3K-F		R5K31	103P711030	R-CARBON - 1/4W 100-J	
R5A89	103P463050	R-METAL - 1/4W 2.7K-F		R5K34	103P760060	R-FUSE - 1/2W 27-J	
R5A90	103P711060	R-CARBON - 1/4W 180-J		R5K46	103P712010	R-CARBON - 1/4W 470-J	
R5A91	103P467030	R-METAL - 1/4W 100K-F		R5K50	103P762050	R-FUSE - 1/2W 1K-J	
R5A93	103P140090	R-CARBON - 1/2W 47-J		R6B01	103P711030	R-CARBON - 1/4W 100-J	
R5A94	103C390070	R-METAL-P - 3W 33-J		R6B02	103P713090	R-CARBON - 1/4W 15K-J	
R5A95	103P714030	R-CARBON - 1/4W 33K-J		R6B03	103P463050	R-METAL - 1/4W 2.7K-F	
R5A97	103P142040	R-CARBON - 1/2W 820-J		R6B04	103P462080	R-METAL - 1/4W 1.3K-F	
R5A98	103C198010	R-METAL - 3W 1.2-J		R6B05	103P711070	R-CARBON - 1/4W 220-J	
R5A99	103P714090	R-CARBON - 1/4W 100K-J		R6B06	103P462030	R-METAL - 1/4W 820-F	
R5B01	103P714030	R-CARBON - 1/4W 33K-J		R6B07	103P711030	R-CARBON - 1/4W 100-J	
R5B02	103P714090	R-CARBON - 1/4W 100K-J		R6B09	103P711030	R-CARBON - 1/4W 100-J	
R5B03	103P712060	R-CARBON - 1/4W 1.2K-J		R6B10	103P713030	R-CARBON - 1/4W 4.7K-J	
R5B04	103P711030	R-CARBON - 1/4W 100-J		R6B11	103C194020	R-METAL - 3W 27K-J	
R5H01	103P712050	R-CARBON - 1/4W 1K-J		R6B12	103P461050	R-METAL - 1/4W 390-F	
R5H02	103P758000	R-FUSE - 1/4W 1-J		R6B16	103P411000	R-CARBON - 1/4W 56-J	
R5H03	103P714030	R-CARBON - 1/4W 33K-J		R6B21	103P467030	R-METAL - 1/4W 100K-F	
R5H04	103P463060	R-METAL - 1/4W 3K-F		R6B22	103P467030	R-METAL - 1/4W 100K-F	
R5H07	103P461060	R-METAL - 1/4W 430-F		R6B23	103P711030	R-CARBON - 1/4W 100-J	
R5H08	103P711030	R-CARBON - 1/4W 100-J		R6B24	103P713030	R-CARBON - 1/4W 4.7K-J	
R5H09	103P711010	R-CARBON - 1/4W 68-J		R6B25	103P711030	R-CARBON - 1/4W 100-J	
R5H10	103P710090	R-CARBON - 1/4W 47-J		R6B26	103P413050	R-CARBON - 1/4W 6.8K-J	
R5H11	103P712020	R-CARBON - 1/4W 560-J		R6B27	103P711030	R-CARBON - 1/4W 100-J	
R5H12	103P712020	R-CARBON - 1/4W 560-J		R6B31	103P142060	R-CARBON - 1/2W 1.2K-J	
R5H13	103P712020	R-CARBON - 1/4W 560-J		R6G01	103P711030	R-CARBON - 1/4W 100-J	
R5H14	103P710090	R-CARBON - 1/4W 47-J		R6G02	103P713090	R-CARBON - 1/4W 15K-J	
R5H15	103P710090	R-CARBON - 1/4W 47-J		R6G03	103P463050	R-METAL - 1/4W 2.7K-F	
R5H16	103P710020	R-CARBON - 1/4W 12-J		R6G04	103P462080	R-METAL - 1/4W 1.3K-F	
R5H17	103P710020	R-CARBON - 1/4W 12-J		R6G06	103P462030	R-METAL - 1/4W 820-F	

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]
R6G07	103P711030	R-CARBON - 1/4W 100-J	
R6G09	103P711030	R-CARBON - 1/4W 100-J	
R6G10	103P713030	R-CARBON - 1/4W 4.7K-J	
R6G11	103C194020	R-METAL - 3W 27K-J	
R6G16	103P411000	R-CARBON - 1/4W 56-J	
R6G21	103P467030	R-METAL - 1/4W 100K-F	
R6G22	103P467030	R-METAL - 1/4W 100K-F	
R6G23	103P711030	R-CARBON - 1/4W 100-J	
R6G31	103P142060	R-CARBON - 1/2W 1.2K-J	
R6R01	103P711030	R-CARBON - 1/4W 100-J	
R6R02	103P713090	R-CARBON - 1/4W 15K-J	
R6R03	103P463050	R-METAL - 1/4W 2.7K-F	
R6R04	103P462080	R-METAL - 1/4W 1.3K-F	
R6R05	103P711070	R-CARBON - 1/4W 220-J	
R6R06	103P462030	R-METAL - 1/4W 820-F	
R6R07	103P711030	R-CARBON - 1/4W 100-J	
R6R09	103P711030	R-CARBON - 1/4W 100-J	
R6R10	103P713030	R-CARBON - 1/4W 4.7K-J	
R6R11	103C194020	R-METAL - 3W 27K-J	
R6R16	103P411000	R-CARBON - 1/4W 56-J	
R6R21	103P467030	R-METAL - 1/4W 100K-F	
R6R22	103P467030	R-METAL - 1/4W 100K-F	
R6R23	103P711030	R-CARBON - 1/4W 100-J	
R6R31	103P142060	R-CARBON - 1/2W 1.2K-J	
R7K01	103P712050	R-CARBON - 1/4W 1K-J	
R7K02	103P713010	R-CARBON - 1/4W 3.3K-J	
R7L26	103P462090	R-METAL - 1/4W 1.5K-F	
R7L29	103P464030	R-METAL - 1/4W 5.6K-F	
R7L32	103P466070	R-METAL - 1/4W 56K-F	
R8C03	103P711090	R-CARBON - 1/4W 330-J	
R8C07	103C391050	R-METAL-P - 3W 150-J	
R8C08	103P714010	R-CARBON - 1/4W 22K-J	
R8C11	103P711090	R-CARBON - 1/4W 330-J	
R8C15	103C391050	R-METAL-P - 3W 150-J	
R8C19	103P711090	R-CARBON - 1/4W 330-J	
R8C23	103C391050	R-METAL-P - 3W 150-J	
R8C27	103P711090	R-CARBON - 1/4W 330-J	
R8C31	103C391050	R-METAL-P - 3W 150-J	
R8C35	103P711090	R-CARBON - 1/4W 330-J	
R8C39	103C391050	R-METAL-P - 3W 150-J	
R8C43	103P711090	R-CARBON - 1/4W 330-J	
R8C47	103C391050	R-METAL-P - 3W 150-J	
R8C60	103C191090	R-METAL - 3W 330-J	
R8C61	103C191090	R-METAL - 3W 330-J	
R8C62	103P713010	R-CARBON - 1/4W 3.3K-J	
R8C63	103P713010	R-CARBON - 1/4W 3.3K-J	
R8C64	103P713010	R-CARBON - 1/4W 3.3K-J	
R8C65	103P713010	R-CARBON - 1/4W 3.3K-J	
R8C66	103P713010	R-CARBON - 1/4W 3.3K-J	
R8C67	103P713010	R-CARBON - 1/4W 3.3K-J	
R8C69	103P714010	R-CARBON - 1/4W 22K-J	
R9A02	102P084000	R-CEMENT-WIRE - 15W 2.2-K	
R9A09	103P145050	R-CARBON - 1/2W 330K-J	
R9A10	103P714020	R-CARBON - 1/4W 27K-J	
R9A11	103P145050	R-CARBON - 1/2W 330K-J	
R9A12	103P713070	R-CARBON - 1/4W 10K-J	
R9A13	103P713000	R-CARBON - 1/4W 2.7K-J	
R9A20	103C181020	R-METAL - 2W 82-J	
R9A21	103P712050	R-CARBON - 1/4W 1K-J	
R9A23	103P710090	R-CARBON - 1/4W 47-J	

Ref #	Part #	Part Name & Description	[#]
R9A24	103P142070	R-CARBON - 1/2W 1.5K-J	
R9A29	103P713070	R-CARBON - 1/4W 10K-J	
R9A51	103P715050	R-CARBON - 1/4W 330K-J	
R9A52	103P710090	R-CARBON - 1/4W 47-J	
R9A53	103P712030	R-CARBON - 1/4W 680-J	
R9A54	102P107000	R-WIRE - 2W 0.15-K	
R9A55	102P106090	R-WIRE - 2W 0.12-K	
R9A56	103P713010	R-CARBON - 1/4W 3.3K-J	
R9A57	103P712090	R-CARBON - 1/4W 2.2K-J	
R9A58	103P145030	R-CARBON - 1/2W 220K-J	
R9A59	103P710070	R-CARBON - 1/4W 33-J	
R9A61	103P713040	R-CARBON - 1/4W 5.6K-J	
R9A62	103P713070	R-CARBON - 1/4W 10K-J	
R9A63	103P713020	R-CARBON - 1/4W 3.9K-J	
R9A66	103P712070	R-CARBON - 1/4W 1.5K-J	
R9A67	103P710050	R-CARBON - 1/4W 22-J	
R9A68	103C180050	R-METAL - 2W 22-J	
R9A69	103C180050	R-METAL - 2W 22-J	
R9A70	109D151090	R-CARBON - 1/4W 33-J	
R9A71	103P145030	R-CARBON - 1/2W 220K-J	
R9A73	103P412050	R-CARBON - 1/4W 1K-J	
R9A74	103P144040	R-CARBON - 1/2W 39K-J	
R9A80	103C193060	R-METAL - 3W 8.2K-J	
R9A81	103P142090	R-CARBON - 1/2W 2.2K-J	
R9A83	103P464010	R-METAL - 1/4W 4.7K-F	
R9A84	103P713070	R-CARBON - 1/4W 10K-J	
R9B01	103P711030	R-CARBON - 1/4W 100-J	
R9B02	103P714010	R-CARBON - 1/4W 22K-J	
R9B03	103P714050	R-CARBON - 1/4W 47K-J	
R9B04	103P714050	R-CARBON - 1/4W 47K-J	
R9B05	103P714090	R-CARBON - 1/4W 100K-J	
R9B06	103P714090	R-CARBON - 1/4W 100K-J	
R9B07	103P714010	R-CARBON - 1/4W 22K-J	
R9B08	109D151030	R-CARBON - 1/4W 4.7-J	
R9B09	109D151030	R-CARBON - 1/4W 4.7-J	
R9B11	103P461070	R-METAL - 1/4W 470-F	
R9C31	103C197080	R-METAL - 3W 0.68-J	
R9C32	103C197080	R-METAL - 3W 0.68-J	

CAPACITORS & TRIMMERS

CHIP Type Capacitors (Listed by Value)

Value	Part No.	Value	Part No.
CH50V 3P-C	154P350050	B50V 1500P-K	141P141010
CH50V 10P-C	154P341010	B50V 2200P-K	141P141030
CH50V 15P-J	154P341050	B50V 4700P-K	141P141070
CH50V 22P-J	154P341090	B50V 6800P-K	141P141090
CH50V 33P-J	154P342030	B50V 8200P-K	141P142000
CH50V 39P-J	154P342050	B50V 0.01M-K	141P142010
CH50V 47P-J	154P342070	F50V 0.01M-Z	141P143080
CH50V 56P-J	154P342090	B50V 0.015M-K	141P142030
SL50V 56P-J	154P353000	B25V 0.047M-K	141P142090
CH50V 68P-J	154P343010	B25V 0.068M-K	141P143010
CH50V 82P-J	154P343030	B16V 0.082M-K	141P143020
CH50V 100P-J	154P343050	B16V 0.1M-K	141P143030
50V 120P-J	154P343070	F25V 0.1M-Z	141P144020
SL50V 120P-J	154P353080	25V 0.33M-K	141P138080
CH50V 150P-J	154P343090	B10V 0.47M-K	141P146080
SL50V 150P-J	154P354000	B16V 0.47M-K	141P139090
B50V 220P-K	141P140010	F16V 0.47M-Z	141P144050

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]	Ref #	Part #	Part Name & Description	[#]
	CH50V 220P-J	154P344030	B16V 1M-K	141P134070	C2N17	181P355000	C-ELEC - 50V 0.47M-M
	CH50V 270P-J	154P344050	F16V 1M-Z	141P144060	C2N18	181P355000	C-ELEC - 50V 0.47M-M
	CH50V 330P-J	154P344070	50V 2.2M-M 105C	181P526020	C2N19	181P355000	C-ELEC - 50V 0.47M-M
	SL50V 390P-J	154P355000	B10V 3.3M-M	141P133010	C2N22	181P350060	C-ELEC - 6.3V 1000M-M
	B50V 470P-K	141P140050	6.3V 22M-M 105C	181P520010	C2N28	181P350060	C-ELEC - 6.3V 1000M-M
	CH50V 470P-J	154P345010	6.3V 47M-M 105C	181P520030	C2N29	181P350060	C-ELEC - 6.3V 1000M-M
	SL50V 470P-J	154P355020	16V 47M-M	181P520060	C2N33	181P355050	C-ELEC - 50V 10M-M
	CH25V 560P-J	154P345030	16V 47M-M 105C	181P522060	C2NA6	181P355050	C-ELEC - 50V 10M-M
	CH25V 1000P-J	154P345090	6.3V 100M-M 105C	181P520040	C2NC5	181P355050	C-ELEC - 50V 10M-M
	B50V 1000P-K	141P140090	4V 220M-M 105C	181P528010	C2P01	181P355050	C-ELEC - 50V 10M-M
Conventional Capacitors (By Ref #)				C2P02	181P352030	C-ELEC - 16V 47M-M	
Ref #	Part #	Part Name & Description	[#]	C2P04	181P351050	C-ELEC - 10V 220M-M	
C1A13	181P352040	C-ELEC - 16V 100M-M		C2P08	181P352030	C-ELEC - 16V 47M-M	
C1A21	181P210040	C-ELEC - 6.3V 100M-M		C2P12	181P355050	C-ELEC - 50V 10M-M	
C1A24	181P210040	C-ELEC - 6.3V 100M-M		C2S00	181P355000	C-ELEC - 50V 0.47M-M	
C1A26	172P262010	C-M-POLY - 50V 0.047M-J		C2S01	181P355000	C-ELEC - 50V 0.47M-M	
C1B13	181P352040	C-ELEC - 16V 100M-M		C2S02	181P355000	C-ELEC - 50V 0.47M-M	
C1B21	181P210040	C-ELEC - 6.3V 100M-M		C2S05	181P355000	C-ELEC - 50V 0.47M-M	
C1B24	181P210040	C-ELEC - 6.3V 100M-M		C2S06	181P355000	C-ELEC - 50V 0.47M-M	
C1B26	172P262010	C-M-POLY - 50V 0.047M-J		C2S07	181P355000	C-ELEC - 50V 0.47M-M	
C2K00	181P352050	C-ELEC - 16V 220M-M		C2S10	181P350060	C-ELEC - 6.3V 1000M-M	
C2K06	181P355050	C-ELEC - 50V 10M-M		C2S18	181P355000	C-ELEC - 50V 0.47M-M	
C2K08	181P355050	C-ELEC - 50V 10M-M		C2S19	181P355000	C-ELEC - 50V 0.47M-M	
C2K09	181P355050	C-ELEC - 50V 10M-M		C2S20	181P355000	C-ELEC - 50V 0.47M-M	
C2K11	181P355050	C-ELEC - 50V 10M-M		C2S22	181P350060	C-ELEC - 6.3V 1000M-M	
C2K12	181P355050	C-ELEC - 50V 10M-M		C2S29	181P350060	C-ELEC - 6.3V 1000M-M	
C2K14	181P355050	C-ELEC - 50V 10M-M		C2V04	181P359060	C-ELEC - 50V 0.1M-M	
C2K15	181P355050	C-ELEC - 50V 10M-M		C2V05	181P359060	C-ELEC - 50V 0.1M-M	
C2K16	181P355050	C-ELEC - 50V 10M-M		C2V06	181P359060	C-ELEC - 50V 0.1M-M	
C2K17	181P355050	C-ELEC - 50V 10M-M		C2V08	181P359060	C-ELEC - 50V 0.1M-M	
C2K27	181P355050	C-ELEC - 50V 10M-M		C2V09	181P359060	C-ELEC - 50V 0.1M-M	
C2L01	181P352030	C-ELEC - 16V 47M-M		C2V10	181P359060	C-ELEC - 50V 0.1M-M	
C2L06	181P355040	C-ELEC - 50V 4.7M-M		C2V14	181P352040	C-ELEC - 16V 100M-M	
C2L12	181P355040	C-ELEC - 50V 4.7M-M		C2V17	181P355040	C-ELEC - 50V 4.7M-M	
C2L14	181P351070	C-ELEC - 10V 470M-M		C2V19	181P352040	C-ELEC - 16V 100M-M	
C2L16	181P210040	C-ELEC - 6.3V 100M-M		C2V29	181P351070	C-ELEC - 10V 470M-M	
C2L22	181P352030	C-ELEC - 16V 47M-M		C2V30	181P352030	C-ELEC - 16V 47M-M	
C2L24	181P352030	C-ELEC - 16V 47M-M		C2V32	181P355000	C-ELEC - 50V 0.47M-M	
C2LA0	181P352030	C-ELEC - 16V 47M-M		C2V48	172P166030	C-TF - 50V 0.1M-J	
C2LA6	181P355040	C-ELEC - 50V 4.7M-M		C2V49	172P166030	C-TF - 50V 0.1M-J	
C2LB1	181P355040	C-ELEC - 50V 4.7M-M		C2V55	181P351070	C-ELEC - 10V 470M-M	
C2LB3	181P351070	C-ELEC - 10V 470M-M		C2V57	181P355060	C-ELEC - 50V 22M-M	
C2LB9	181P210040	C-ELEC - 6.3V 100M-M		C2V61	181P352040	C-ELEC - 16V 100M-M	
C2LC2	181P352030	C-ELEC - 16V 47M-M		C2W05	181P352030	C-ELEC - 16V 47M-M	
C2LC4	181P352030	C-ELEC - 16V 47M-M		C2W09	181P352030	C-ELEC - 16V 47M-M	
C2M03	181P352040	C-ELEC - 16V 100M-M		C2W14	181P352030	C-ELEC - 16V 47M-M	
C2M08	181P352030	C-ELEC - 16V 47M-M		C2Y09	181P352030	C-ELEC - 16V 47M-M	
C2M88	181P355010	C-ELEC - 50V 1M-M		C2Y50	181P352040	C-ELEC - 16V 100M-M	
C2M93	181P350050	C-ELEC - 6.3V 470M-M		C2Y51	181P352040	C-ELEC - 16V 100M-M	
C2MA4	181P352030	C-ELEC - 16V 47M-M		C3A14	181P355050	C-ELEC - 50V 10M-M	
C2MA6	181P352030	C-ELEC - 16V 47M-M		C3A20	181P355050	C-ELEC - 50V 10M-M	
C2MC4	181P352030	C-ELEC - 16V 47M-M		C3A21	181P355050	C-ELEC - 50V 10M-M	
C2MD6	181P210040	C-ELEC - 6.3V 100M-M		C3A28	181P355050	C-ELEC - 50V 10M-M	
C2N00	181P355000	C-ELEC - 50V 0.47M-M		C3A29	181P355050	C-ELEC - 50V 10M-M	
C2N01	181P355000	C-ELEC - 50V 0.47M-M		C3A32	181P355050	C-ELEC - 50V 10M-M	
C2N02	181P355000	C-ELEC - 50V 0.47M-M		C3A33	181P355050	C-ELEC - 50V 10M-M	
C2N05	181P355000	C-ELEC - 50V 0.47M-M		C3A34	181P355030	C-ELEC - 50V 3.3M-M	
C2N06	181P355000	C-ELEC - 50V 0.47M-M		C3A46	181P355050	C-ELEC - 50V 10M-M	
C2N07	181P355000	C-ELEC - 50V 0.47M-M		C3A49	181P355050	C-ELEC - 50V 10M-M	
				C3E01	181P354050	C-ELEC - 35V 47M-M	

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]
C3E02	181P355010	C-ELEC - 50V 1M-M	
C3E04	181P355010	C-ELEC - 50V 1M-M	
C3E06	181P355050	C-ELEC - 50V 10M-M	
C3E09	172P262050	C-M-POLY - 50V 0.1M-J	
C3E11	172P262050	C-M-POLY - 50V 0.1M-J	
C3E12	172P262050	C-M-POLY - 50V 0.1M-J	
C3E14	172P262050	C-M-POLY - 50V 0.1M-J	
C3K00	181P122070	C-ELEC-NP - 25V 10M-M	
C3K01	181P355050	C-ELEC - 50V 10M-M	
C3K04	181P122070	C-ELEC-NP - 25V 10M-M	
C3K05	181P355050	C-ELEC - 50V 10M-M	
C3K10	181P355010	C-ELEC - 50V 1M-M	
C3K11	181P355010	C-ELEC - 50V 1M-M	
C3K12	181P355010	C-ELEC - 50V 1M-M	
C3K13	181P355010	C-ELEC - 50V 1M-M	
C3K14	181P355010	C-ELEC - 50V 1M-M	
C3K15	181P355010	C-ELEC - 50V 1M-M	
C3K16	181P355010	C-ELEC - 50V 1M-M	
C3K17	181P355010	C-ELEC - 50V 1M-M	
C3K18	181P355010	C-ELEC - 50V 1M-M	
C3K19	181P355010	C-ELEC - 50V 1M-M	
C3K20	181P355010	C-ELEC - 50V 1M-M	
C3K21	181P355010	C-ELEC - 50V 1M-M	
C3K22	181P355010	C-ELEC - 50V 1M-M	
C3K23	181P355010	C-ELEC - 50V 1M-M	
C3K25	181P352030	C-ELEC - 16V 47M-M	
C4B01	172P261030	C-M-POLY - 50V 0.01M-J	
C4B02	181P186050	C-ELEC - 35V 1000M-M 105C	
C4B03	172P383030	C-M-POLY - 100V 0.47M-K	
C4B04	181P354060	C-ELEC - 35V 100M-M	
C4B06	172P330090	C-POLY - 50V 4700P-J	
C4B07	172P383030	C-M-POLY - 100V 0.47M-K	
C4B09	181P355060	C-ELEC - 50V 22M-M	
C4B10	181P354050	C-ELEC - 35V 47M-M	
C4B11	181P183050	C-ELEC - 25V 2200M-M 105C	
C5A01	181P354050	C-ELEC - 35V 47M-M	
C5A02	181P355050	C-ELEC - 50V 10M-M	
C5A03	142P020090	C-CER - B50V 1000P-K	
C5A05	172P262010	C-M-POLY - 50V 0.047M-J	
C5A10	181P191000	C-ELEC - 160V 22M-M/Q	
C5A15	181P354060	C-ELEC - 35V 100M-M	
C5A17	142P020090	C-CER - B50V 1000P-K	
C5A21	172P262050	C-M-POLY - 50V 0.1M-J	
C5A22	181P355050	C-ELEC - 50V 10M-M	
C5A23	181P355050	C-ELEC - 50V 10M-M	
C5A31	172P581050	C-M-PLA-PP - 1800VHP 3900P-J-OR-H	
C5A32	172P581050	C-M-PLA-PP - 1800VHP 3900P-J-OR-H	
C5A34	154P262050	C-CER - R2KV 560P-K	
C5A35	142P012010	C-CER - B500V 4700P-K	
C5A36	172P524010	C-M-POLY - 250V 2.2M-J	
C5A37	172P436010	C-M-PLA-PP - 250V 0.33M-J	
C5A38	172P436010	C-M-PLA-PP - 250V 0.33M-J	
C5A39	142P011030	C-CER - B500V 1000P-K	
C5A40	142P011000	C-CER - B500V 560P-K	
C5A42	181P352030	C-ELEC - 16V 47M-M	
C5A43	181P190050	C-ELEC - 160V 1M-M/Q	
C5A45	181P183040	C-ELEC - 25V 470M-M 105C	
C5A51	154P260010	C-CER - R1KV 220P-K	
C5A52	172P580090	C-M-PLA-PP - 1800V 2200P-J	
C5A55	172P088060	C-PLAST-PP - 630V 6800P-J	

Ref #	Part #	Part Name & Description	[#]
C5A56	181P355080	C-ELEC - 50V 47M-M	
C5A57	172P262070	C-M-POLY - 50V 0.15M-J	
C5A60	172P262050	C-M-POLY - 50V 0.1M-J	
C5A61	181P355040	C-ELEC - 50V 4.7M-M	
C5A64	181P352010	C-ELEC - 16V 22M-M	
C5A65	181P355050	C-ELEC - 50V 10M-M	
C5A68	181P123070	C-ELEC-NP - 50V 0.47M-M	
C5A70	172P264010	C-M-POLY - 50V 2.2M-J	
C5A71	172P262060	C-M-POLY - 50V 0.12M-J	
C5A72	181P355010	C-ELEC - 50V 1M-M	
C5A73	172P264010	C-M-POLY - 50V 2.2M-J	
C5H01	181P184040	C-ELEC - 35V 330M-M 105C	
C5H04	155P238090	C-CER - CH50V 270P-J	
C5H05	155P238090	C-CER - CH50V 270P-J	
C5H16	172P186030	C-PLAST-PP - 200V 0.01M-K	
C5H17	172P261030	C-M-POLY - 50V 0.01M-J	
C5H19	181P183010	C-ELEC - 25V 100M-M 105C	
C5H20	181P352040	C-ELEC - 16V 100M-M	
C5H21	181P780060	C-ELEC - 160V 10M-M 105C	
C5H22	155P112090	C-CER - 500V 56P-J	
C5K03	142P020050	C-CER - B50V 470P-K	
C5K05	181P354050	C-ELEC - 35V 47M-M	
C5K12	181P352040	C-ELEC - 16V 100M-M	
C5K14	181P354050	C-ELEC - 35V 47M-M	
C6B01	154P400040	C-CER - B1KV 680P-K	
C6B02	181P195050	C-ELEC - 350V 10M-M	
C6B03	155P232030	C-CER - CH50V 33P-J	
C6B05	181P352030	C-ELEC - 16V 47M-M	
C6B08	142P020030	C-CER - B50V 330P-K	
C6B10	142P012050	C-CER - B500V 0.01M-K	
C6B11	154P264000	C-CER - R3.15KV 150P-K	
C6B12	155P239040	C-CER - CH50V 100P-J	
C6B13	155P231090	C-CER - CH50V 22P-J	
C6B14	154P405000	C-CER - B3KV 1000P-K	
C6B50	154P405000	C-CER - B3KV 1000P-K	
C6G01	154P400040	C-CER - B1KV 680P-K	
C6G02	181P195050	C-ELEC - 350V 10M-M	
C6G03	155P232030	C-CER - CH50V 33P-J	
C6G05	181P352030	C-ELEC - 16V 47M-M	
C6G10	142P012050	C-CER - B500V 0.01M-K	
C6G11	154P264000	C-CER - R3.15KV 150P-K	
C6G12	155P239040	C-CER - CH50V 100P-J	
C6G13	155P231090	C-CER - CH50V 22P-J	
C6G14	154P405000	C-CER - B3KV 1000P-K	
C6G50	154P405000	C-CER - B3KV 1000P-K	
C6K44	181P530030	C-E-BP-CH - 6.3V 47M-M BP 105C	
C6K51	181P530030	C-E-BP-CH - 6.3V 47M-M BP 105C	
C6K58	181P530030	C-E-BP-CH - 6.3V 47M-M BP 105C	
C6R01	154P400040	C-CER - B1KV 680P-K	
C6R02	181P195050	C-ELEC - 350V 10M-M	
C6R03	155P232030	C-CER - CH50V 33P-J	
C6R05	181P352030	C-ELEC - 16V 47M-M	
C6R10	142P012050	C-CER - B500V 0.01M-K	
C6R11	154P264000	C-CER - R3.15KV 150P-K	
C6R12	155P239040	C-CER - CH50V 100P-J	
C6R13	155P232050	C-CER - CH50V 39P-J	
C6R14	154P405000	C-CER - B3KV 1000P-K	
C6R50	154P405000	C-CER - B3KV 1000P-K	
C6Y50	181P352040	C-ELEC - 16V 100M-M	
C6Y55	181P352020	C-ELEC - 16V 33M-M	

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]
C6Y56	181P352070	C-ELEC - 16V 470M-M	
C6Y59	181P352030	C-ELEC - 16V 47M-M	
C6Y60	181P182010	C-ELEC - 04W 16V 33	
C7A03	181P355010	C-ELEC - 50V 1M-M	
C7A16	181P352030	C-ELEC - 16V 47M-M	
C7A62	181P352030	C-ELEC - 16V 47M-M	
C7A99	181P352030	C-ELEC - 16V 47M-M	
C7C30	181P354040	C-ELEC - 50V 10M-M	
C7K01	181P352030	C-ELEC - 16V 47M-M	
C7V02	181P352030	C-ELEC - 16V 47M-M	
C7V13	181P352030	C-ELEC - 16V 47M-M	
C8C03	181P358000	C-ELEC - 35V 1000M-M	
C8C05	181P358000	C-ELEC - 35V 1000M-M	
C8C18	181P358000	C-ELEC - 35V 1000M-M	
C8C20	181P358000	C-ELEC - 35V 1000M-M	
C8C43	142P020080	C-CER - B50V 820P-K	
C8C44	142P020080	C-CER - B50V 820P-K	
C8C45	142P020080	C-CER - B50V 820P-K	
C8C46	142P020080	C-CER - B50V 820P-K	
C8C47	142P020080	C-CER - B50V 820P-K	
C8C48	142P020080	C-CER - B50V 820P-K	
C8C49	155P231050	C-CER - CH50V 15P-J	
C8C50	155P231050	C-CER - CH50V 15P-J	
C8D16	181P352030	C-ELEC - 16V 47M-M	
C8D19	181P352030	C-ELEC - 16V 47M-M	
C8D20	181P352030	C-ELEC - 16V 47M-M	
C8D21	181P352030	C-ELEC - 16V 47M-M	
C8D22	181P352030	C-ELEC - 16V 47M-M	
C8D29	181P355010	C-ELEC - 50V 1M-M	
C8D30	181P352030	C-ELEC - 16V 47M-M	
C8D31	181P352030	C-ELEC - 16V 47M-M	
C8D33	181P352030	C-ELEC - 16V 47M-M	
C8D39	181P352030	C-ELEC - 16V 47M-M	
C8D40	181P352030	C-ELEC - 16V 47M-M	
C8E01	181P352030	C-ELEC - 16V 47M-M	
C8E03	181P352030	C-ELEC - 16V 47M-M	
C8E05	181P352030	C-ELEC - 16V 47M-M	
C8E07	181P352030	C-ELEC - 16V 47M-M	
C8E09	181P352030	C-ELEC - 16V 47M-M	
C8E12	181P352030	C-ELEC - 16V 47M-M	
C8E14	181P352030	C-ELEC - 16V 47M-M	
C8E16	181P352030	C-ELEC - 16V 47M-M	
C8G00	181P352030	C-ELEC - 16V 47M-M	
C8G03	181P352020	C-ELEC - 16V 33M-M	
C8G05	181P352030	C-ELEC - 16V 47M-M	
C8G06	181P352030	C-ELEC - 16V 47M-M	
C9A05	189P185070	C-CER - 250VAC 1000P-M	
C9A06	189P185070	C-CER - 250VAC 1000P-M	
C9A07	189P153040	C-M-POLY - 250VAC 0.1M-M	
C9A08	189P185090	C-CER - 250VAC 2200P-M	
C9A09	189P185090	C-CER - 250VAC 2200P-M	
C9A10	189P185090	C-CER - 250VAC 2200P-M	
C9A11	189P185090	C-CER - 250VAC 2200P-M	
C9A13	189P152070	C-M-POLY - 250VAC 0.01M-M	
C9A14	189P152070	C-M-POLY - 250VAC 0.01M-M	
C9A15	172P262050	C-M-POLY - 50V 0.1M-J	
C9A16	189P185070	C-CER - 250VAC 1000P-M	
C9A17	189P185070	C-CER - 250VAC 1000P-M	
C9A27	154P270050	C-CER - SL1KV 22P-J	
C9A28	172P262050	C-M-POLY - 50V 0.1M-J	

Ref #	Part #	Part Name & Description	[#]
C9A29	142P010090	C-CER - B500V 470P-K	
C9A34	181P352040	C-ELEC - 16V 100M-M	
C9A39	181P355000	C-ELEC - 50V 0.47M-M	
C9A50	142P020050	C-CER - B50V 470P-K	
C9A52	154P400070	C-CER - B1KV 2200P-K RA	
C9A53	185D122050	C-ELEC - H200V 1000M-M 105C	
C9A54	154P260080	C-CER - R1KV 3300P-K	
C9A55	172P339070	C-POLY - 50V 560P-J	
C9A56	181P355080	C-ELEC - 50V 47M-M	
C9A57	142P010090	C-CER - B500V 470P-K	
C9A58	185D163020	C-ELEC - H50V 4700M-M 105C	
C9A59	185D122050	C-ELEC - H200V 1000M-M 105C	
C9A60	154P400030	C-CER - B1KV 470P-K	
C9A61	142P010090	C-CER - B500V 470P-K	
C9A62	189D183010	C-ELEC - 400AXW100M	
C9A63	185D063030	C-ELEC - H180V 820M-M 105C	
C9A64	181P780070	C-ELEC - 160V 22M-M 105C	
C9A65	181P194000	C-ELEC - 250V 10M-M/Q	
C9A66	142P012050	C-CER - B500V 0.01M-K	
C9A68	142P010090	C-CER - B500V 470P-K	
C9A69	181P736070	C-ELEC - 35V 330M-M 105C	
C9A70	181P736070	C-ELEC - 35V 330M-M 105C	
C9A71	181P736070	C-ELEC - 35V 330M-M 105C	
C			
C9C32	181P352030	C-ELEC - 16V 47M-M	
C9C35	181P212060	C-ELEC - 16V 47M-M	
C9C41	181P352030	C-ELEC - 16V 47M-M	
C9C42	181P210040	C-ELEC - 6.3V 100M-M	
C9C51	181P350080	C-ELEC - 6.3V 3300M-M	
C9D00	189P153040	C-M-POLY - 250VAC 0.1M-M	
C9D01	189P153040	C-M-POLY - 250VAC 0.1M-M	
CF2L00	299P128010	CERAMIC-OSC - CSB500F2	
CF2LA0	299P128010	CERAMIC-OSC - CSB500F2	
CF2V01	299P259010	CERAMIC-OSC - 2.69MHZ	
CF7A01	299P261010	CERAMIC-OSC - 27.000 MHZ	
SWITCHES			
S7L21	432P089010	SW-KEY-BOARD - PUSH SWITCH	
S7L22	432P089010	SW-KEY-BOARD - PUSH SWITCH	
S7L23	432P089010	SW-KEY-BOARD - PUSH SWITCH	
S7L24	432P089010	SW-KEY-BOARD - PUSH SWITCH	
S7L25	432P089010	SW-KEY-BOARD - PUSH SWITCH	
S7L26	432P089010	SW-KEY-BOARD - PUSH SWITCH	
S7L27	432P089010	SW-KEY-BOARD - PUSH SWITCH	
S7L28	432P089010	SW-KEY-BOARD - PUSH SWITCH	
S7L29	432P089010	SW-KEY-BOARD - PUSH SWITCH	
MISCELLANEOUS			
	246C351040	AC-POWER-CORD	
	292C955010	CLIP-RADIATOR	
	305P702020	RF-SW - YAA41-0126G	
	330P288010	DEFL-YOKE - VK20 R/G/B	
	411D033010	CORE-FERRITE	
	411D044010	CORE-FERRITE	
	449C141030	SOCKET-CRT	
	453B036040	CAP-ANODE - GREEN	
	453B036050	CAP-ANODE - BLUE	
	453B036060	CAP-ANODE - RED	
	480P053010	SPEAKER - 5 INCH	

MODELS: WT-42311 / WT-A42

[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]
	490P220030	LENS - ALL COLORS	
	494D006010	MIRROR - 42"	
	750A436010	COVER-TERMINAL	
	750A437010	TERMINAL BOARD	
AG6B01	224D019090	AIR-GAP - 1.5+-0.5KV S.LEAD	
AG6G01	224D019090	AIR-GAP - 1.5+-0.5KV S.LEAD	
AG6R01	224D019090	AIR-GAP - 1.5+-0.5KV S.LEAD	
DL6Y50	337P134010	DELAY-LINE	
F5A00	283P043060	FUSE - LF251 3A	
F9A02	283P044020	FUSE - LF251 10A	
F9A03	283P043090	FUSE - LF251 5A	
F9A04	283P044020	FUSE - LF251 10A	
F9A05	283P043090	FUSE - LF251 5A	
F9B01	283P043060	FUSE - LF251 3A	
F9D00	283D131040	FUSE - S10A 125A	
K9A50	287P100010	RELAY-POWER - DG9D1-0(M)-II-0.25W	
PC9A21	268P058020	PHOTO-COUPLER - ON3131-R/ON3161-R	
PC9A50	268P106010	PHOTO-COUPLER - CNZ3133	
PJ2J00	440C407010	PIN-JACK-BOARD-6P	
PJ2J04	440C409010	PIN-JACK-BOARD-2P	
PJ2J05	440C408010	PIN-JACK-BOARD-3P	
PJ2J11	440C412010	PIN-JACK-BOARD-3P	
TU1A01	295P516010	TUNER-TV - 115-V-F045AP	
TU1B01	295P516020	TUNER-TV - 115-V-F025AP	
X2L00	285P426010	QUARTZ-CRYST - 3.579 MHZ	
X2LA0	285P426010	QUARTZ-CRYST - 3.579 MHZ	
X2M30	285P426040	QUARTZ-CRYST - 20.000 MHZ	
X2N00	285P426020	QUARTZ-CRYST - 4.000 MHZ	
X2S00	285P426020	QUARTZ-CRYST - 4.000 MHZ	
X3A01	285P413010	QUARTZ-CRYST - 18.43 MHZ	
X7A13	285P426030	QUARTZ-CRYST - 10.000 MHZ	
X7H00	285P335050	QUARTZ-CRYST - 80.000MHZ	
Z7K01	939P617010	UNIT-PREAMP - GP1U283Q	


Ref #	Part #	Part Name & Description	[#]
PRINTED CIRCUIT BOARDS			
	930B888001	ASSY-PWB-MAIN	
	930B889001	ASSY-PWB-POWER	
	930B890001	ASSY-PWB-SIGNAL	2
	930B890002	ASSY-PWB-SIGNAL	1
	930B891001	ASSY-PWB-TERMINAL	
	935C996001	ASSY-PWB-DOUBLER	
	935D660001	ASSY-PWB-PREAMP	
	935D661001	ASSY-PWB-UNI	
	935D662001	ASSY-PWB-CONTROL	
	935D663001	ASSY-PWB-DBF	
COSMETIC PARTS			
	598D417010	PLATE-RF SWITCH - COLD ROLL	
	750A432010	CABINET	
	750A433010	BACK-COVER	
	750A434010	FRONT-MASK	
	750A435010	GRILL-SP - PS	
	871D362010	TC INSTRUCTION	
ACCESSORIES			
	290P111010	TRANSMITTER REMOTE - V20	
	I/QR WT42311	QR-GUIDE	2
	I/QR WTA42	QR-GUIDE	1
	I/B WT42311	IB - OWNERS GUIDE	2
	I/B WTA42	IB - OWNERS GUIDE	1

MODELS: WS-42311 / WT-A42


[[#] Model Legend: (1) WT-A42, (2) WT-42311

Ref #	Part #	Part Name & Description	[#]
SCREEN ASSEMBLY PARTS			
(4)	750A434010	FRONT-MASK	
(1)	491P136010	SCREEN-LENTICULAR - LENTI-4	
(2)	491P137010	LENS-FRESNEL - FRESNEL-42W-	
(6)	596C569010	BRACKET,SCREEN CORNER	
(8)	598D300010	BRACKET,SCREEN SIDE	


Ref #	Part #	Part Name & Description	[#]
(5)	641B942010	HOLDER-SCREEN-T - .	
(7)	641B943010	HOLDER-SCREEN-S	
(3)	760D628070	DIAMOND SHIELD - 42"	2
(3)	760D639050	DIAMOND SHIELD - 42"	1

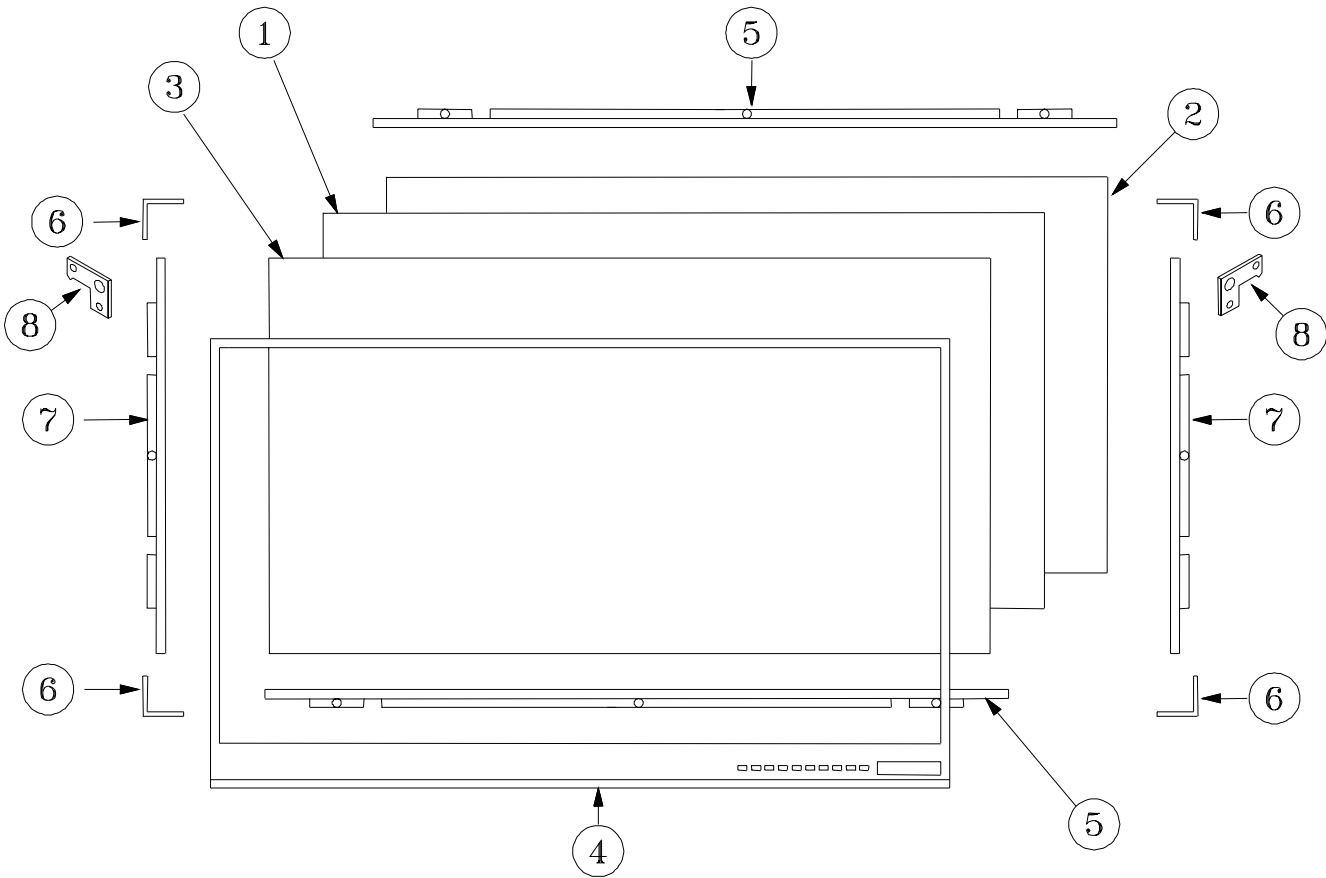


POWER SUPPLY

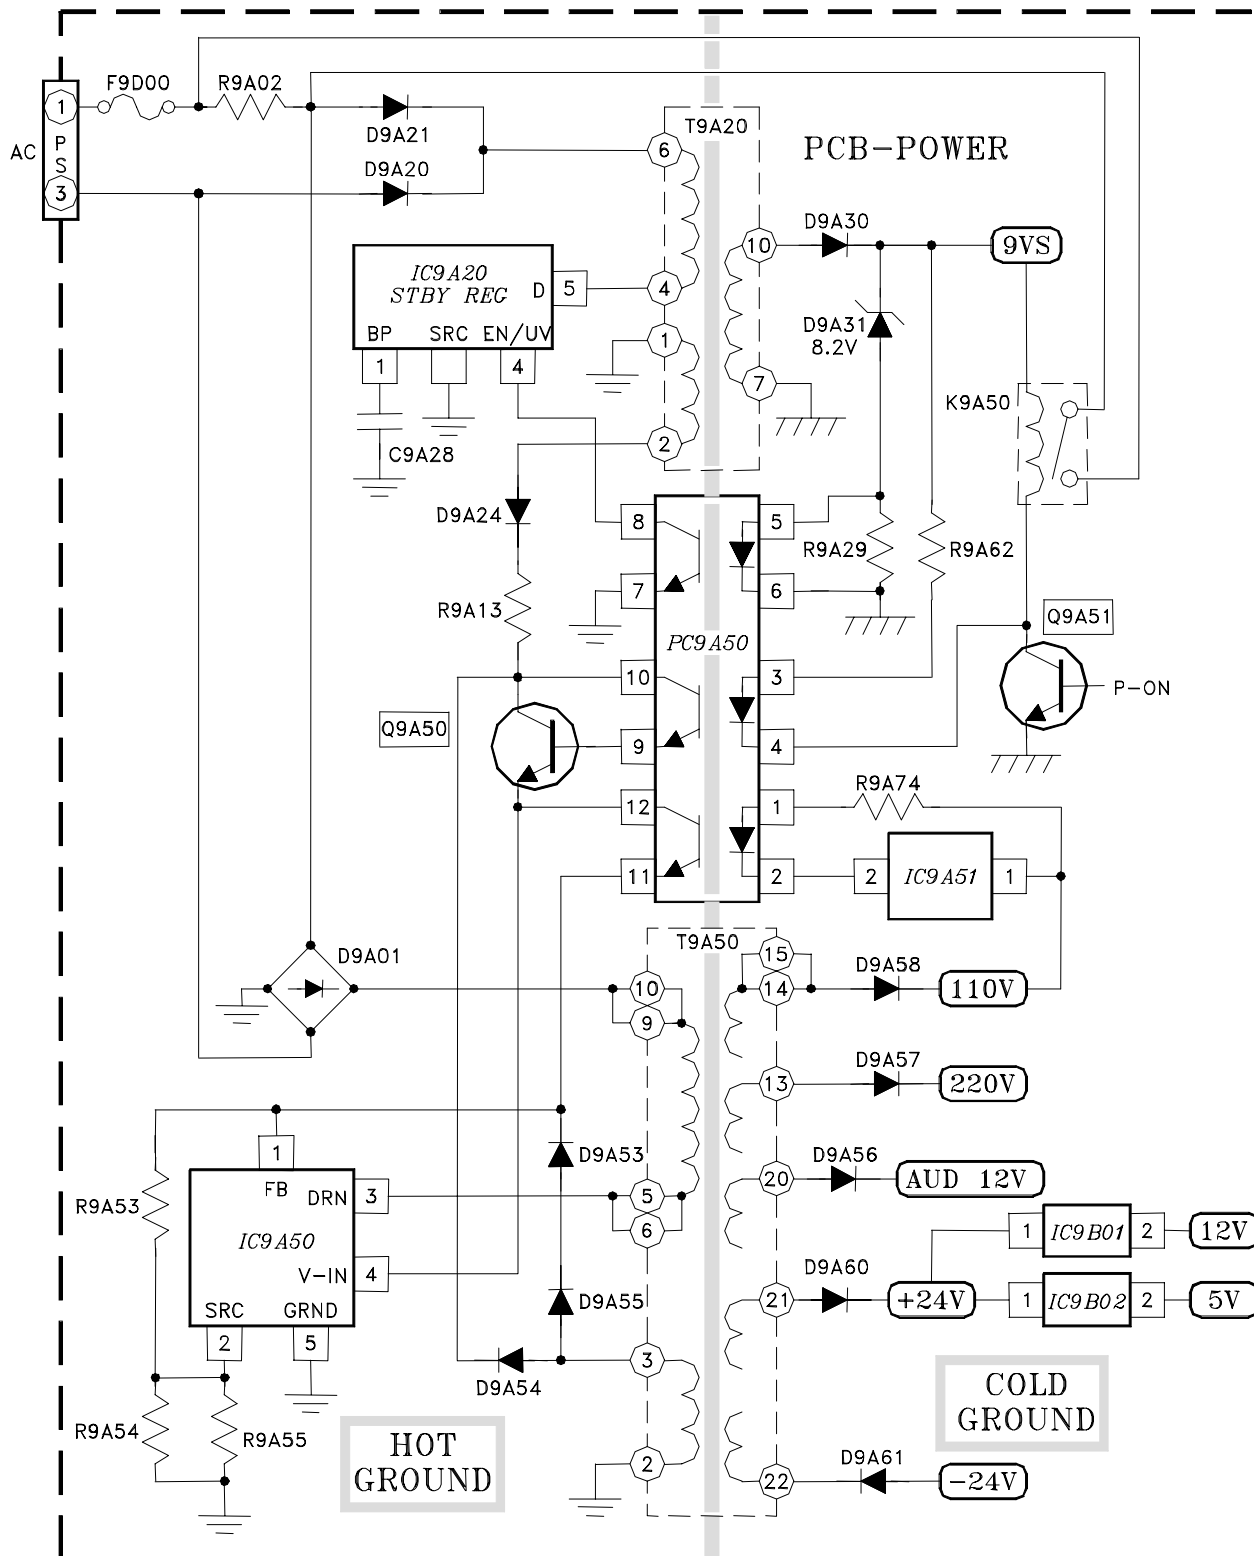


VIDEO / COLOR

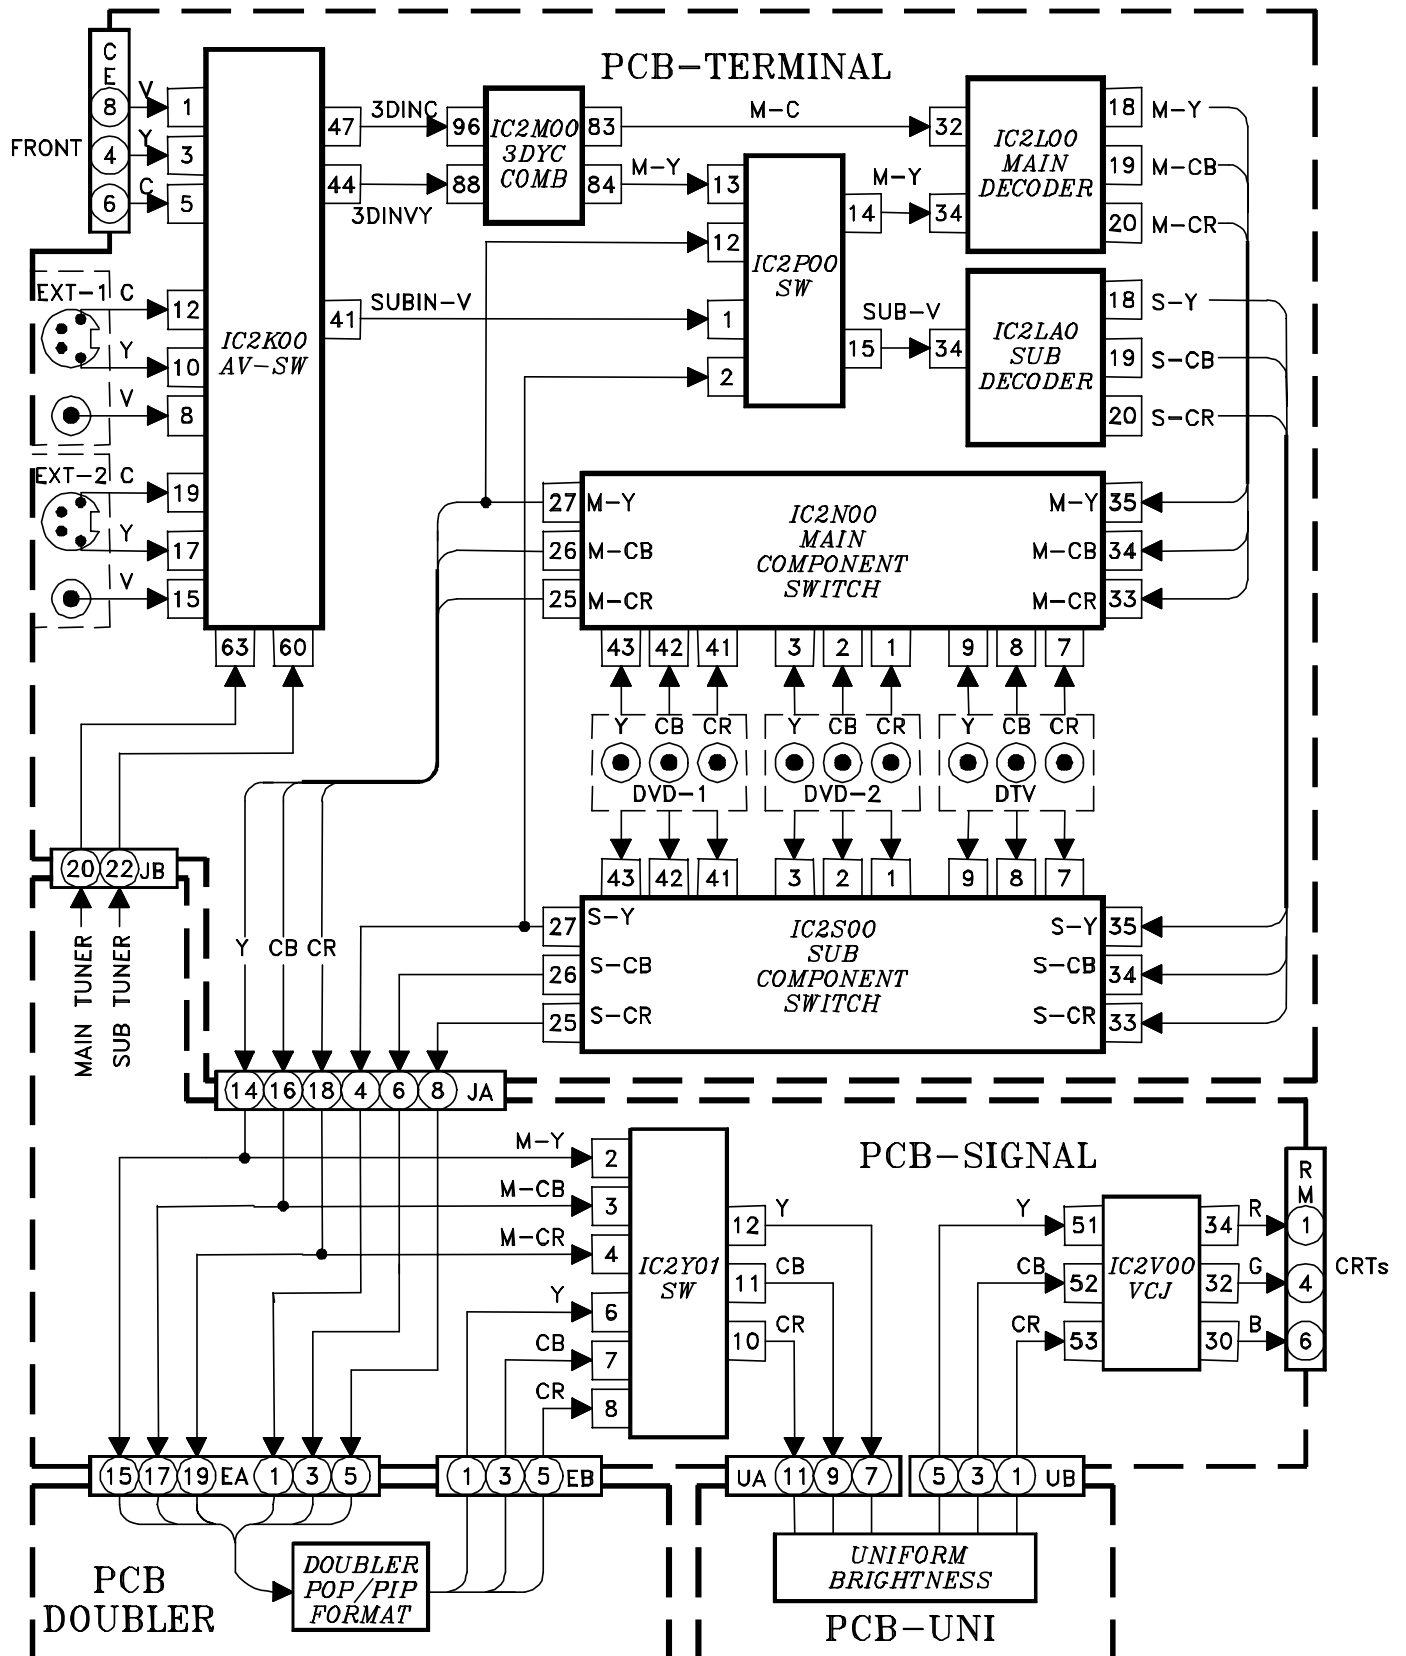


SYNC SIGNAL PATH

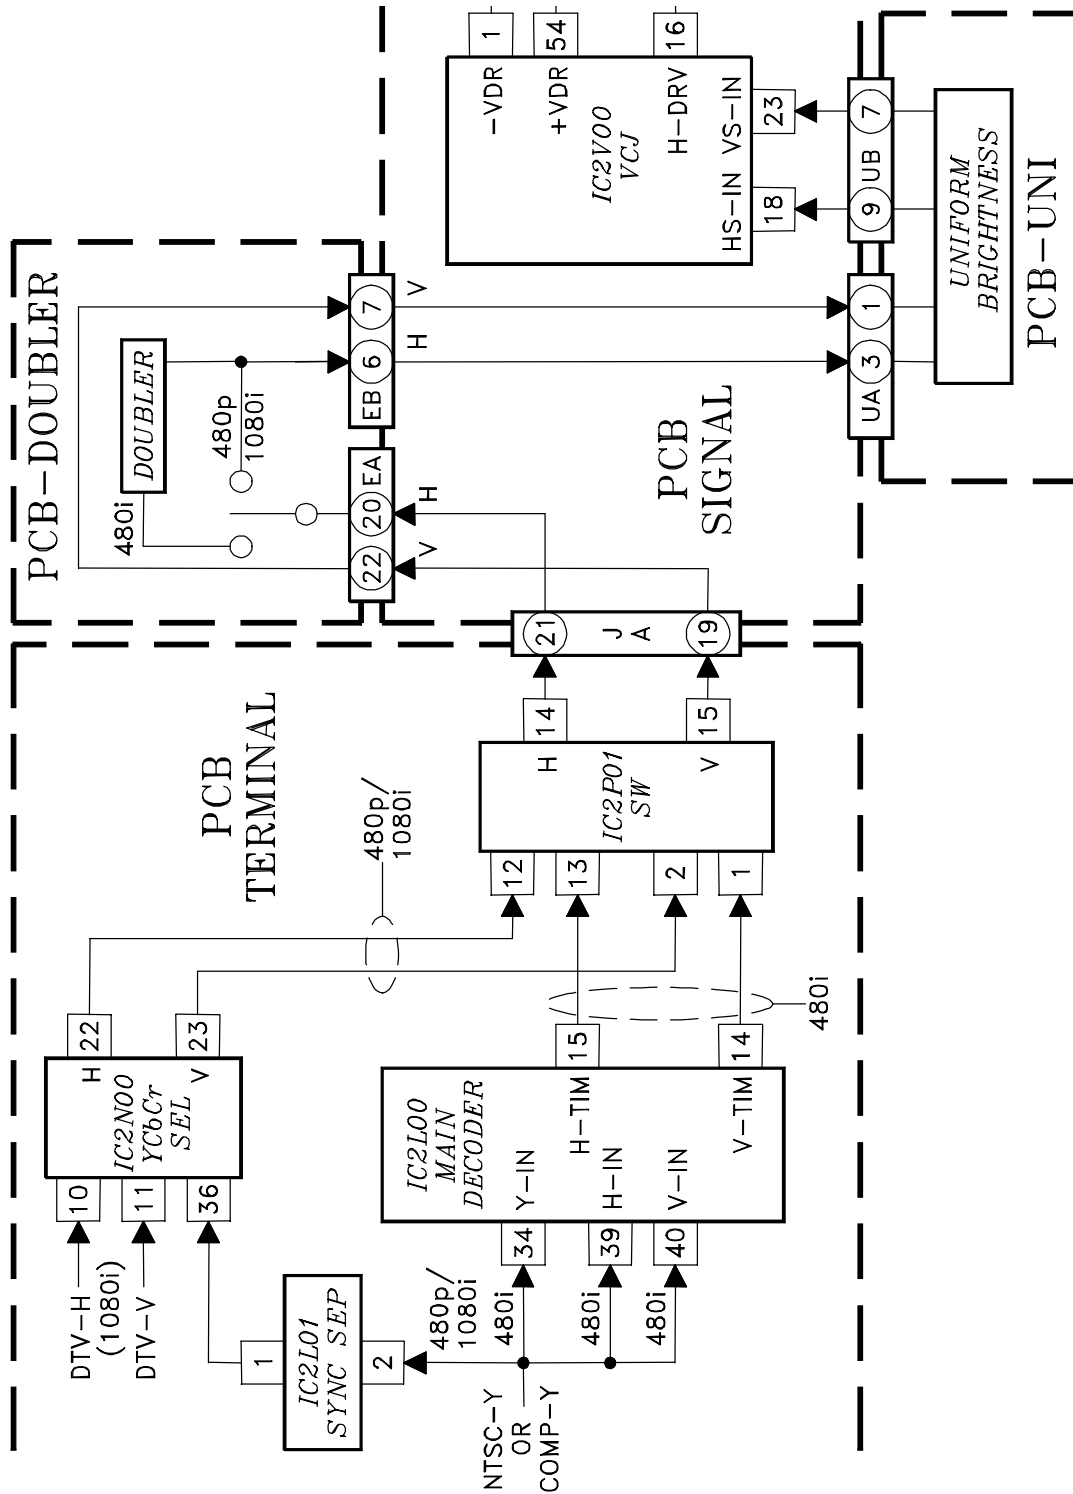


DEFLECTION / HV

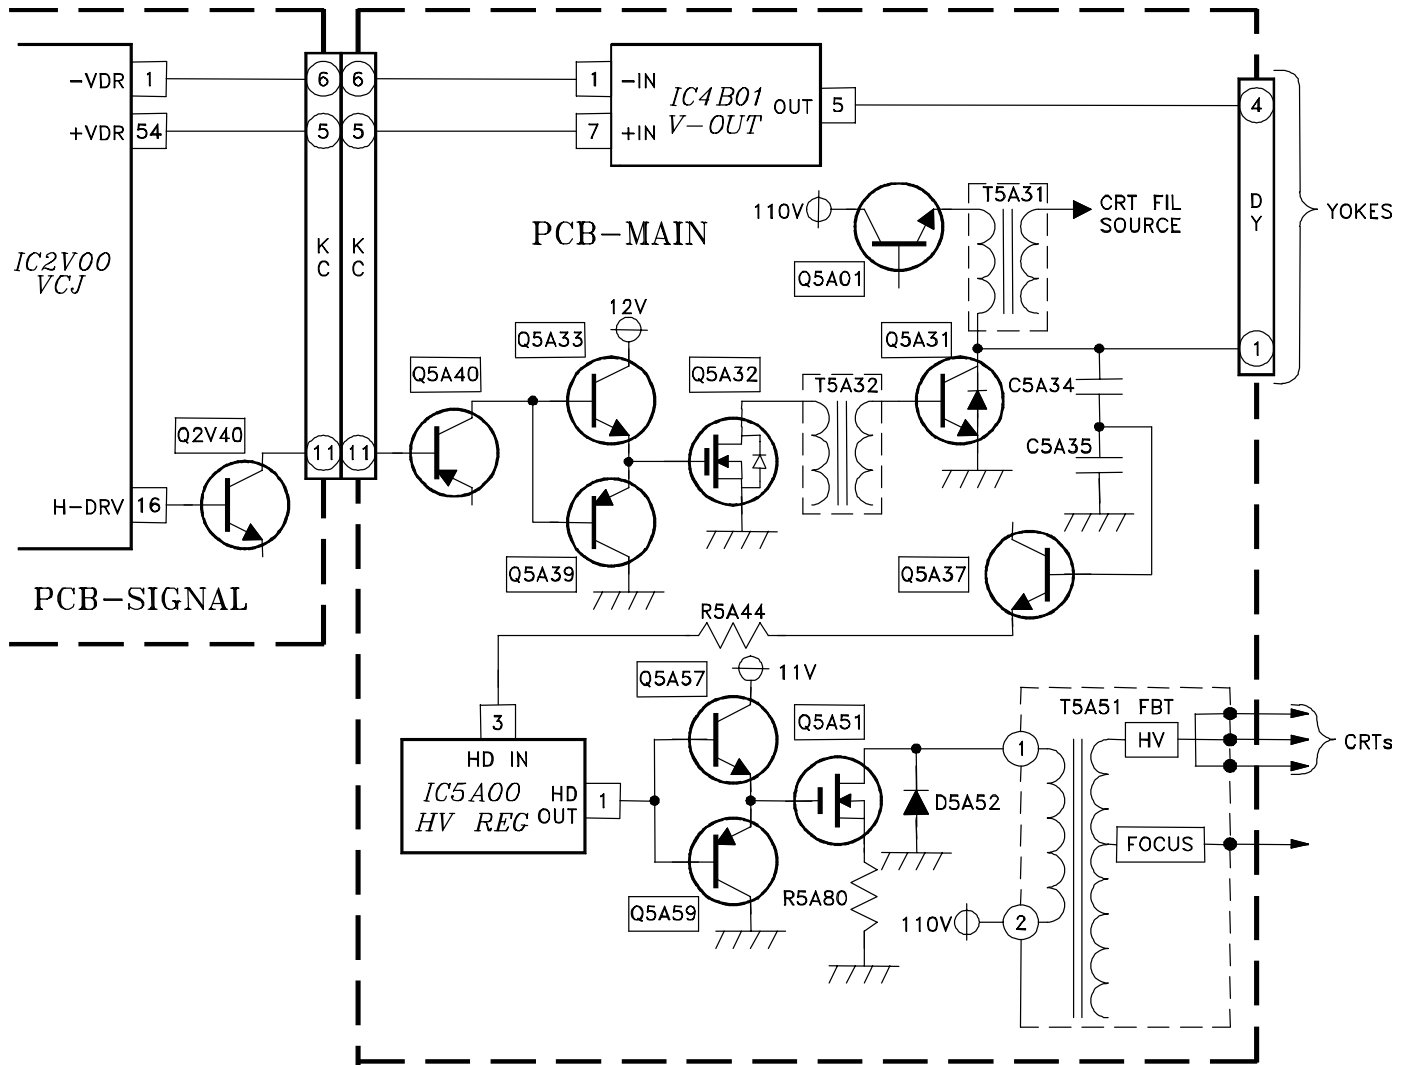


HV REGULATION

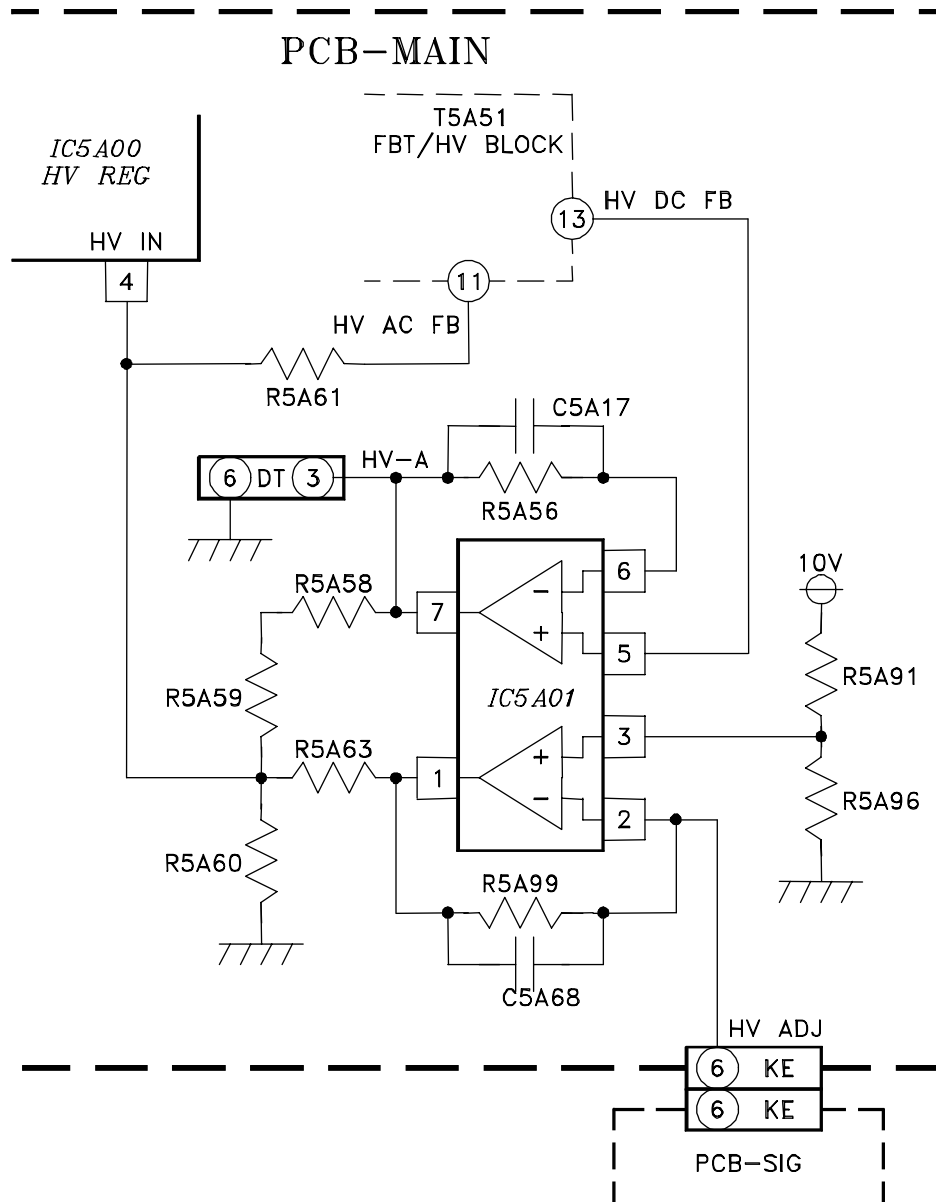

X-RAY PROTECT

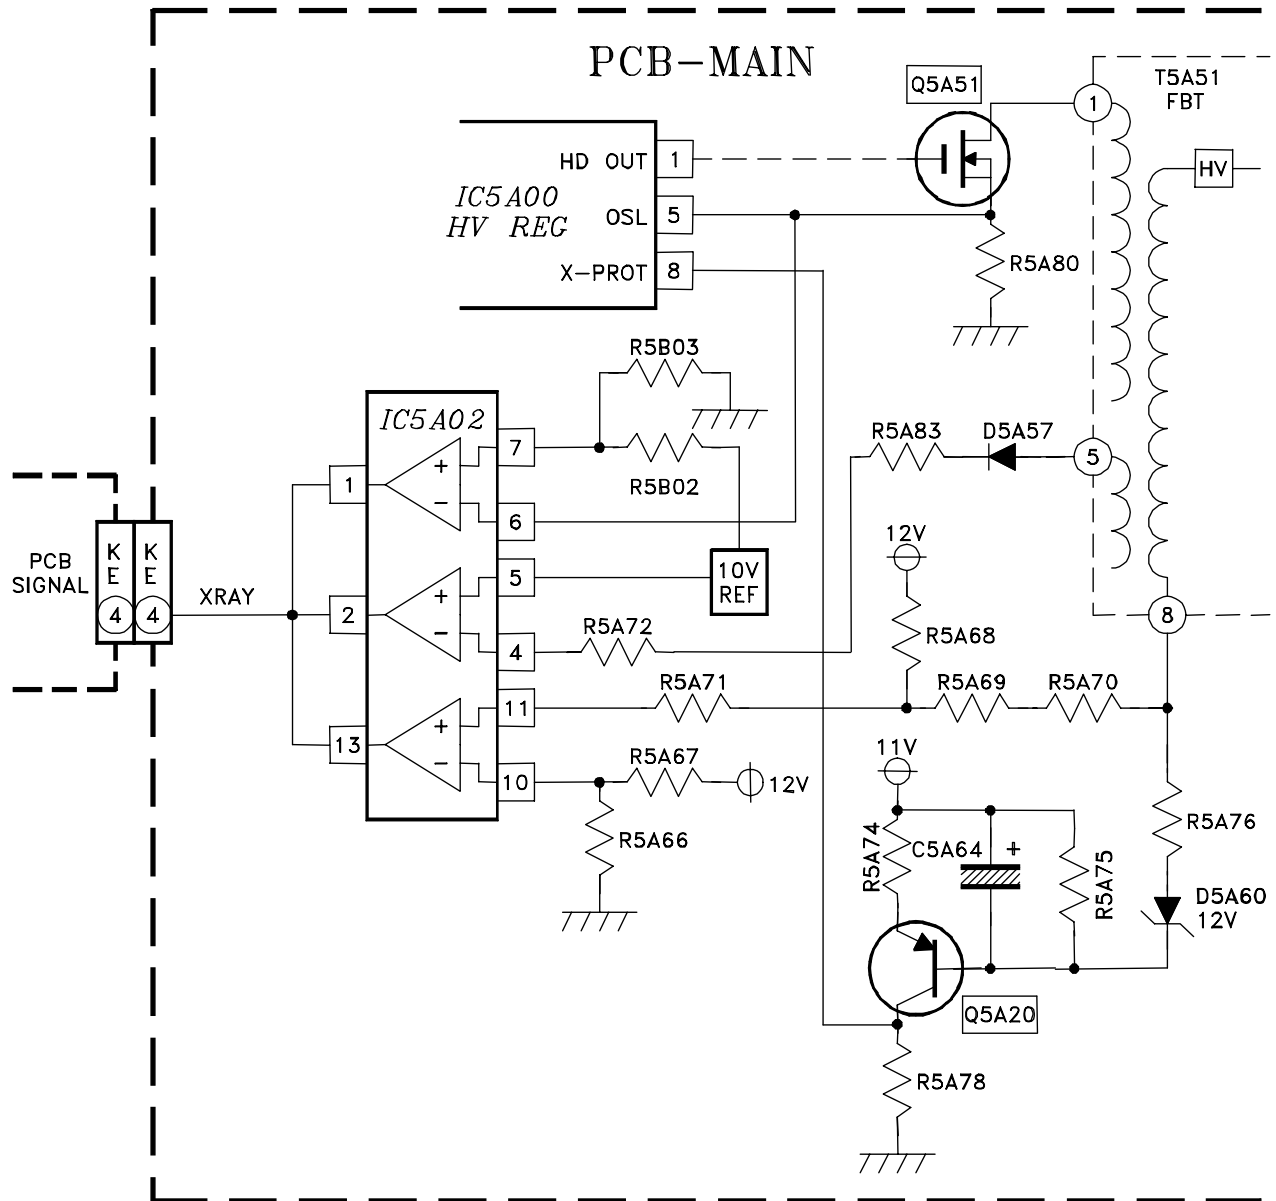

SOUND SIGNAL PATH

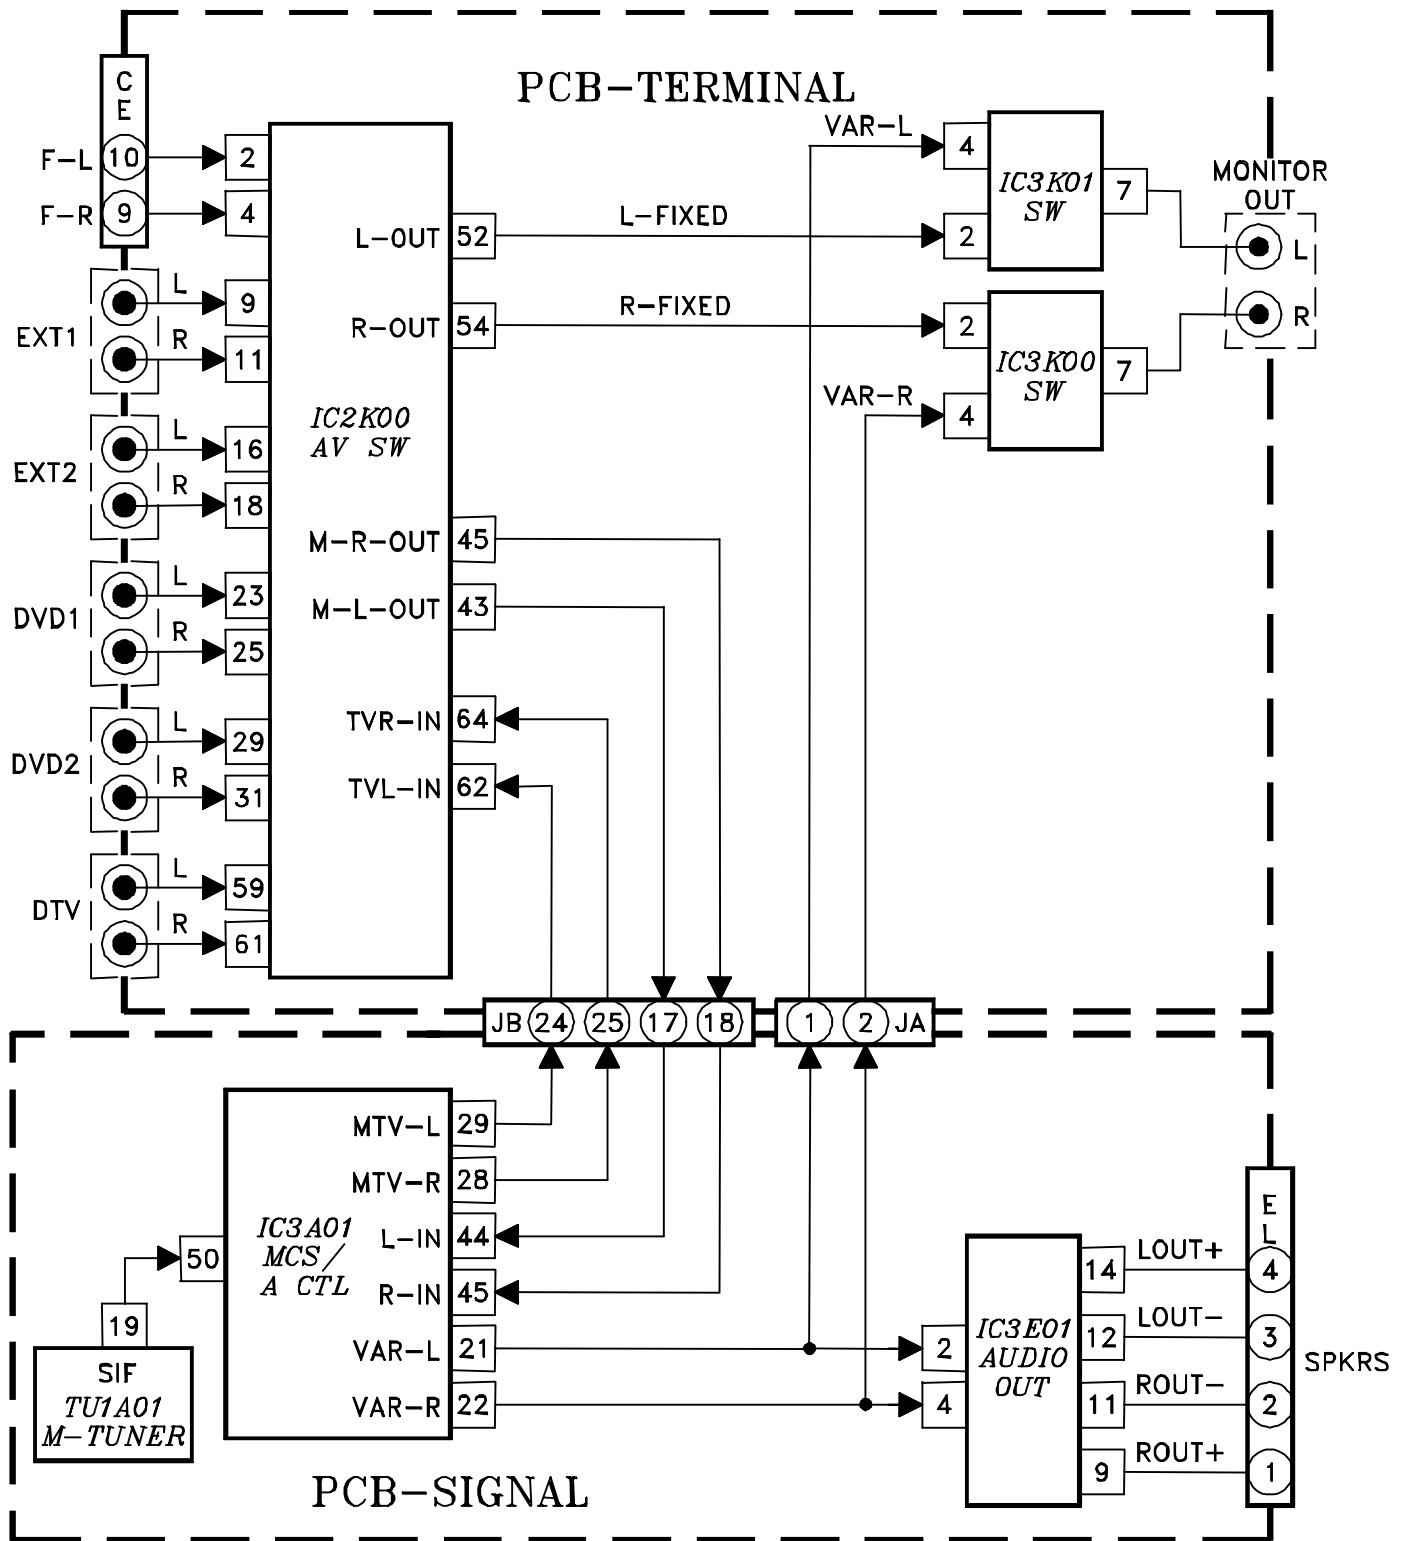



CONTROL CIRCUITRY

